



**LIGHT^{MY}
BRICKS**



**LEGO[®] HOLIDAY MAIN STREET
#10308 LIGHT KIT
INSTALLATION GUIDE**

Light My Bricks



LEGO® HOLIDAY MAIN STREET 10308 INSTALLATION GUIDE

Hi There!

We're here to help you get started on the LEGO®

Holiday Main Street 10308 Light Kit.

This PDF details the instructions for the LED light kit only.

If you run into any issues, please refer to the troubleshooting section towards the end of this guide.

Have fun and enjoy!

INSTALLATION GUIDE





PACKAGE CONTENTS:



- 1x Flashing Red 30cm Bit Light
- 8x Flashing White 15cm Bit Light *
- 4x Yellow 30cm Bit Light *
- 2x White 15cm Bit Light
- 1x Orange 30cm Large Bit Light
- 2x Warm White 30cm Large Bit Light
- 3x Warm White Strip Light
- 1x Multi Colour Strip Light



- 4x 6-Port Expansion Board
- 2x 8-Port Expansion Board *
- 1x Flicker Effects Board



- 3x 5cm Connecting Cable
- 1x 15cm Connecting Cable
- 1x 30cm Connecting Cable
- 5x 50cm Connecting Cable *



- 1x USB Power Cable
(Power Source not Included)

+ 10x Adhesive Square

ASSORTED BRICKS:

 
 
- 2x Plate 1x6 - Any Colour
- 2x Plate 1x2 MW Stud Jumper - Black
- 2x Tile 1x1 W Clip Round Edges - Black
- 2x Plate 1x1 Mod Rounded w Handle - Black
- 2x Round Plate 1x1 Open Stud - Black
- 3x Round Plate 1x1 - Trans Red
- 2x Round Plate 1x1 - Trans Clear
- 1x Round Plate 1x1 - Trans Pink
- 1x Round Plate 1x1 - Trans Purple
- 1x Round Plate 1x1 - Trans Dark Blue
- 1x Round Plate 1x1 - Trans Light Green
- 1x Round Plate 1x1 - Trans Orange

* Indicates components which include spares

Contents

Before You Begin	5
Blueprint	10
Instructions	11
Final Product	53
Troubleshooting	54
Contact	58


Before You Begin

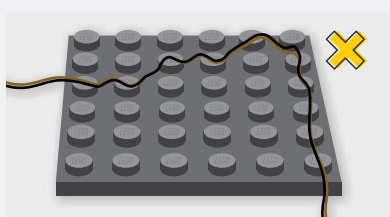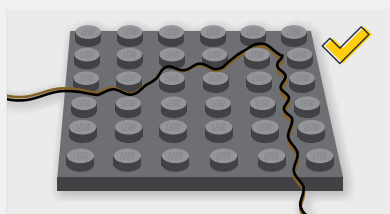

Laying cables in between and underneath bricks

Cables can fit in between and underneath LEGO® bricks, plates, and tiles providing they are laid correctly between the LEGO® studs. Do NOT forcefully join LEGO® together around cables; instead ensure they are laying comfortably in between each stud.

 CAUTION: Forcing LEGO® to connect over a cable can result in damaging the cable and light.

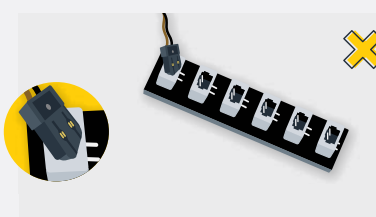


Connecting Cable Connectors To Expansion Boards

Take extra care when inserting connectors to ports of Expansion Boards. Connectors can be inserted only one way. With the expansion board facing up, look for the soldered “=” symbol on the left side of the port. The connector side with the wires exposed should be facing toward the soldered “=” symbol as you insert into the port. If a plug won’t fit easily into a port connector, do not force it.

Incorrectly inserting the connector can result in bent pins inside the port or possible overheating of the expansion board when connected.

 Before You Begin

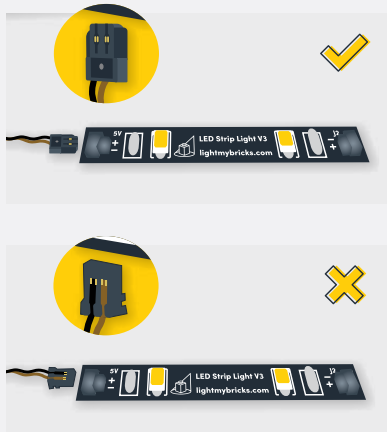

Connecting Cable Connectors To Strip Lights

Take extra care when inserting connectors to ports on the Strip Lights. Connectors can be inserted only one way. With the Strip Light facing up, ensure the side of the connector with the wires exposed is facing down. If a plug won't fit easily into a port connector, don't force it. Doing so will damage the plug and the connector.



 
Connecting Micro Cable Connectors To Micro Expansion Board Ports

Take extra care when inserting the micro connectors to micro ports of Micro Expansion Boards. Connecting Micro Bit Lights to Micro Expansion Boards is similar to connecting lights and cables to Strip Lights. With the expansion board facing up, ensure the side of the connector with the wires exposed is facing down. If a plug won't fit easily into a port connector, do not force it. Use your fingernail to push the plastic part of the connector to the micro port.

Before You Begin

Installing Bit Lights Under Lego® Bricks And Plates

When installing Bit Lights under LEGO® pieces, ensure they are placed the correct way up (Yellow LED component exposed). You can either place them directly on top of LEGO® studs or in between.

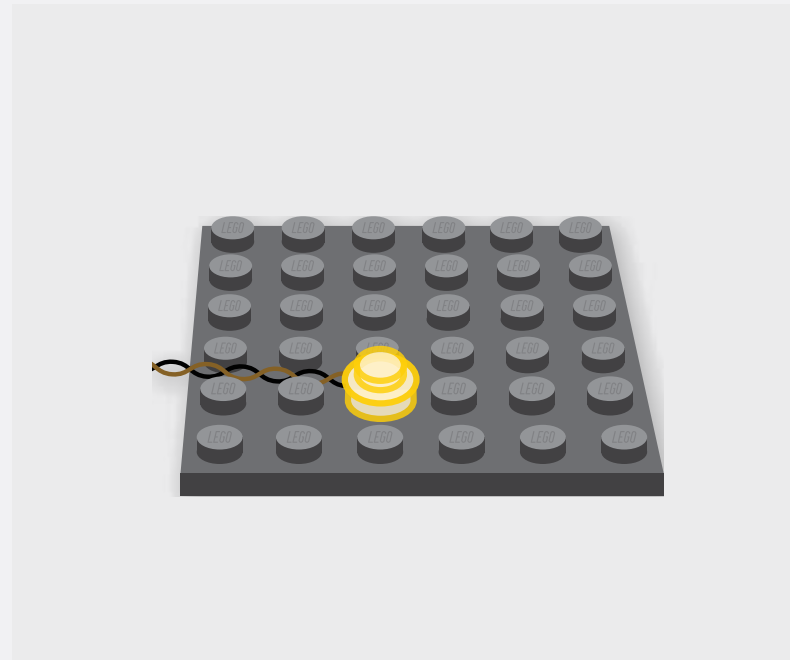

Before You Begin

The Symbols Used In This Guide

When going through the following guide you will come across symbols and formats that will assist with the installation of your light kit. Take notice of them as each has a specific purpose.

Light Kit Component

This is the most important image format as it indicates which part to use from the Light Kit. Make sure you pay close attention to which part is shown.

White 30cm Bit Light



Connect

Used when you need to connect a LEGO piece or LMB component.



Disconnect

Used when you need to remove a LEGO piece/ section or LMB component.



Directional

Used to show where to route cables, place components, or move them.



Bend/Pivot

Used when a component needs to be bent, or part folded or pivoted.



Turn/ Flip

Will be found in the top left corner when the set needs to be rotated or flipped.



Twist/ Braid

Seen when a set of cables need to be grouped and twisted together.



Power On Test

Found at the end of a major step to test the lights. Will be located in the top left corner.



Note

Notes will be found alongside the instruction photos and explain what to do.



Before You Begin

Repeat Step

Repeat the previous step eg. Make a spotlight, then make a second spotlight.

x2

Connect Focus

Used to highlight a hard to see area where a component is being connected.



Disconnect Focus

Used to highlight a hard to see area where a component is being disconnected.



General Focus

Used to highlight a hard to see area where a component needs to be acted on.



General Note


This is a sample note that is used anywhere in this guide. It will explain a difficult section where photos are hard to illustrate or easily confused.

Connect Note


The green coloured note is used when the topic focuses on a component being connected, like the shown Power Bank.


Disconnect Note

The red coloured note is used when the topic focuses on a component being disconnected or like here, the removed pieces.


NOTE


Take the 5cm Connecting Cable from the 4-Port Micro Expansion Board and route it into the "IN" port of the Flicker Effects Board

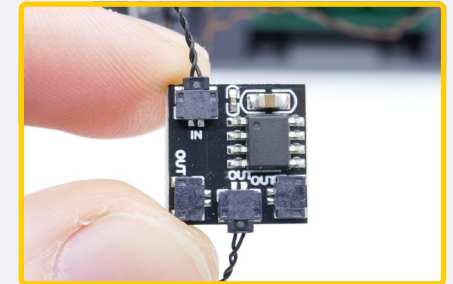



NOTE

Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)





NOTE

You should have these parts left over that were removed from the LEGO set

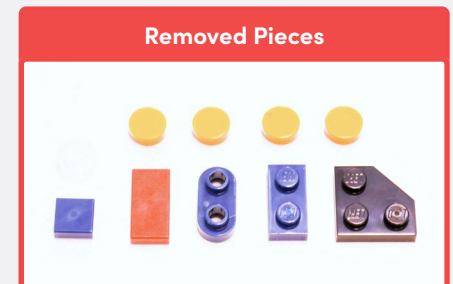



BLUEPRINT

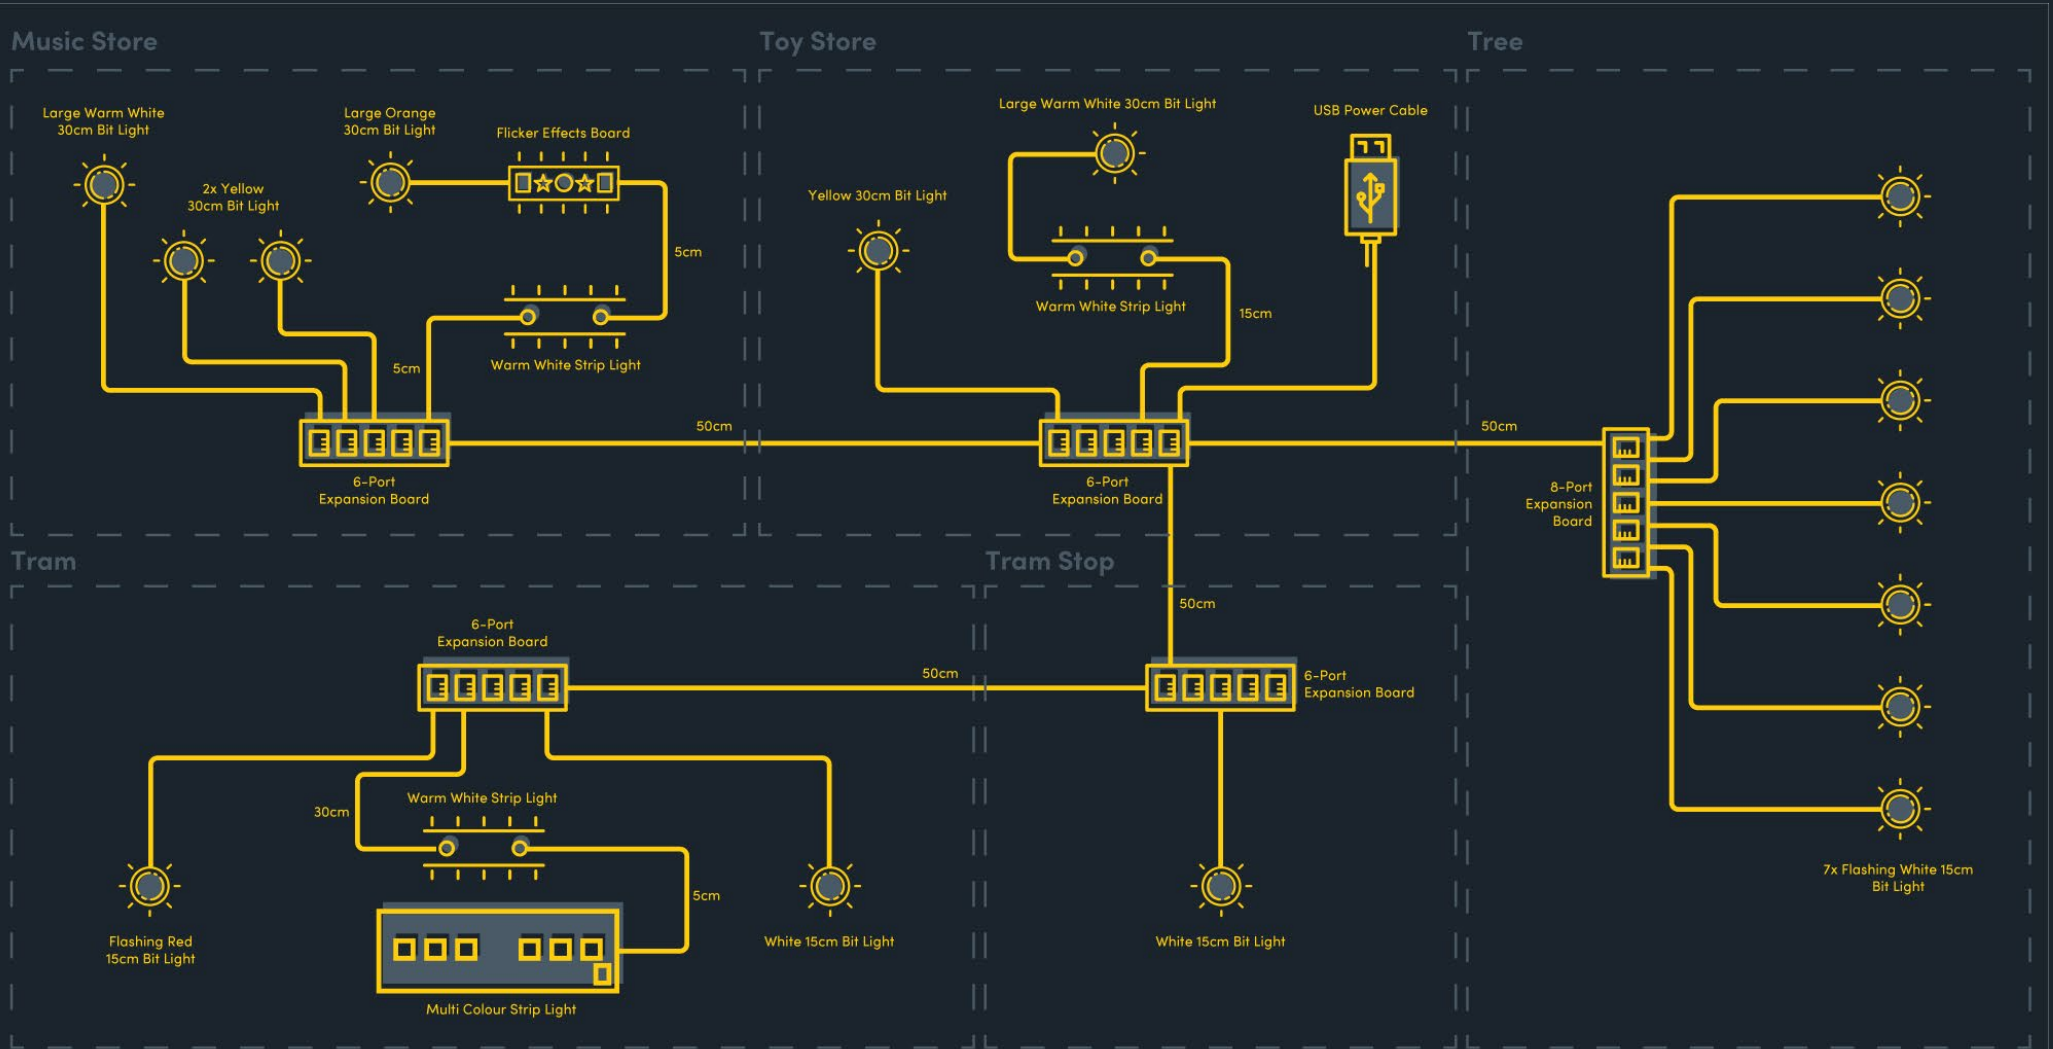 



INSTRUCTIONS

To ensure a smooth installation of your light kit, please read and follow each step carefully. If you run into any issues, please refer to the online troubleshooting guide.



Wenn Sie Probleme mit Ihrem Light My Bricks-Set haben, sehen Sie sich unser Video zur Fehlerbehebung an oder lesen Sie die Auflistung der häufigsten Ursachen, die Ihnen bei der Fehlersuche helfen hier.



Si vous rencontrez des problèmes avec votre kit Light My Bricks, regardez notre vidéo de dépannage ou consultez la liste des causes les plus fréquentes pour vous aider à les résoudre ici.



Se si verificano problemi con il set Light My Bricks, guardare il nostro video per la risoluzione dei problemi o leggere l'elenco delle cause più comuni per la risoluzione dei problemi qui.

1

 
 
 
 
 


NOTE

Remove the top level by lifting up from the indicated area.



2

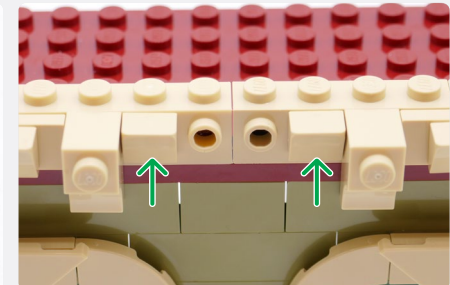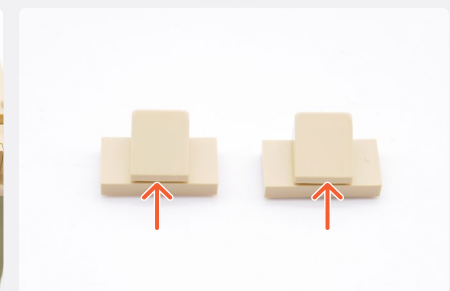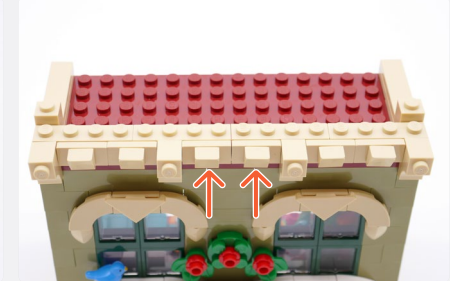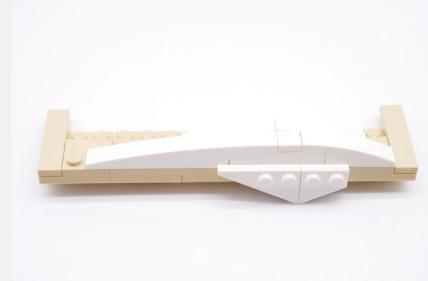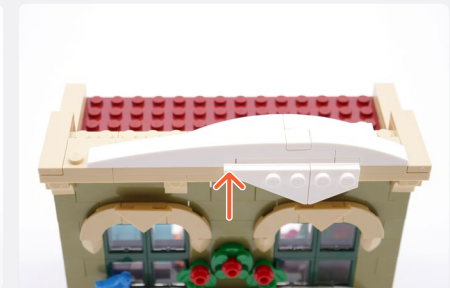

3



Round Plate 1x1 Open Stud - Black



Warm White 30cm Large Bit Light

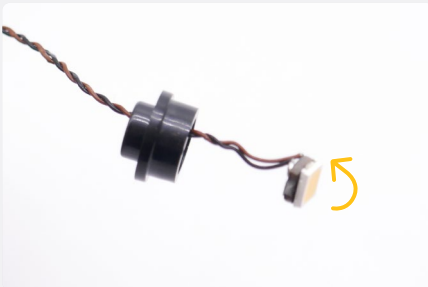 


Plate 1x1 Mod Rounded W/ Handle - Black





 
 
 
 
 
 
Tile 1x1 W/ Clip Round Edges - Black



 Plate 1x2 Mod W/ Stud Jumper - Black







4

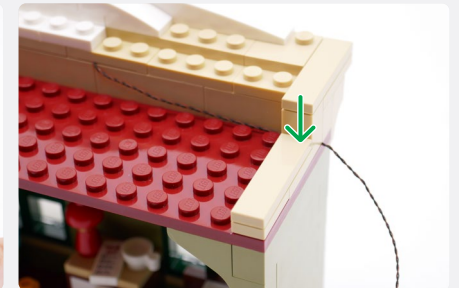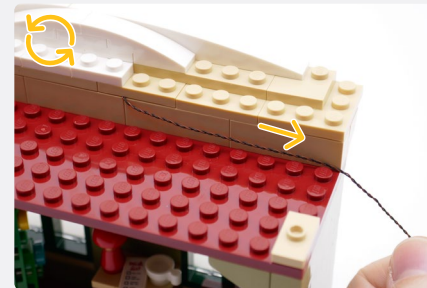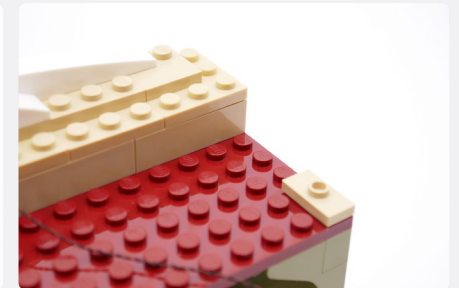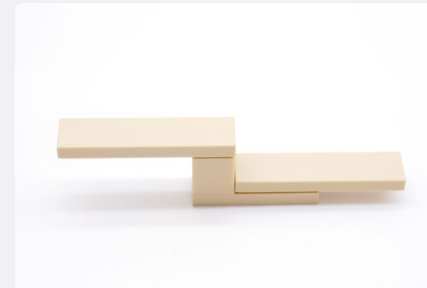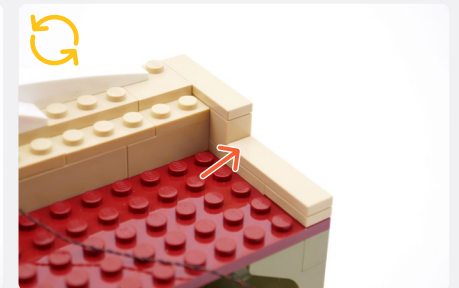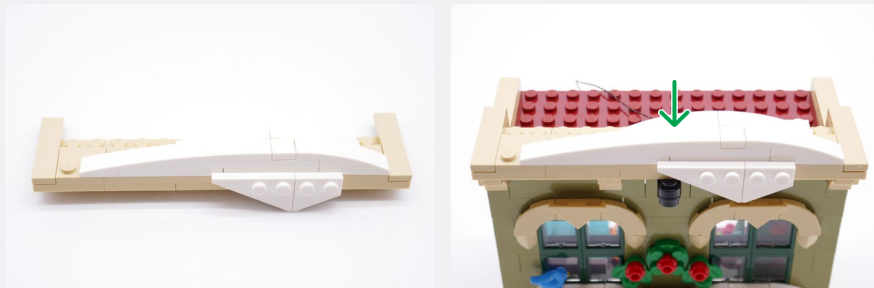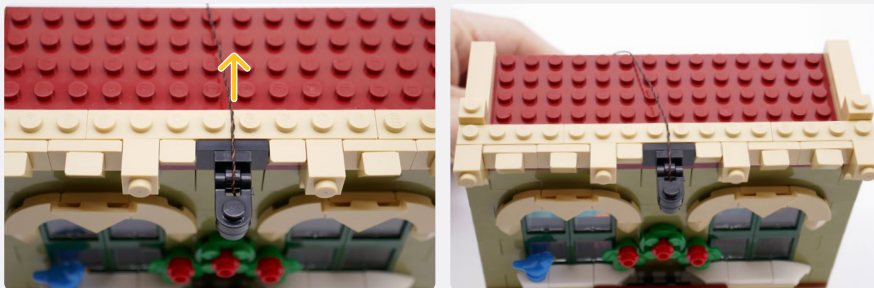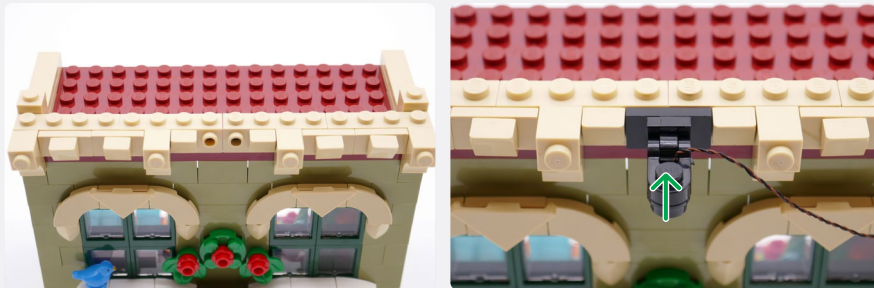 


NOTE

    Partially disconnect the pictured area, and thread the cable underneath.


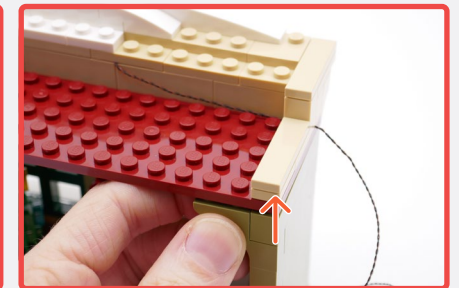


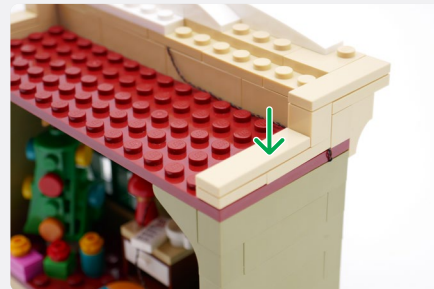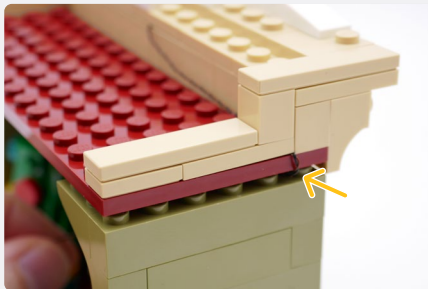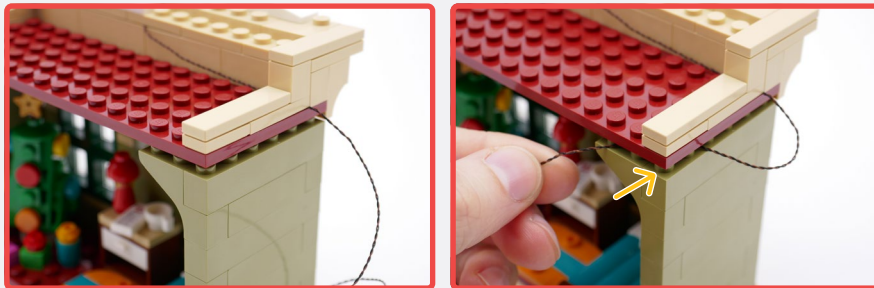


5

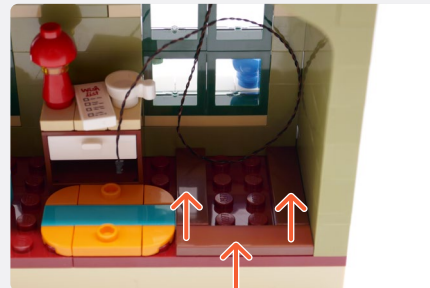 

6

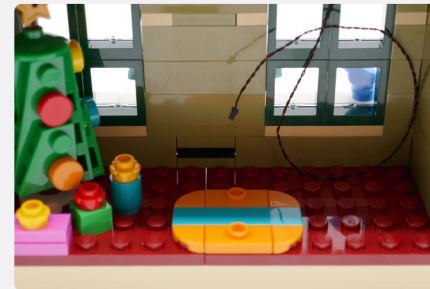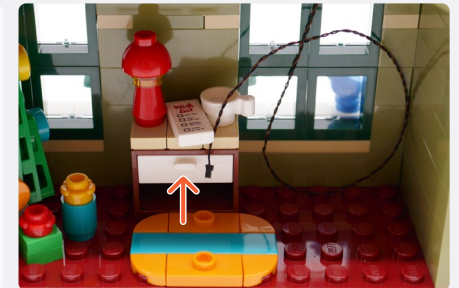  



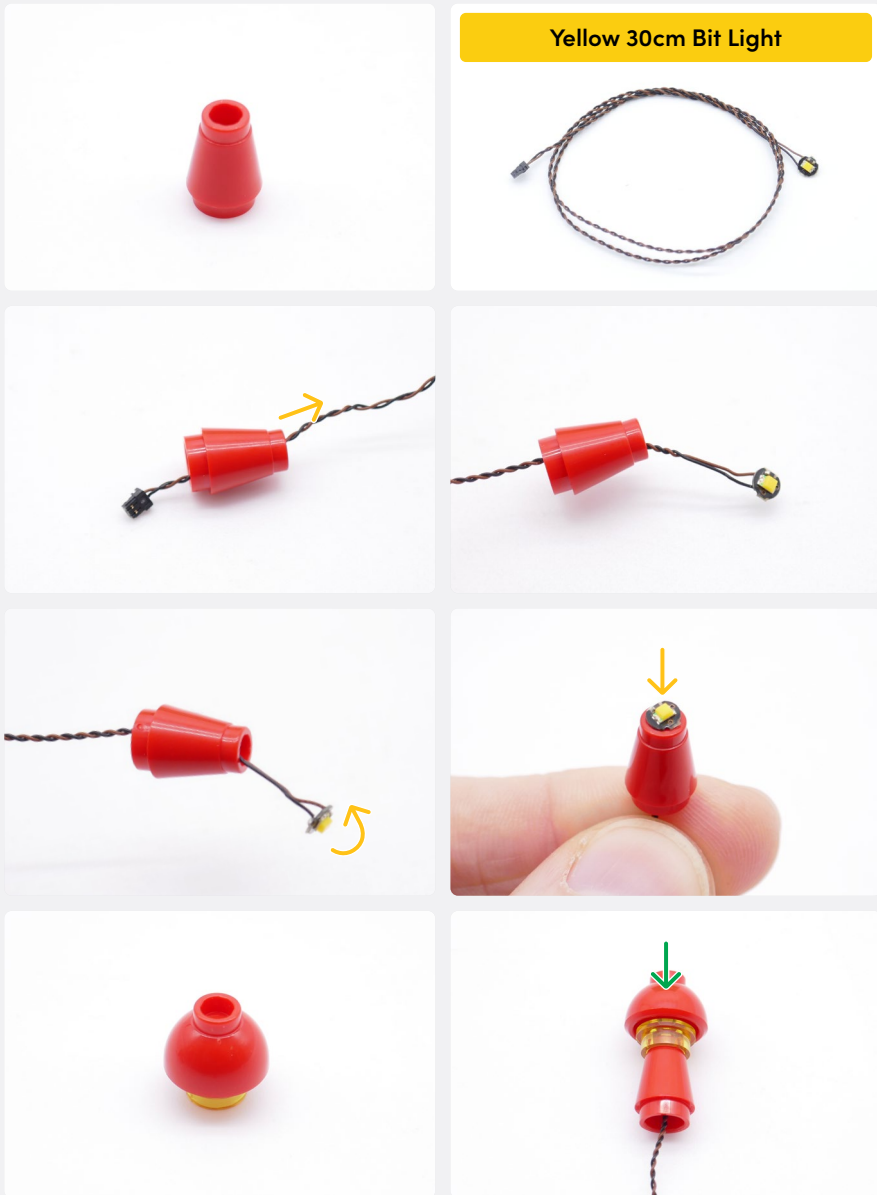 


7






NOTE

   Position the cable underneath the drawers, and reconnect to the building.

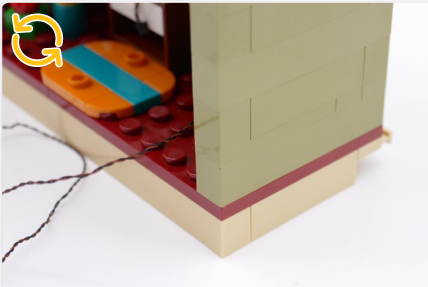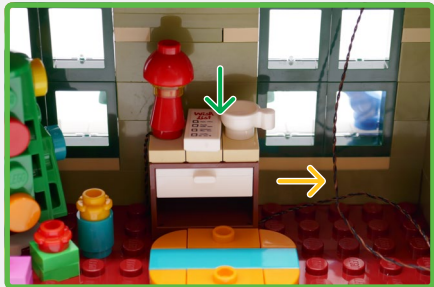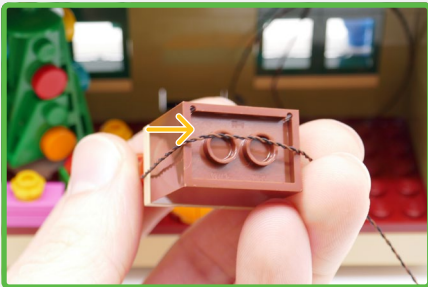




NOTE

   Partially disconnect the wall and run the cables underneath.


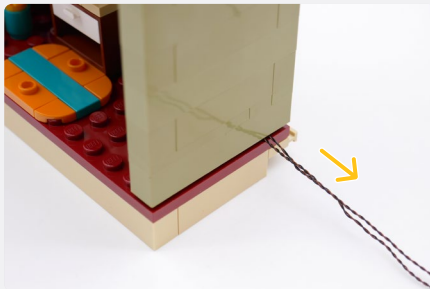
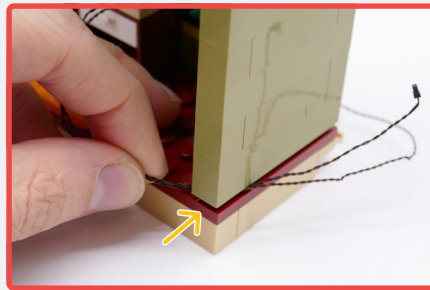
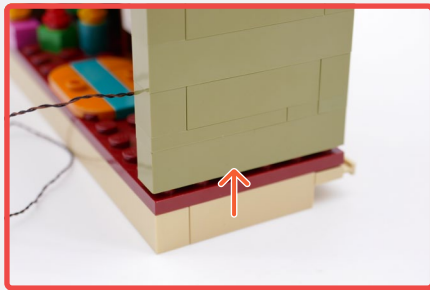


NOTE

  
 
Ensure the cables are against the wall and floor. Lightly pull them when reconnecting the wall.

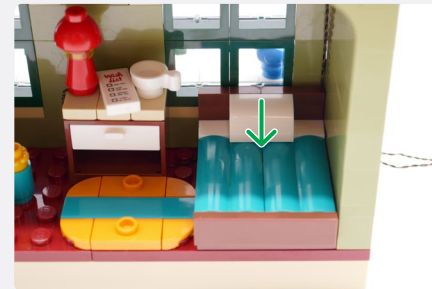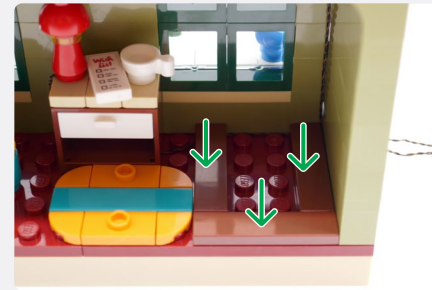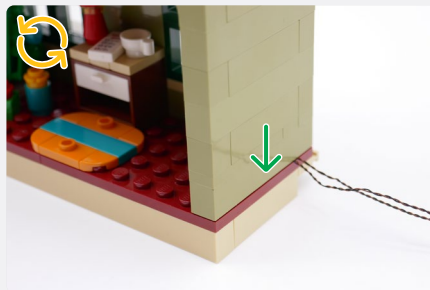

8

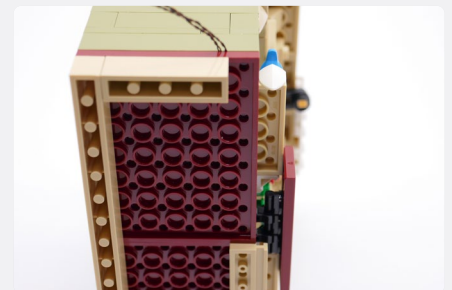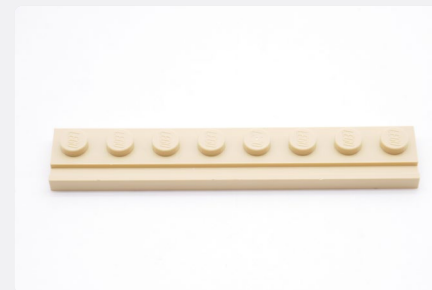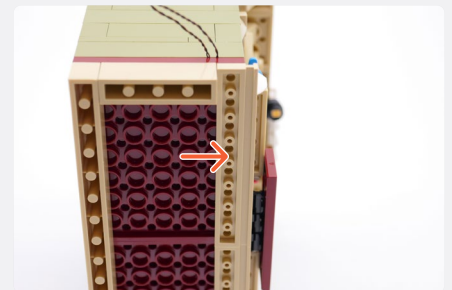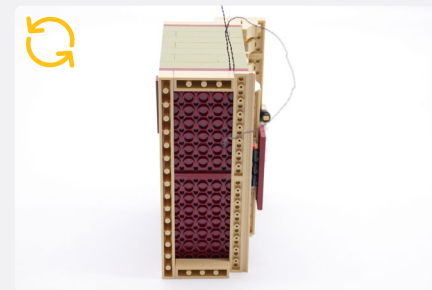    

9

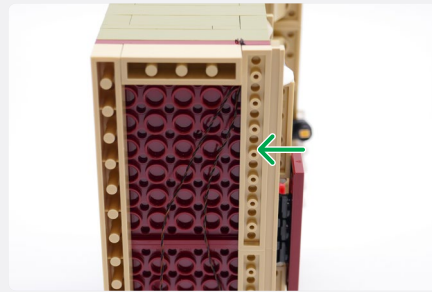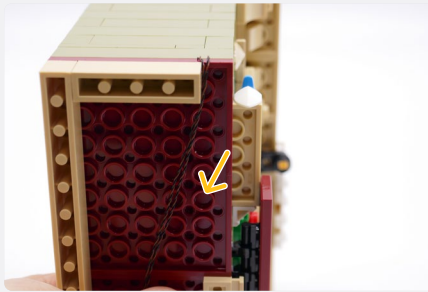  

Warm White Strip Light



Plate 1x6 - Dark Grey

 


10



x2

NOTE




Take the cable from the spotlight (shorter cable) on the roof and connect it to the Strip Light.

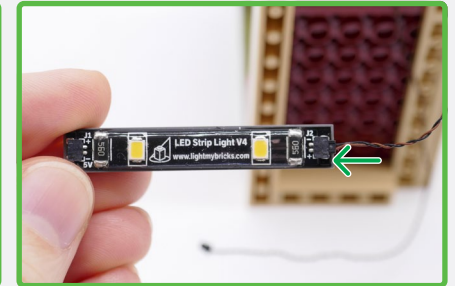

15cm Connecting Cable

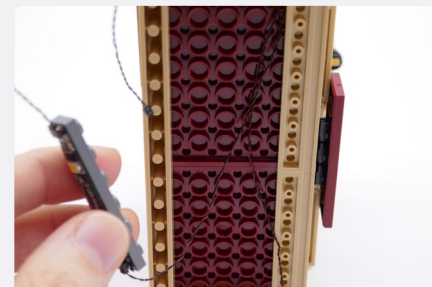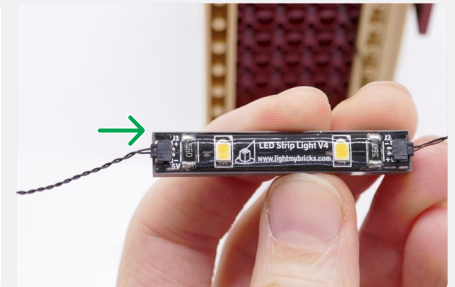  

11

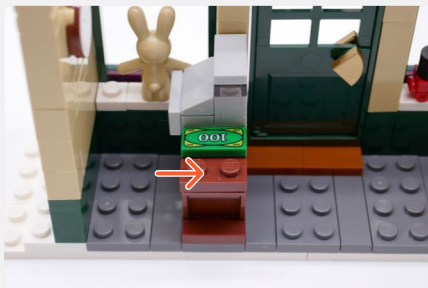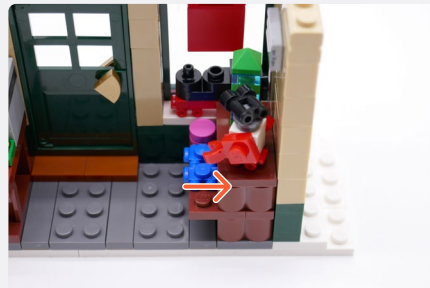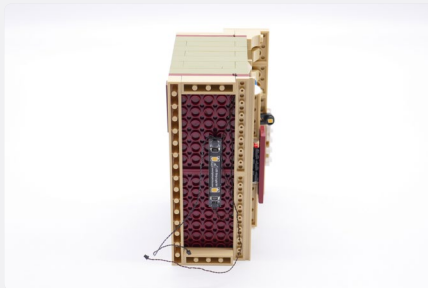   


12



50cm Connecting Cable




 
6-Port Expansion Board

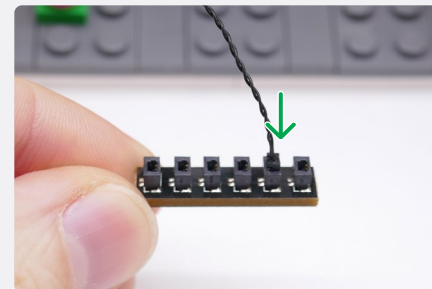

NOTE


 
 
Partially disconnect the wall and run the cable underneath.

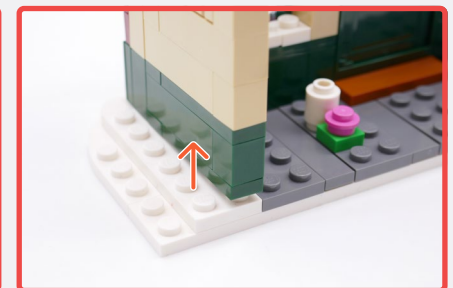

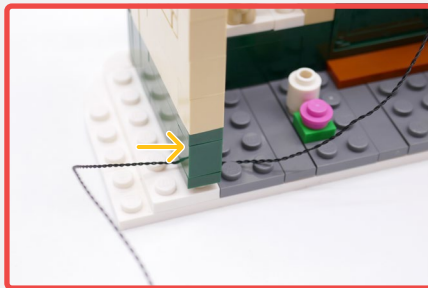


NOTE

   Place and hold the board where indicated and lightly pull the cable.

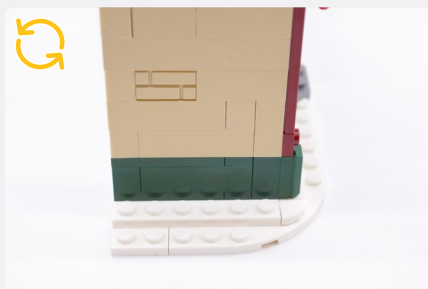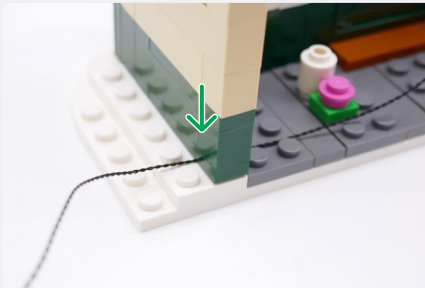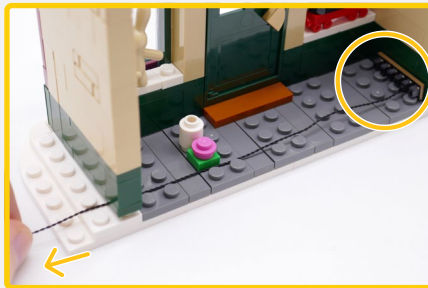


NOTE

 Partially disconnect the wall and run the cables underneath.


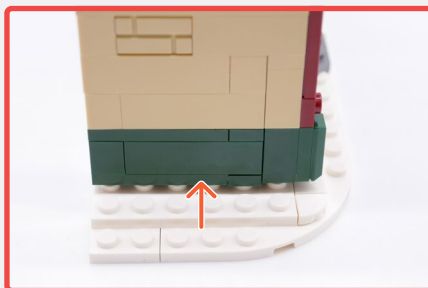


50cm Connecting Cable


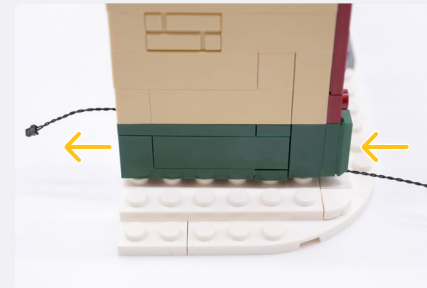 


NOTE

  Allow around 5cm of cable on the inside of the building.

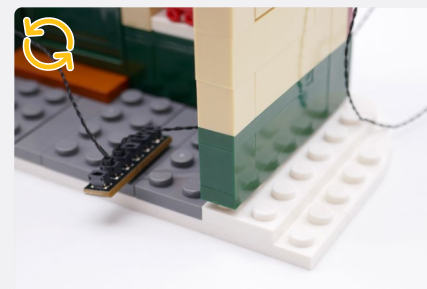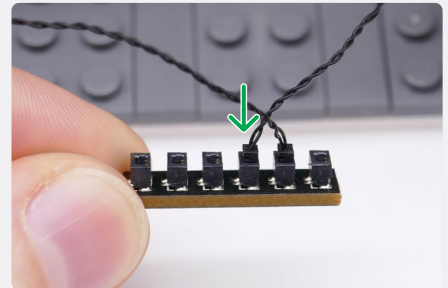


50cm Connecting Cable




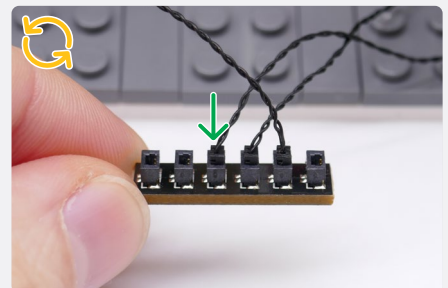 
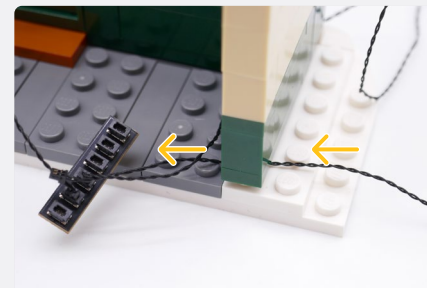 





NOTE

 Allow approximately 3cm of cable on the inside of the building.

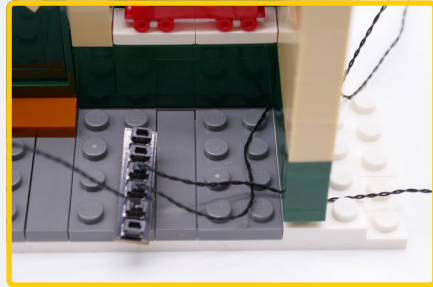

15

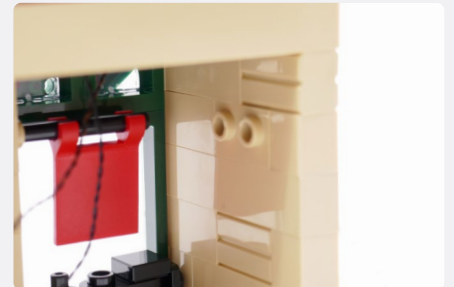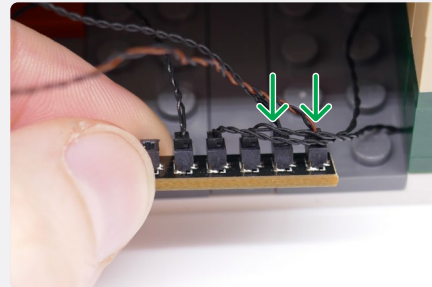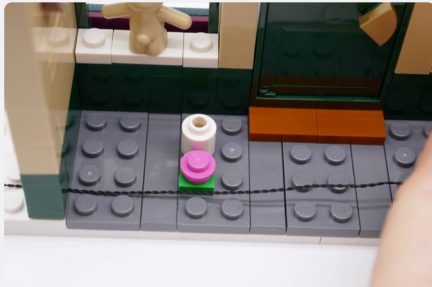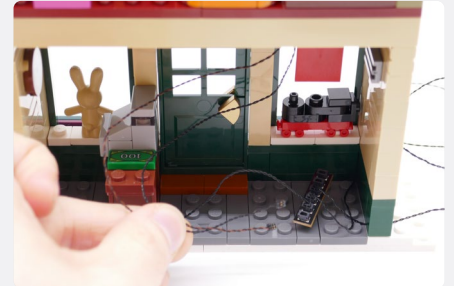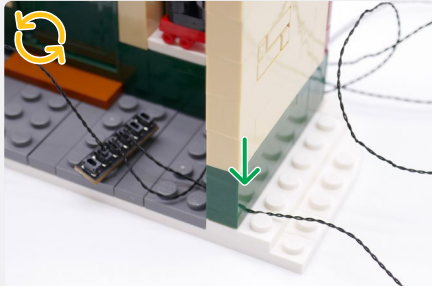     

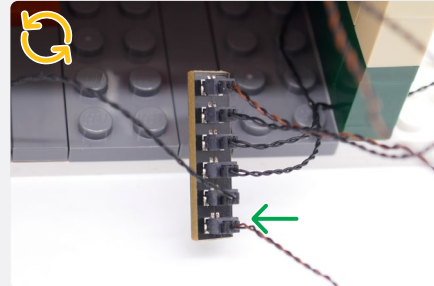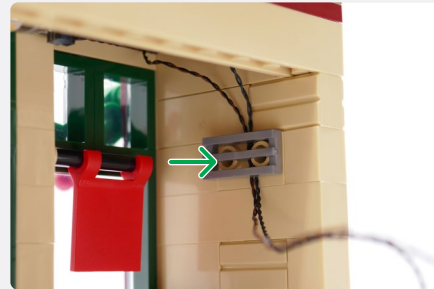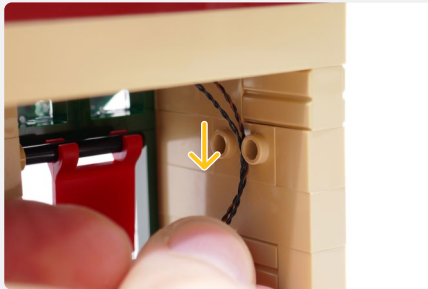   

NOTE

 
Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)

 


16








! If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section. **i**

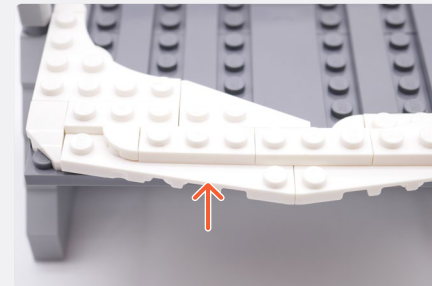

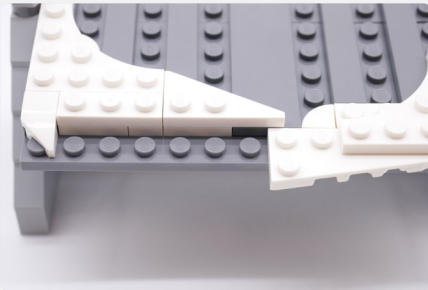


NOTE

     Route the cable behind the Spotlight, between the white plates.

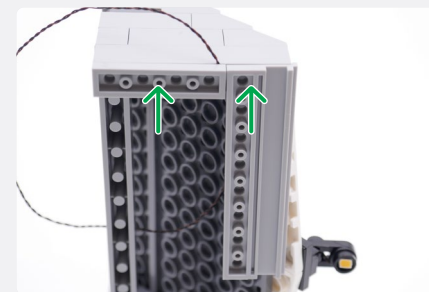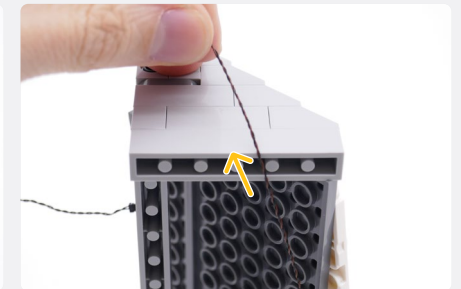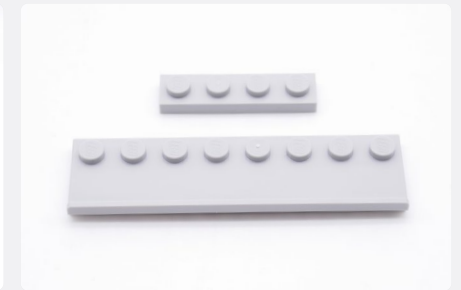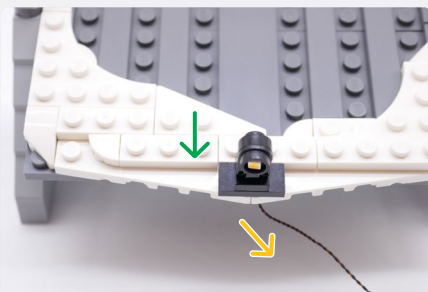
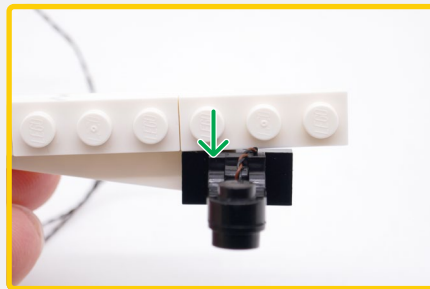


NOTE

 Partially reconnect the roof section, but leave the right side disconnected.

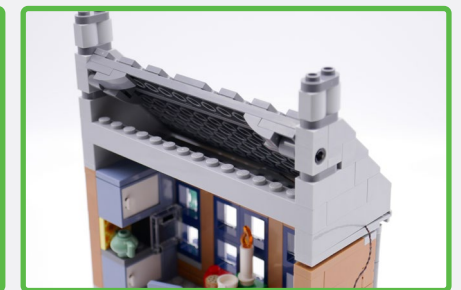

17

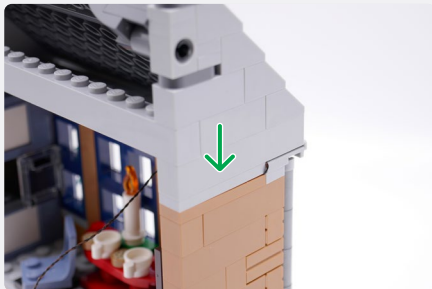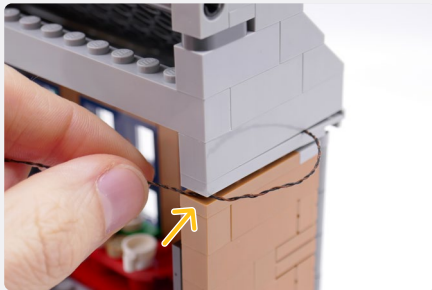  


19




18





 
Orange 30cm Large Bit Light

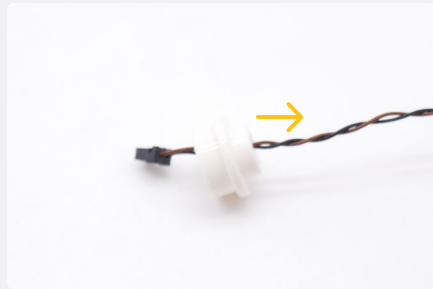

 
NOTE
Take care when pushing the flame piece into the open stud, as cable can break if too forceful.

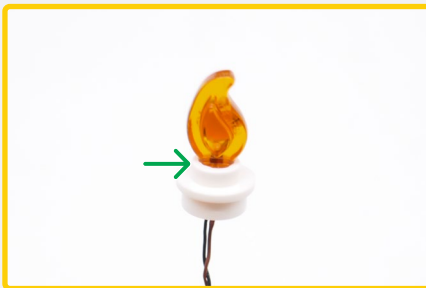

20

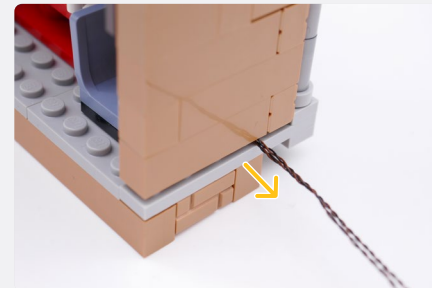 
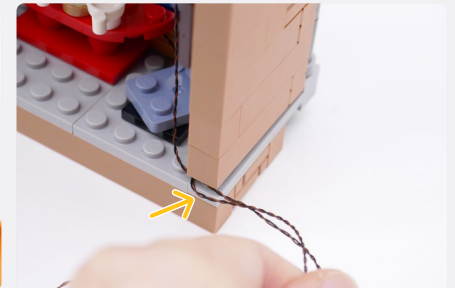 
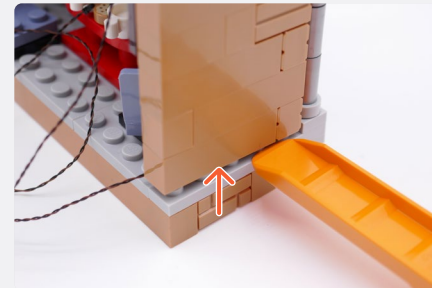 
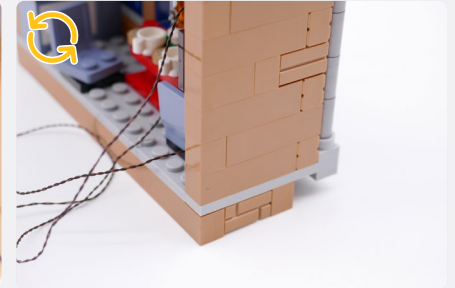 
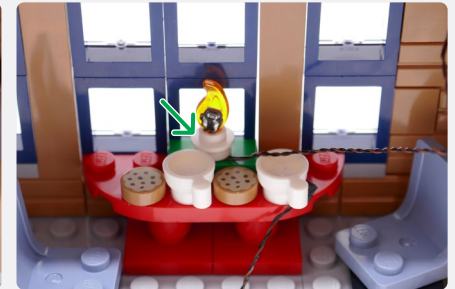 


21

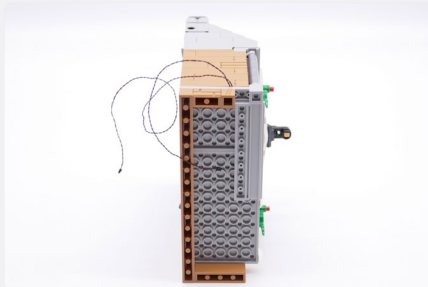 


NOTE

     Take the cable from the spotlight (shorter cable) on the roof and connect it to the Strip Light.

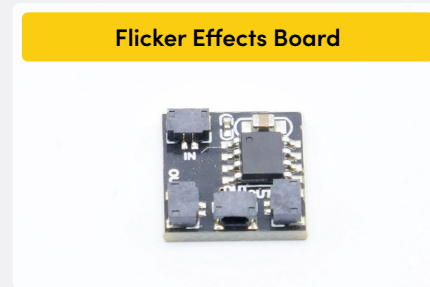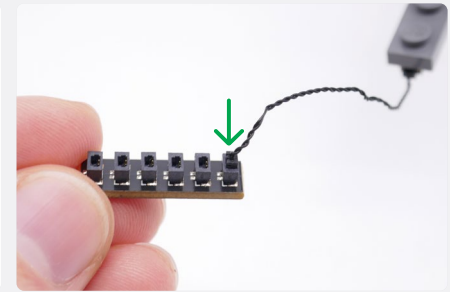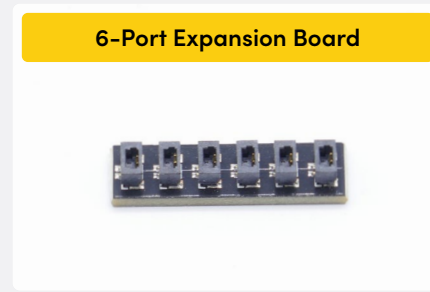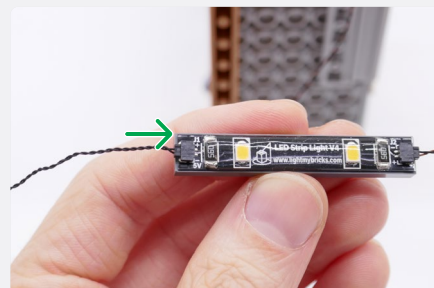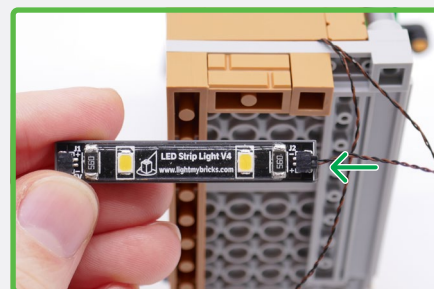


NOTE











 
Take the longer cable from the Candle and connect it to the 'OUT' port of the Flicker Effects Board.

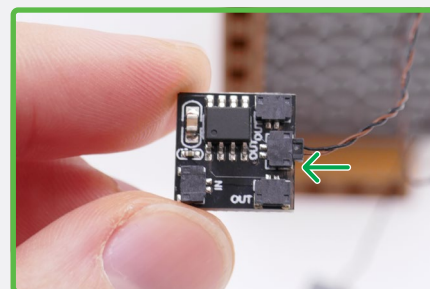

NOTE

            
Connect the 5cm Connecting Cable to the 'IN' port of the Flicker Effects Board

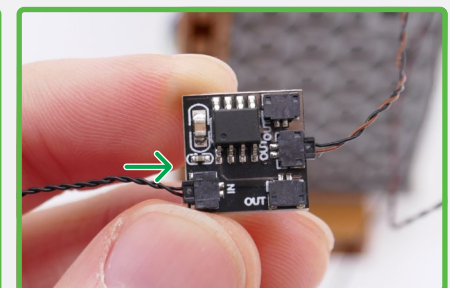

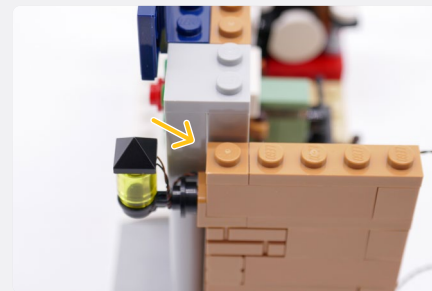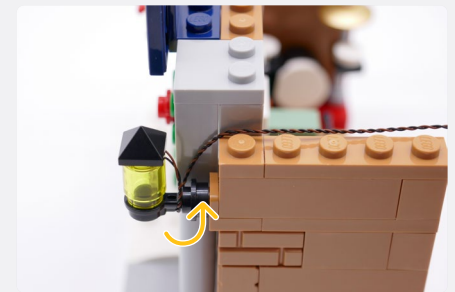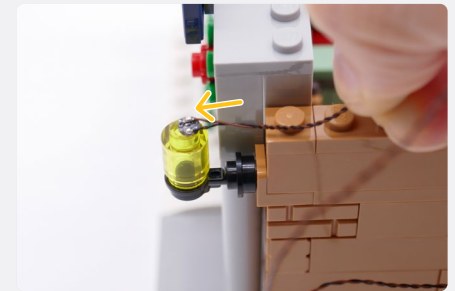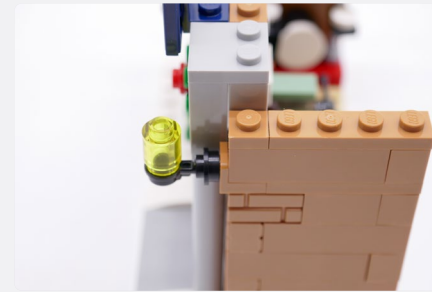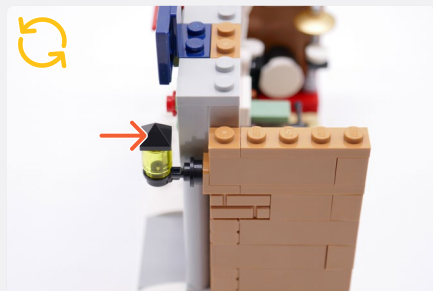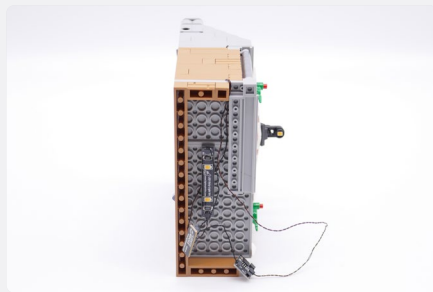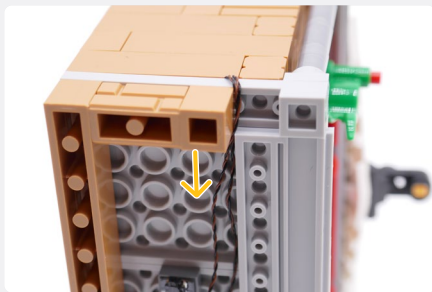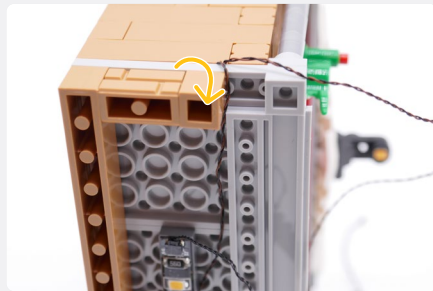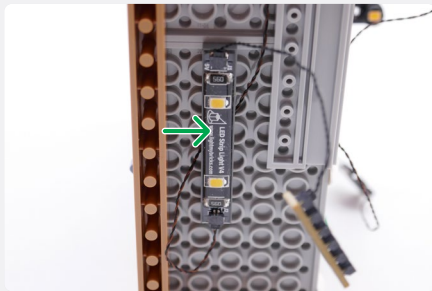
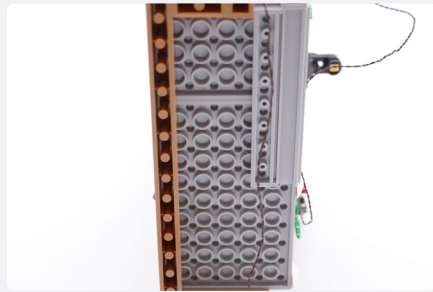
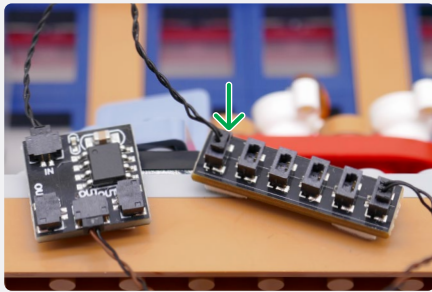


22


 
23

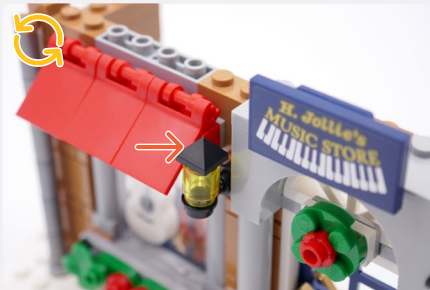


Yellow 30cm Bit Light

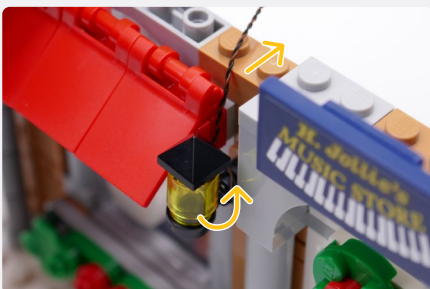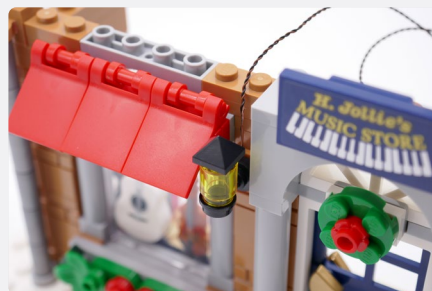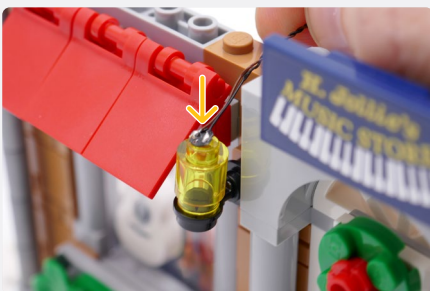   

24

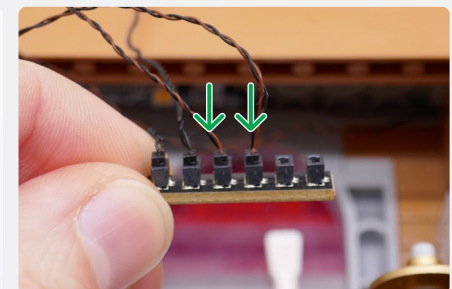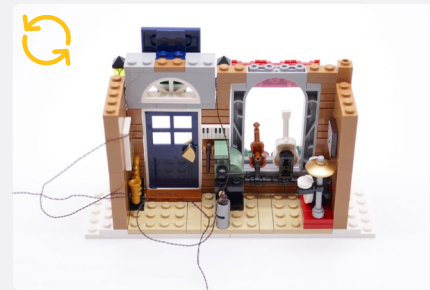  


25



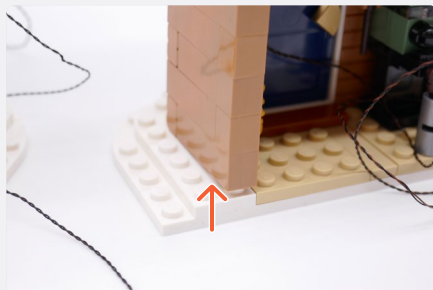 


NOTE











 
Take the 50cm Connecting Cable coming out from the Toy Store right wall, and thread it under the wall. Allow as much length as you wish.

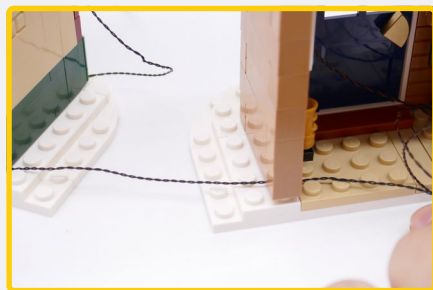


26

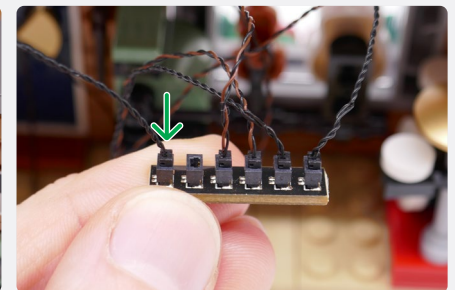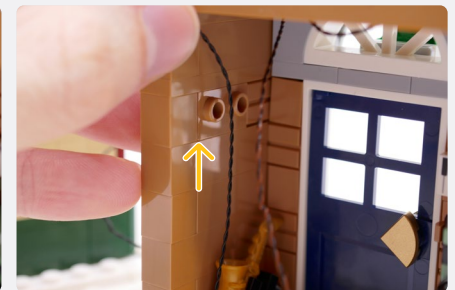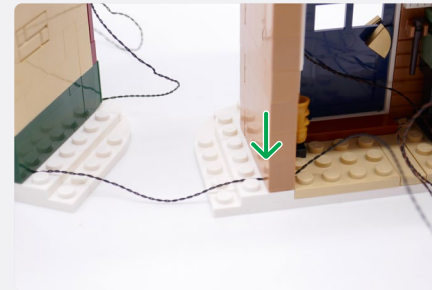   

27

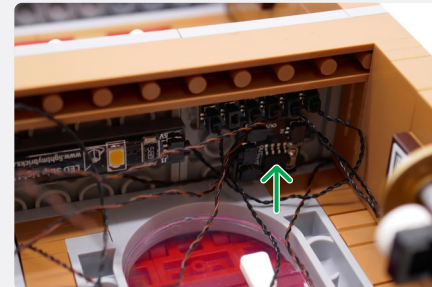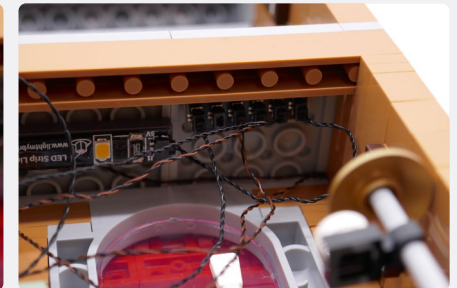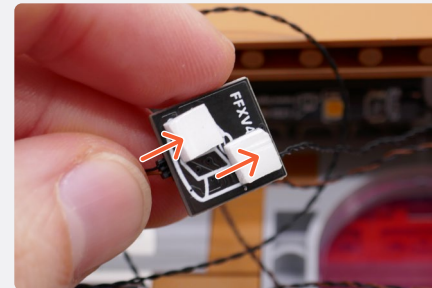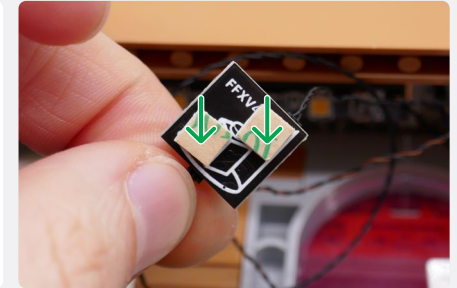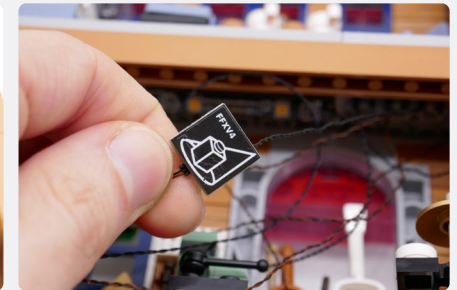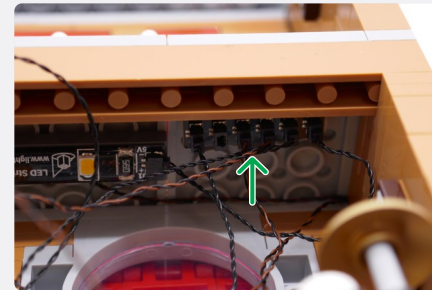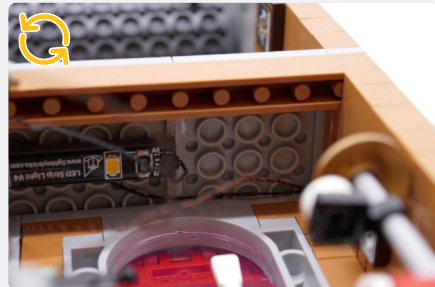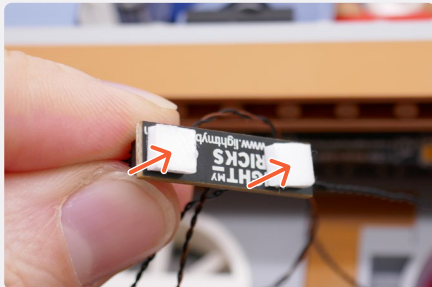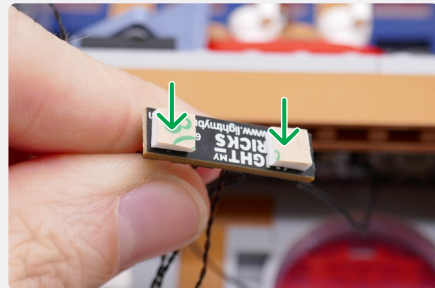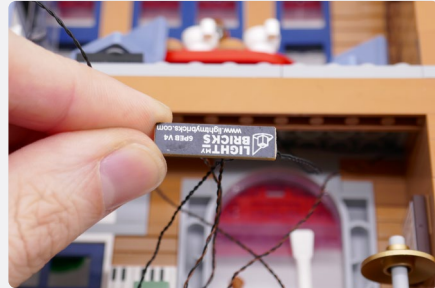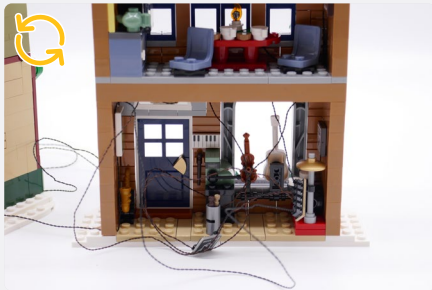           

28

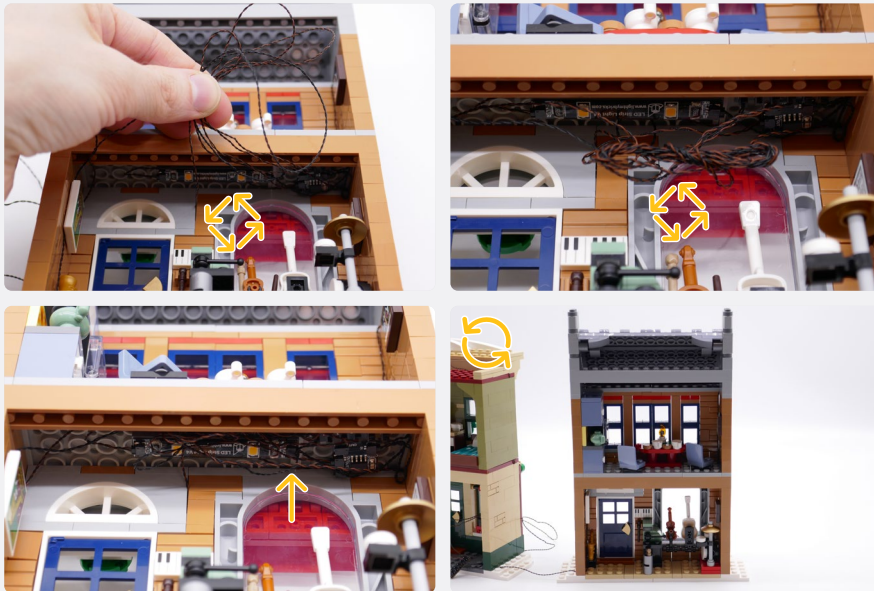 

NOTE

Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)

 
 
 
 
 
 


 
 
 
! If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.

28




29

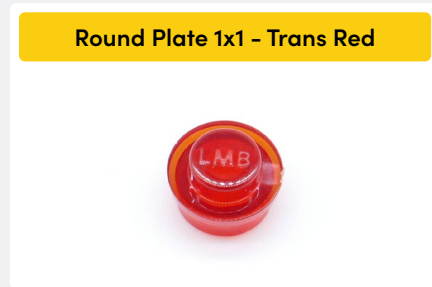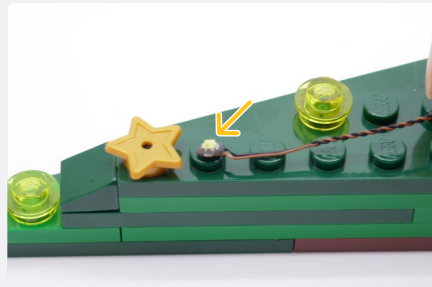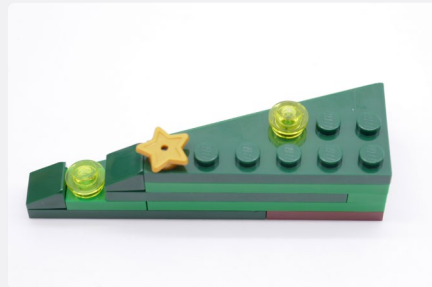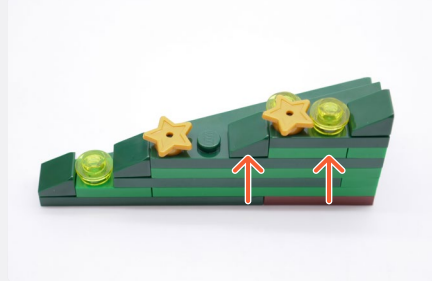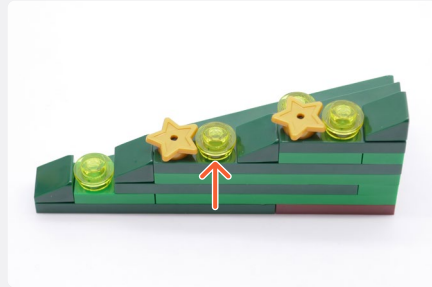
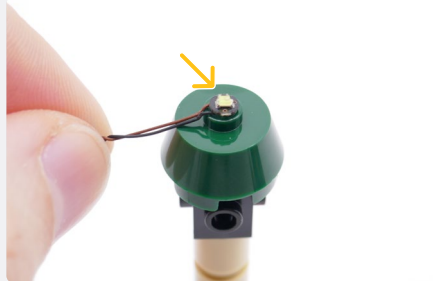


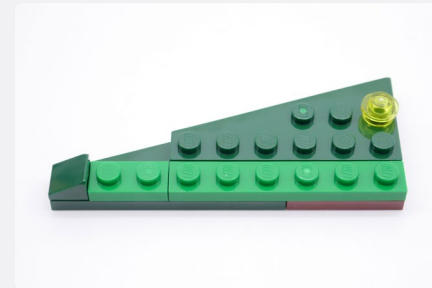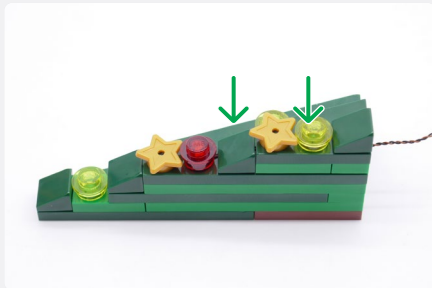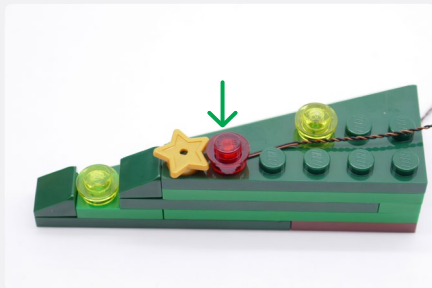


Flashing White 15cm Bit Light

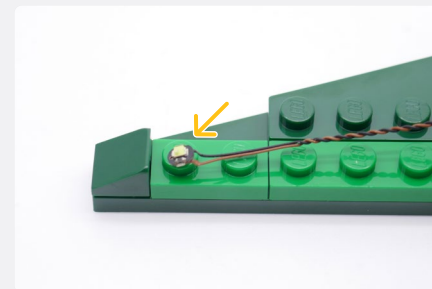 


Round Plate 1x1 - Trans Purple

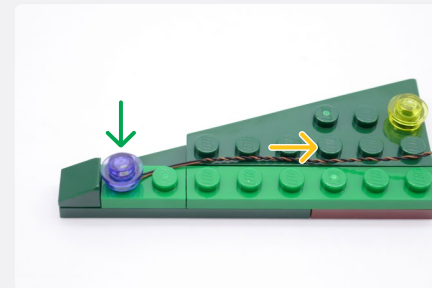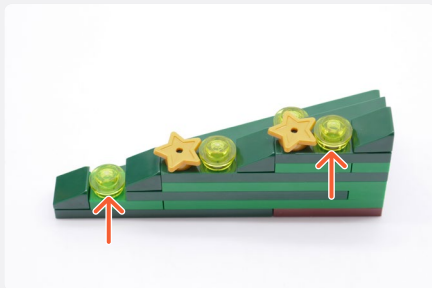  

30

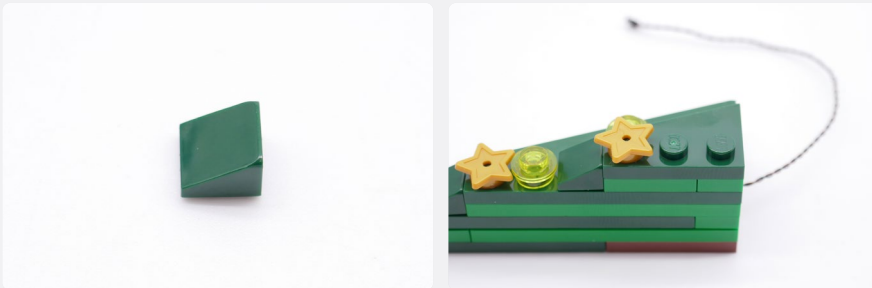 



Flashing White 15cm Bit Light

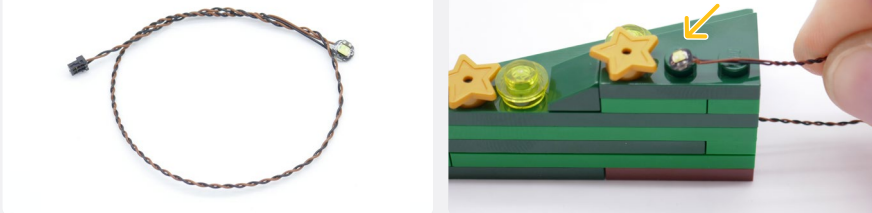 


Round Plate 1x1 - Trans Orange



   31

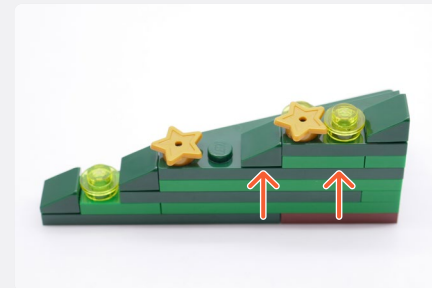
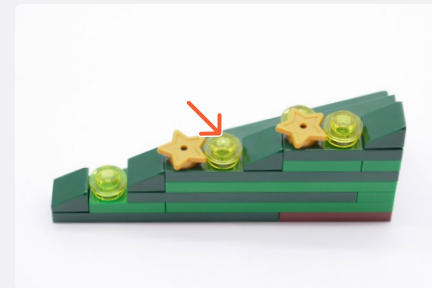


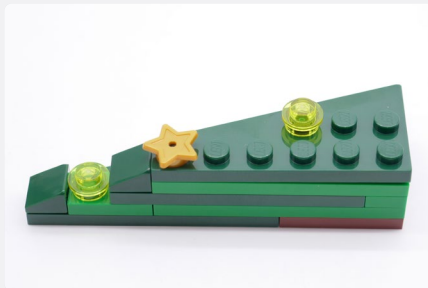




Flashing White 15cm Bit Light



  Round Plate 1x1 - Trans Light Green

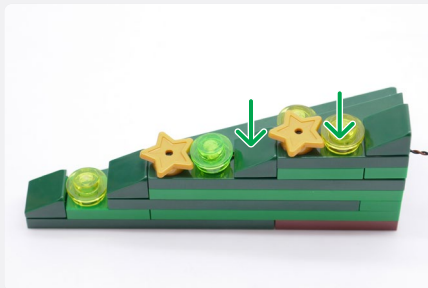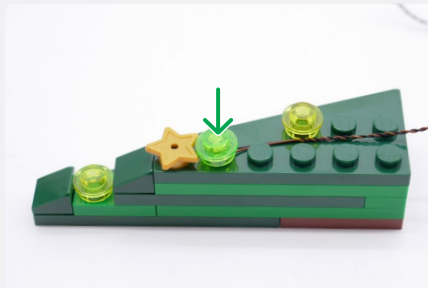


32

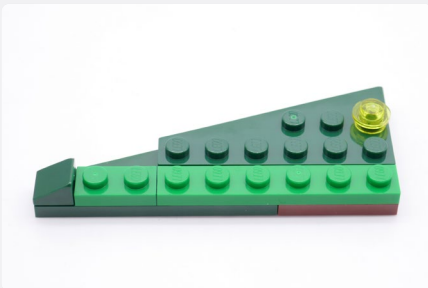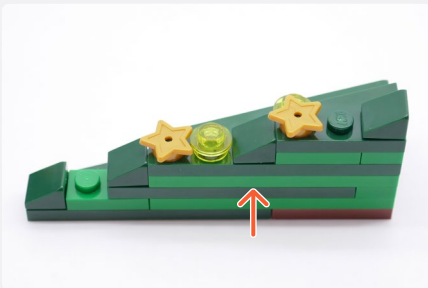  
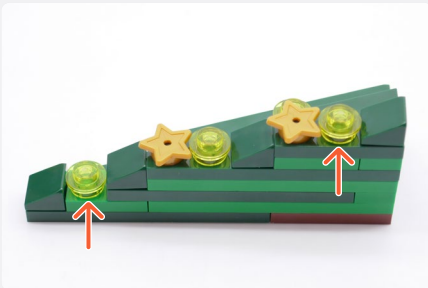 


Flashing White 15cm Bit Light




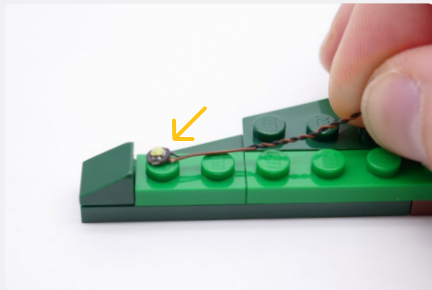 


Round Plate 1x1 - Trans Pink

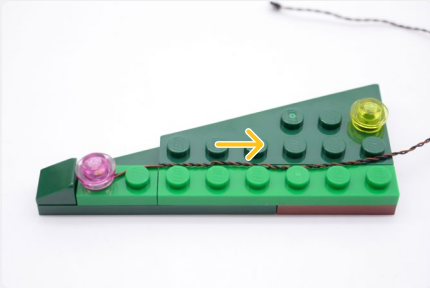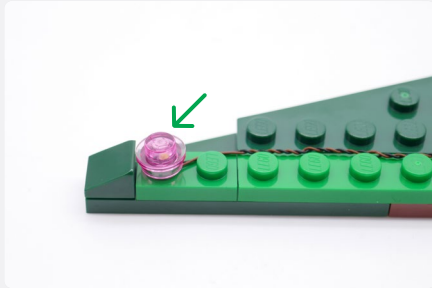  








Flashing White 15cm Bit Light

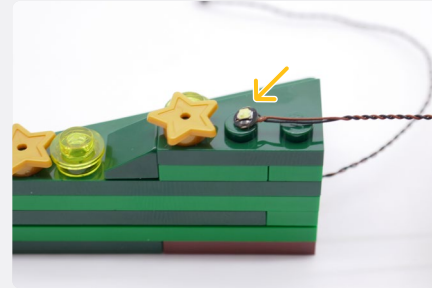 

Round Plate 1x1 - Trans Dark Blue

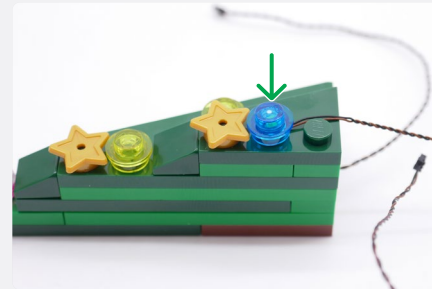 

33

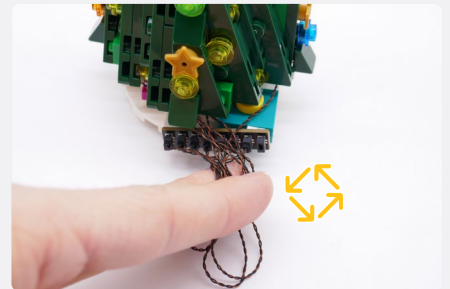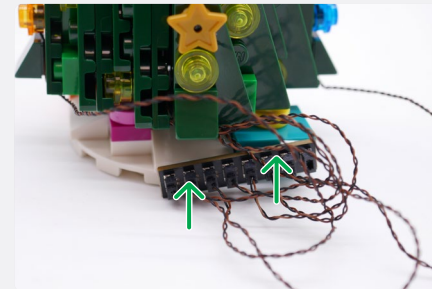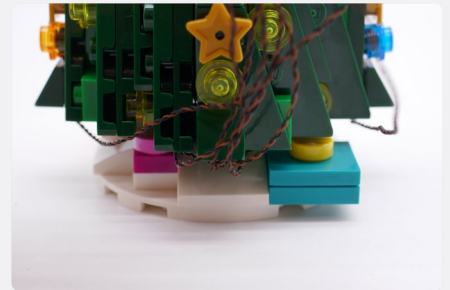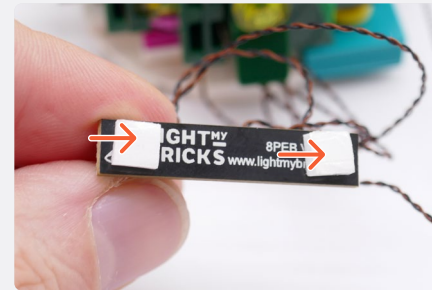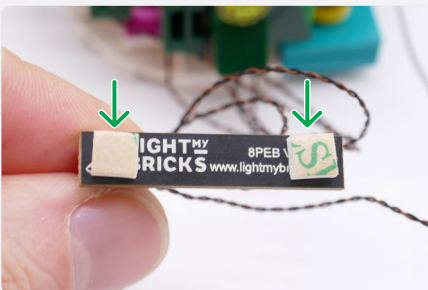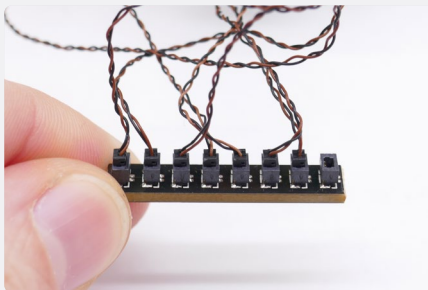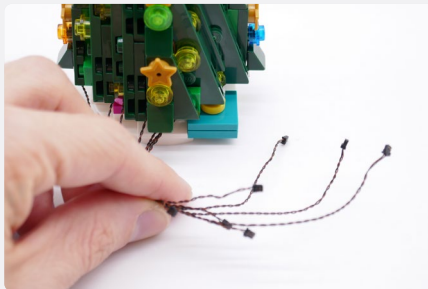       


34





NOTE

 Connect the 50cm Connecting Cable from the left side of the Toy Shop to the Tree.

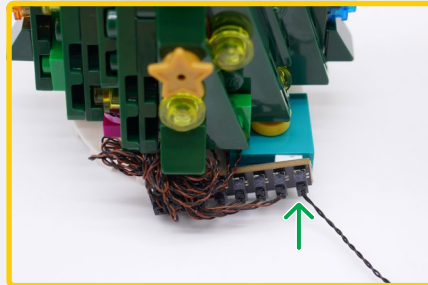

NOTE

  Twist any excess cable around the base of the tree.

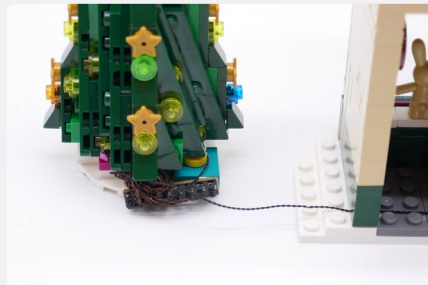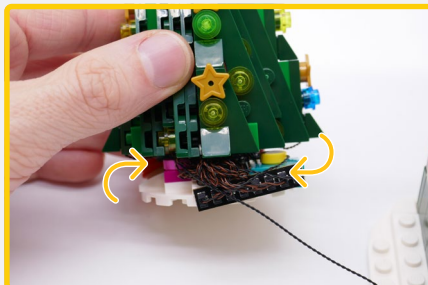

NOTE

Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)



! If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.



DISCONNECT



CONNECT



DIRECTIONAL



BEND / PIVOT



TURN / FLIP



TWIST / BRAID

 


POWER ON TEST




NOTE ICON






35

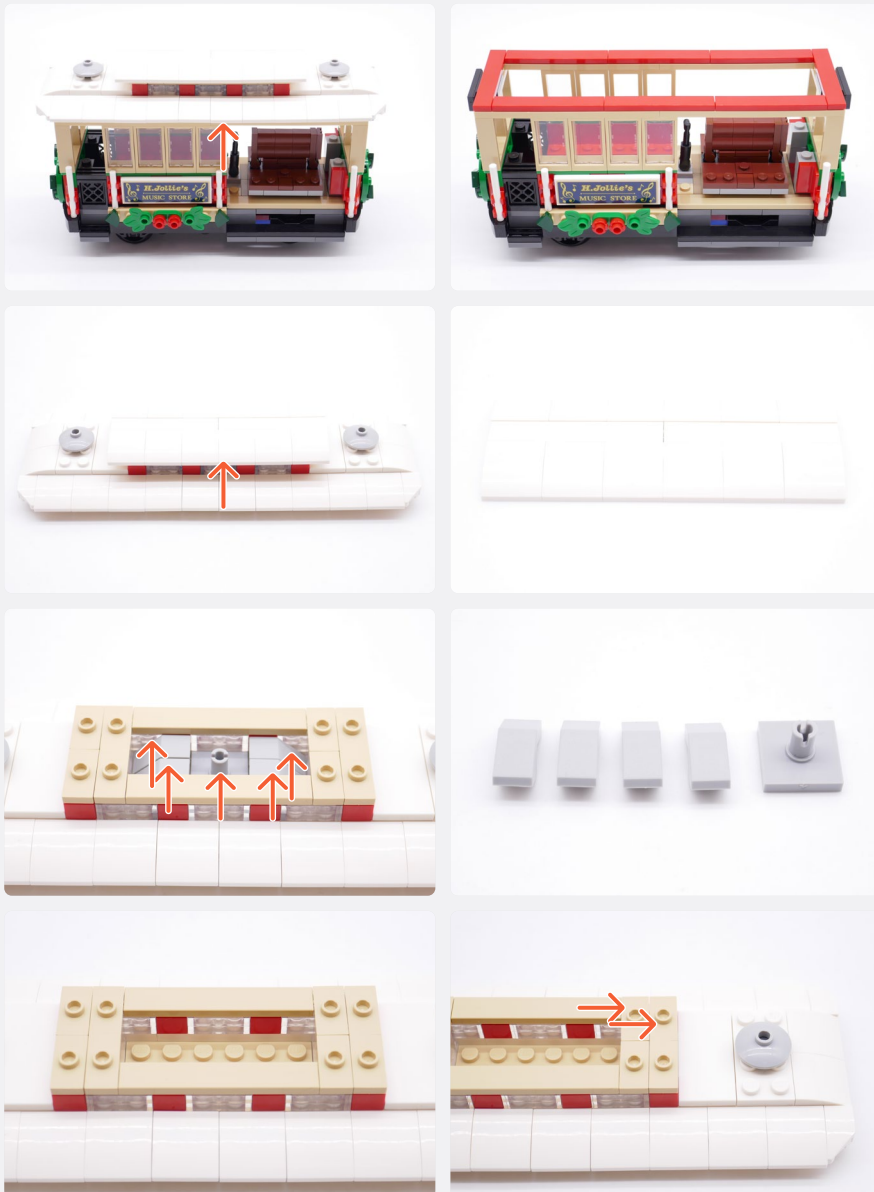

36



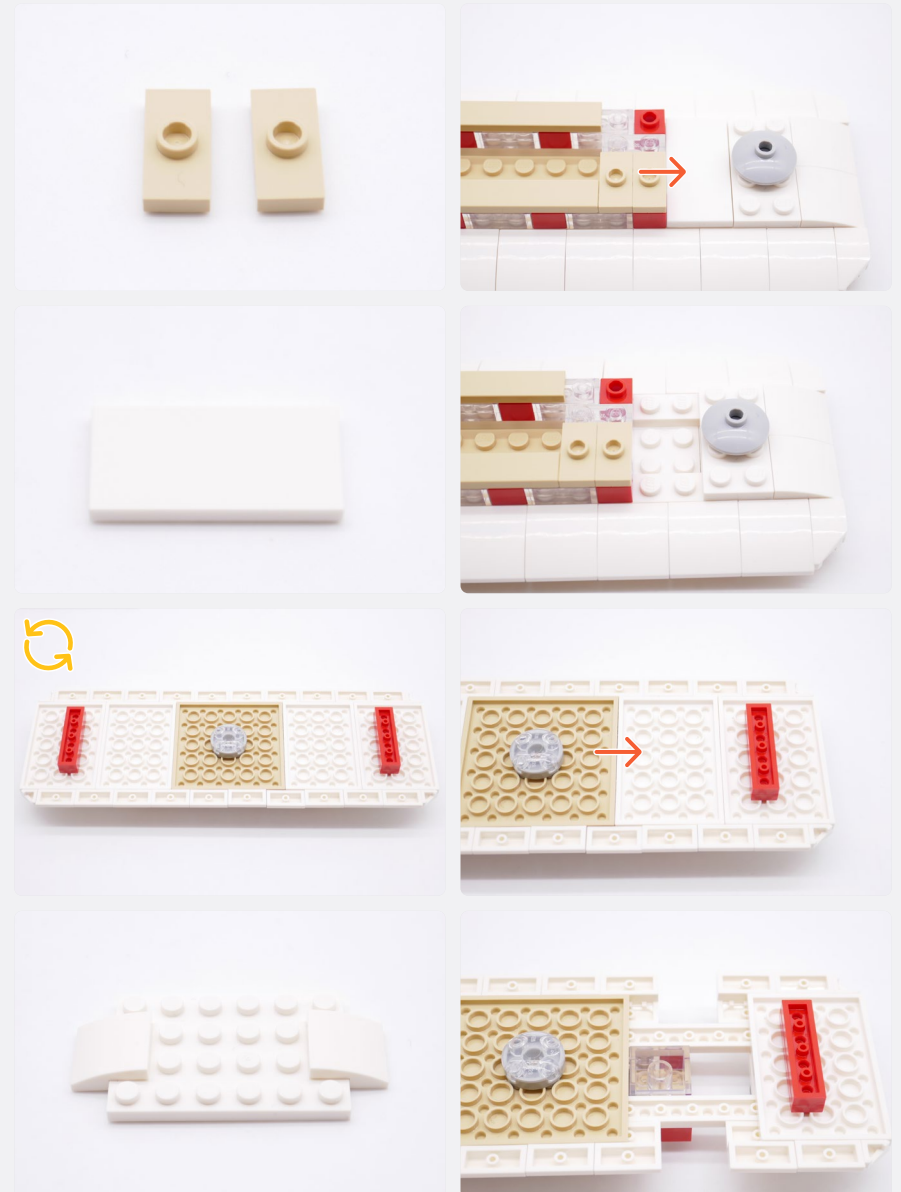 


37

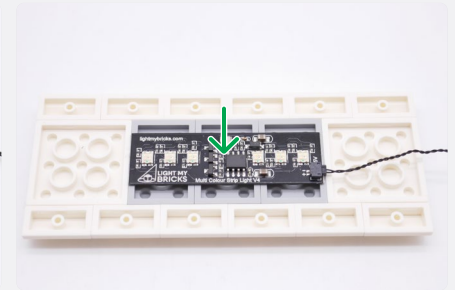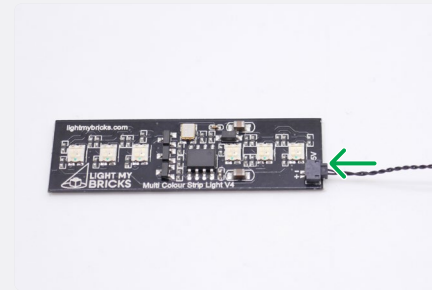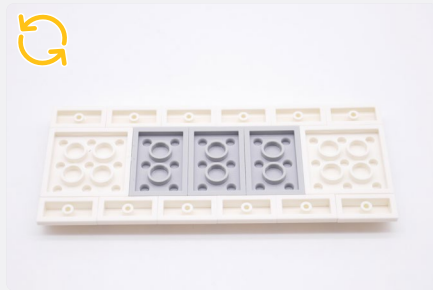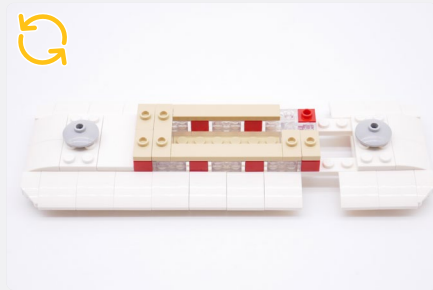    
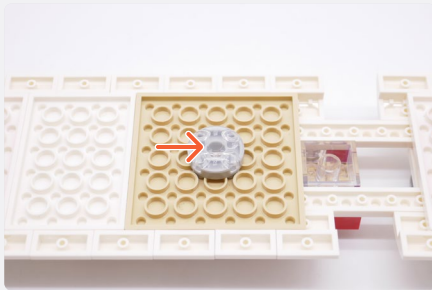 


NOTE


 
 
 
Ensure the Multi Colour Strip Light is placed on the edge of the grey piece on the left side, and the connector is on the edge of the right side.




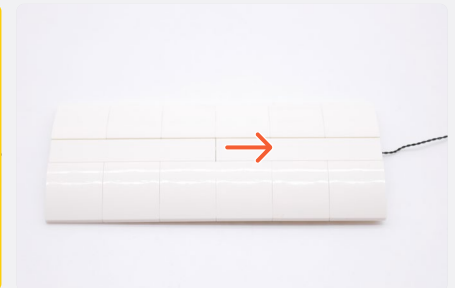
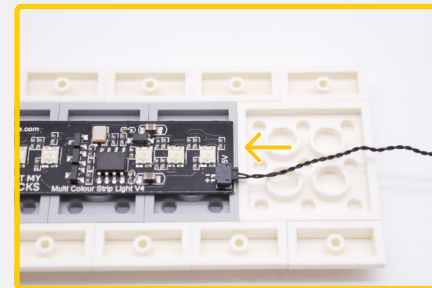
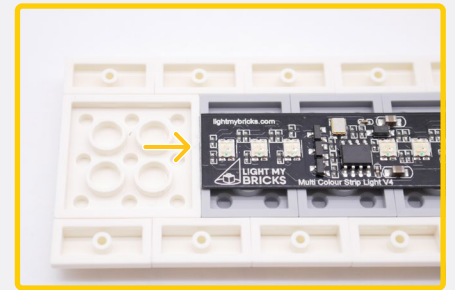


38




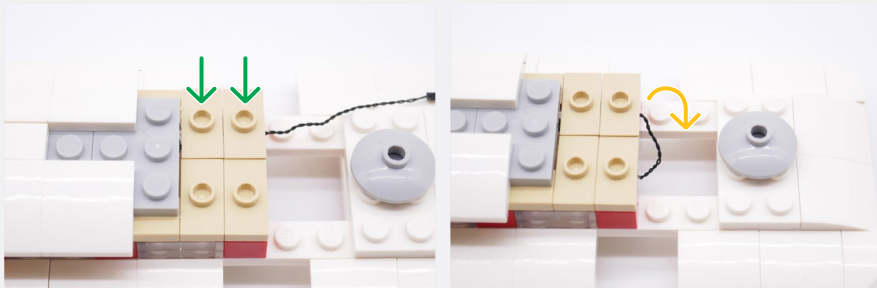 
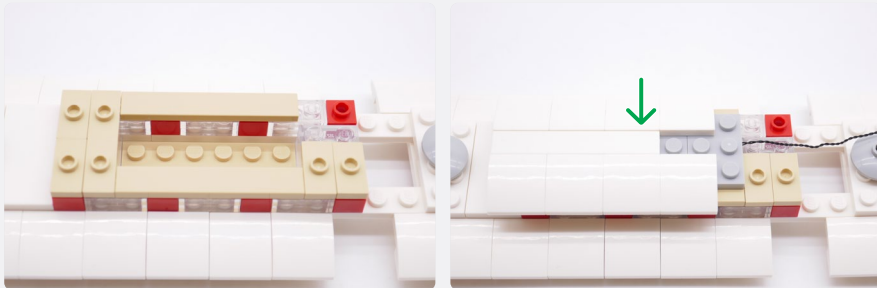 











39

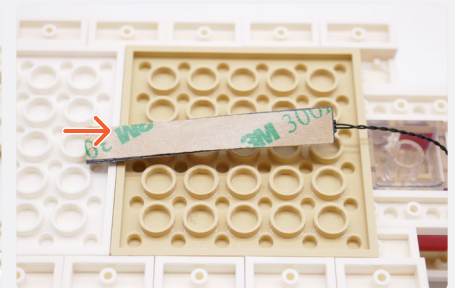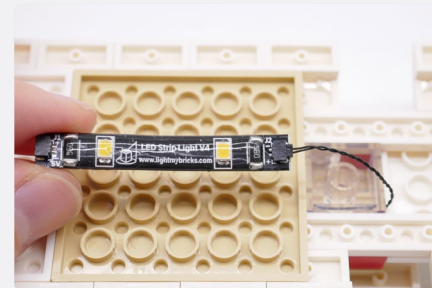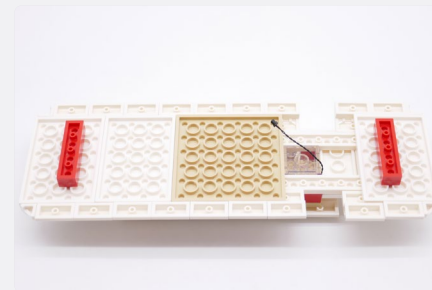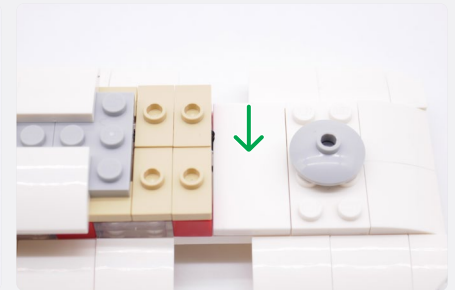    

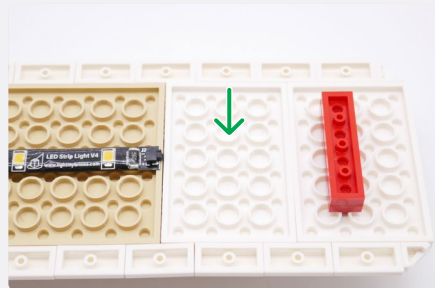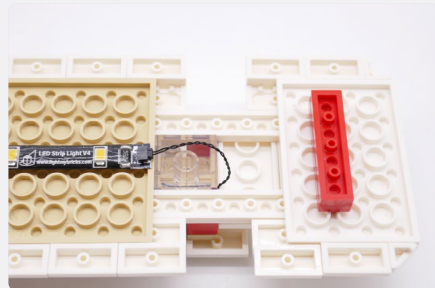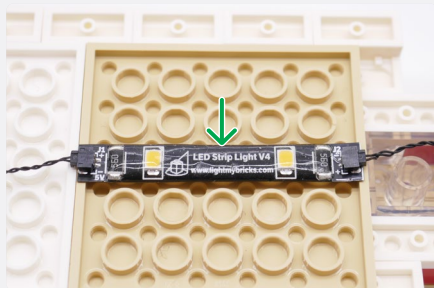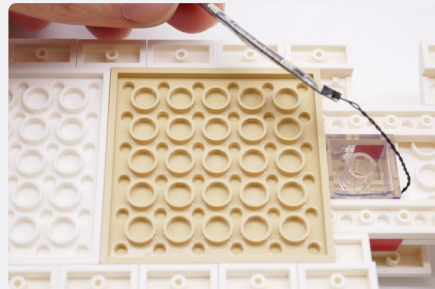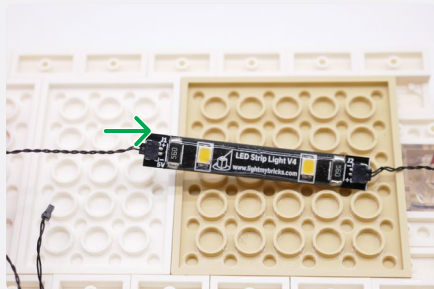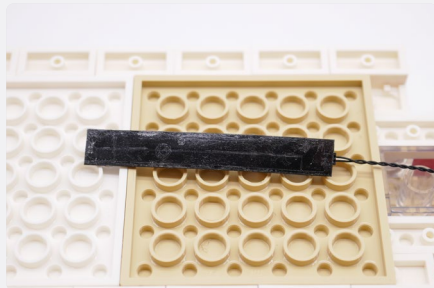      


40

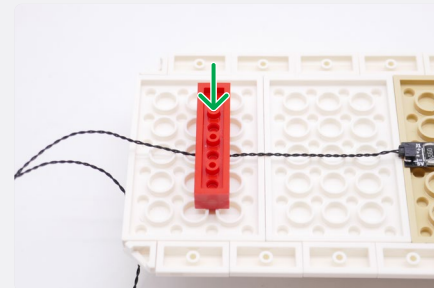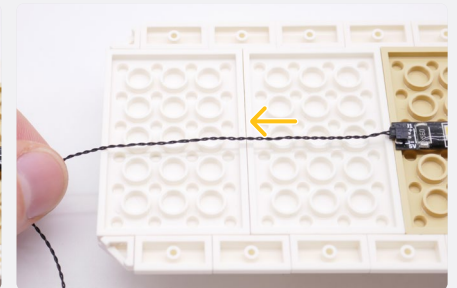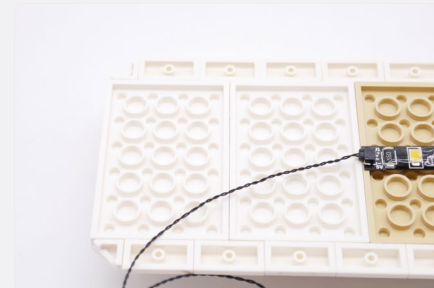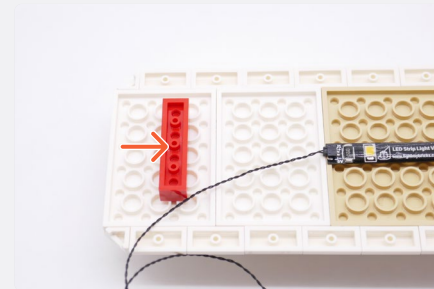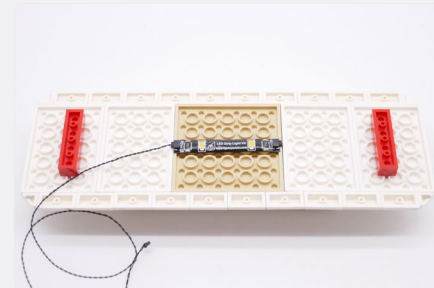     


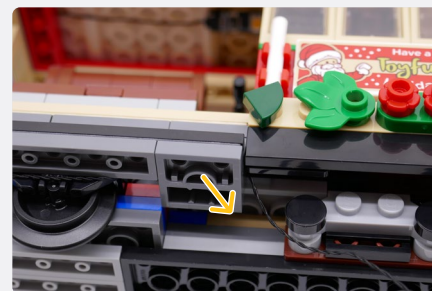 
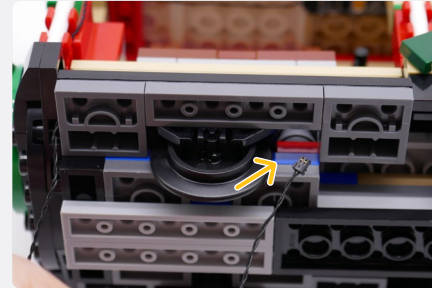 
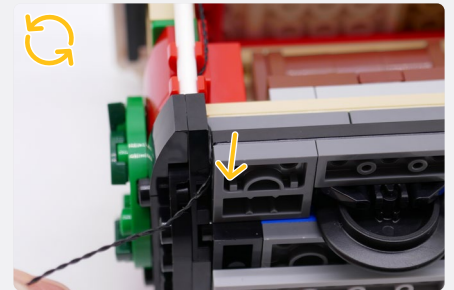 
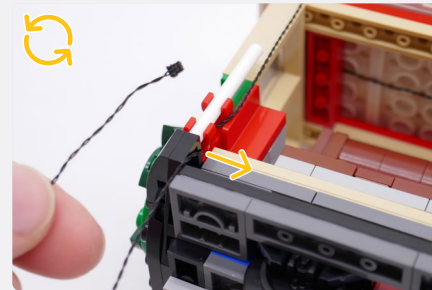 
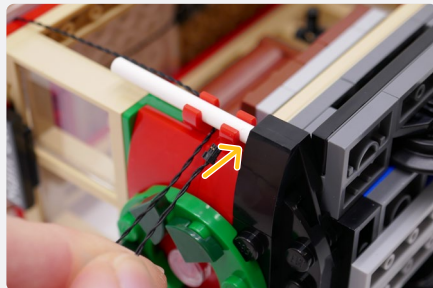 
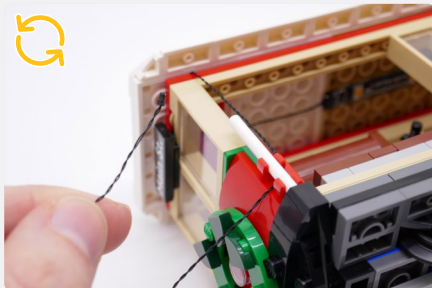 
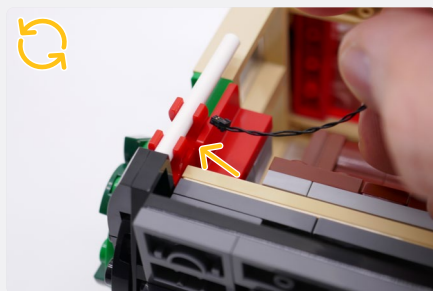 
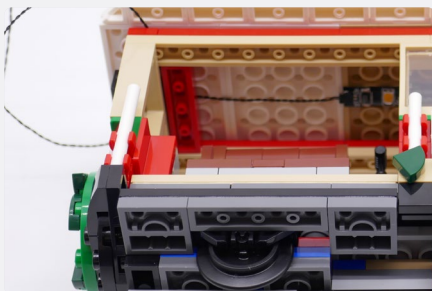 
 







6-Port Expansion Board

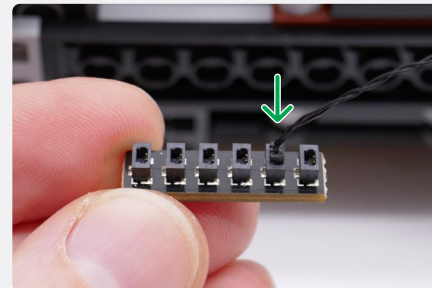 







41

          
 
 
 
 
 
42

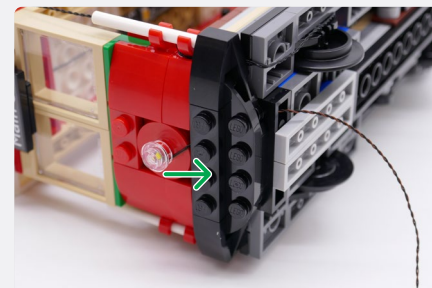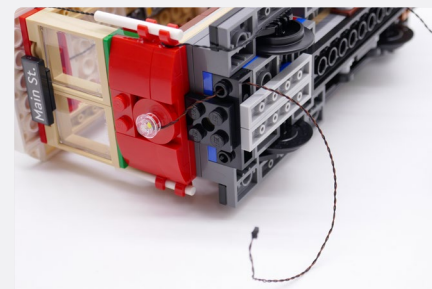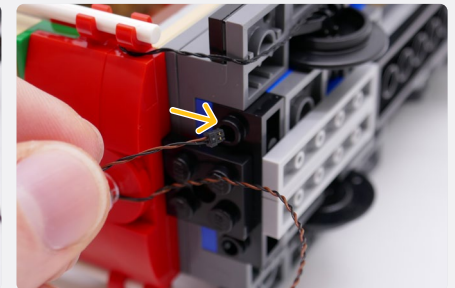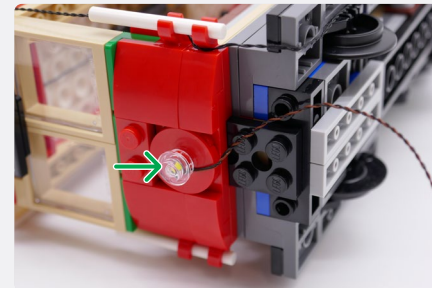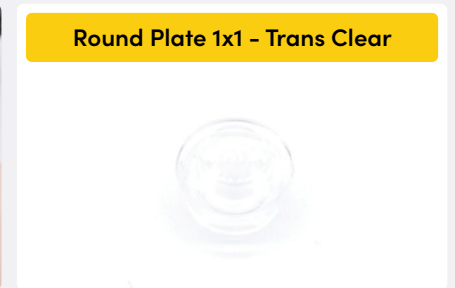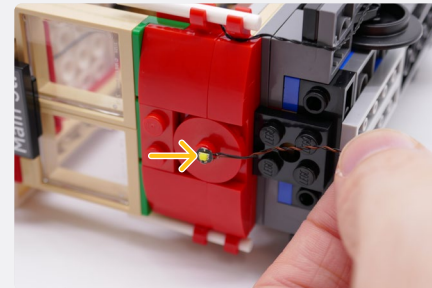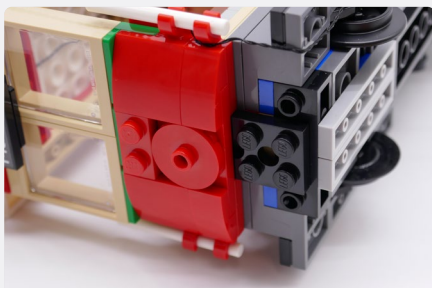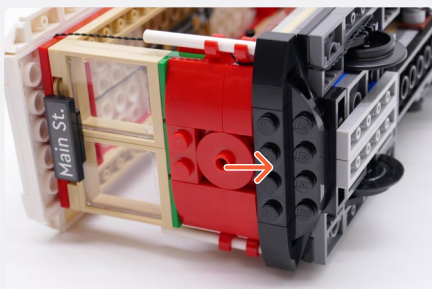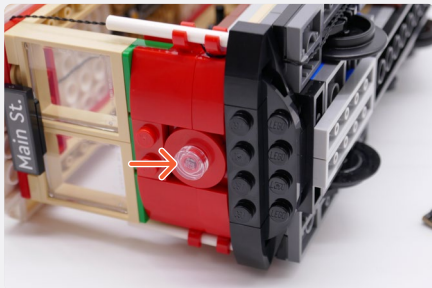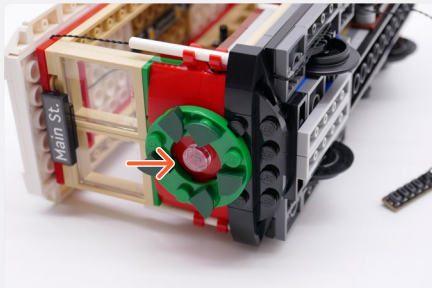

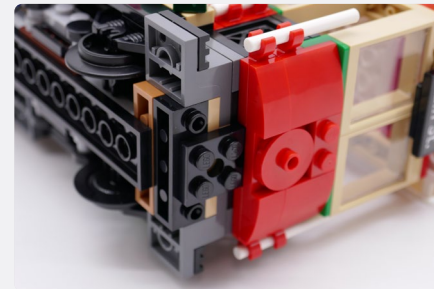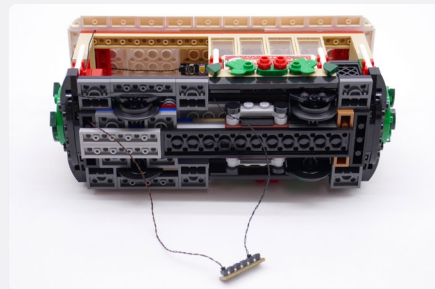
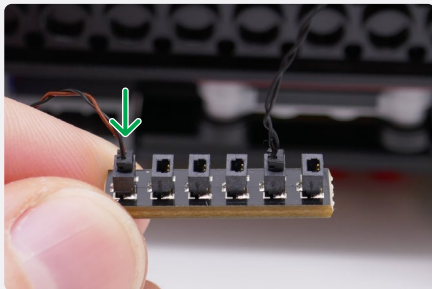
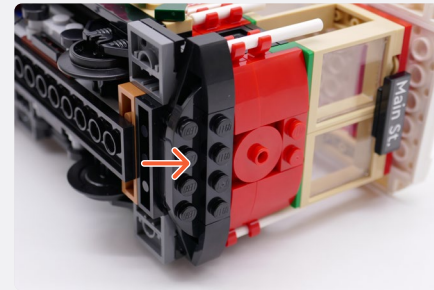
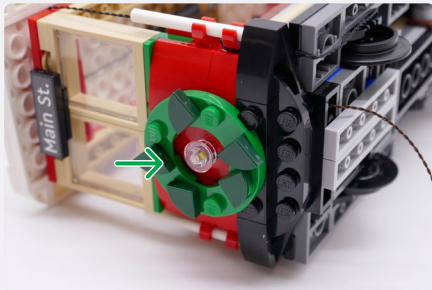




43

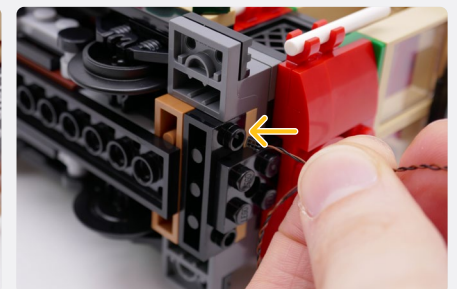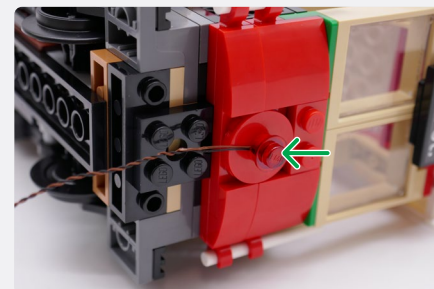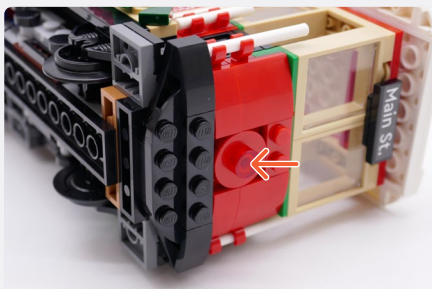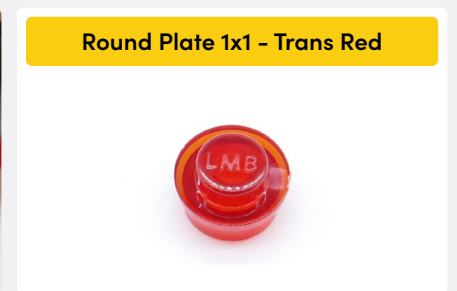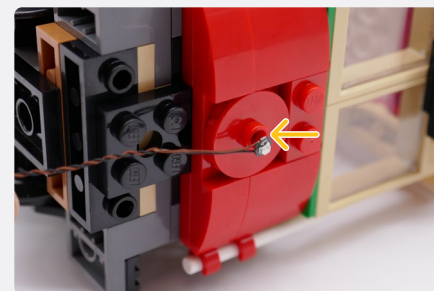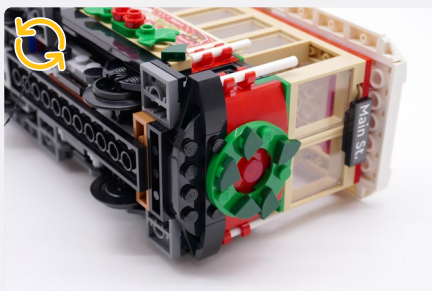      

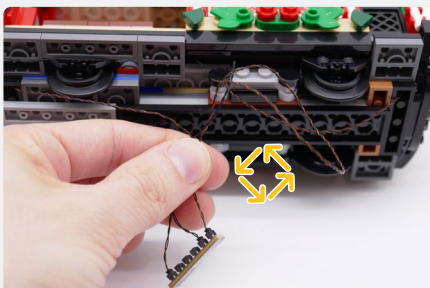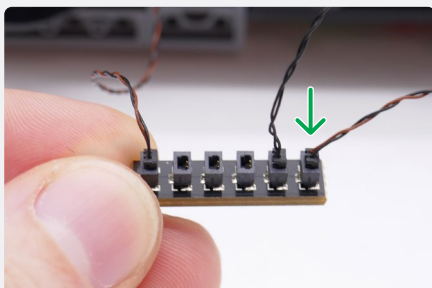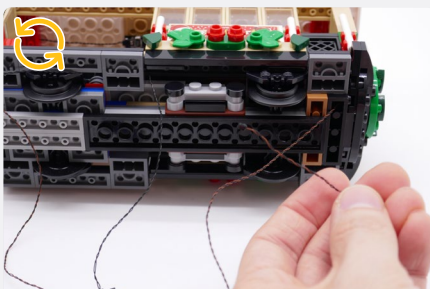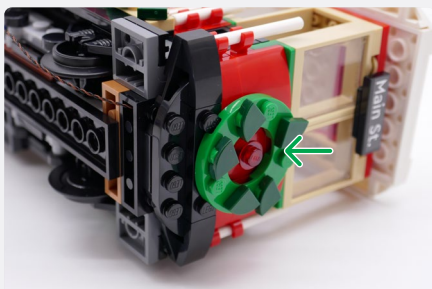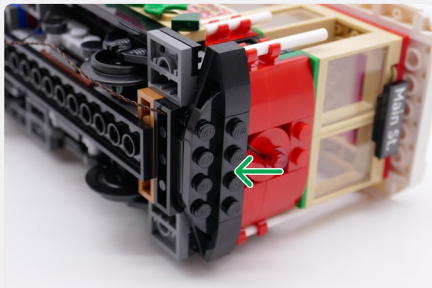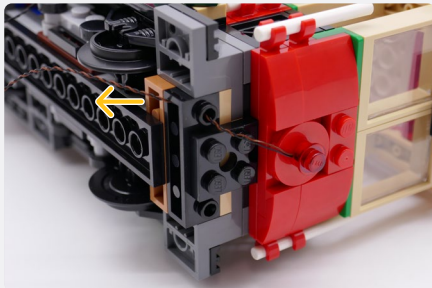      


44

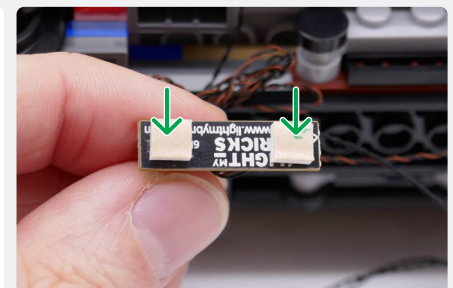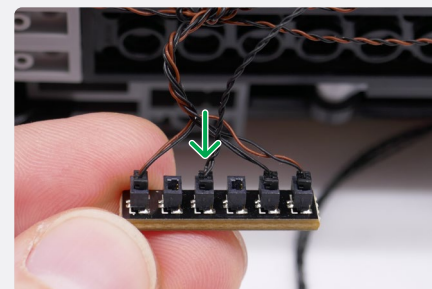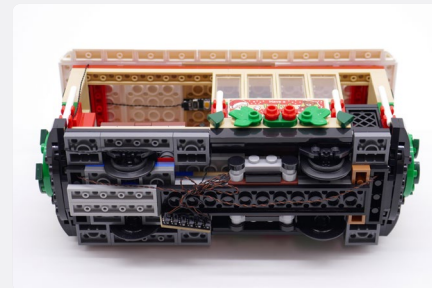   
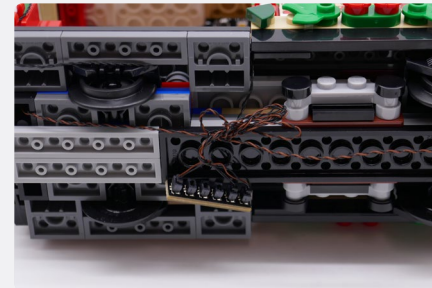 


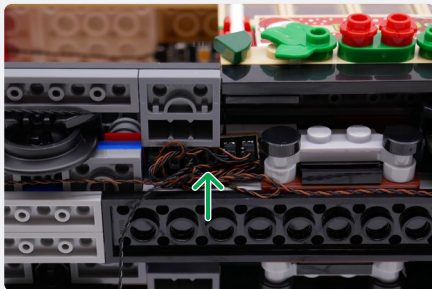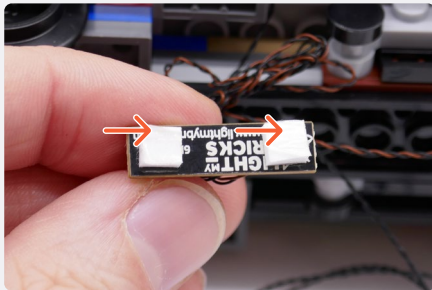  


45

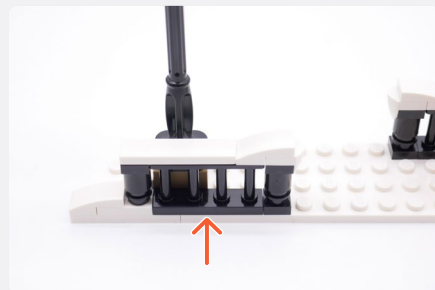 


46

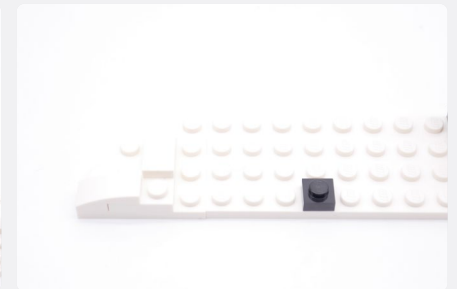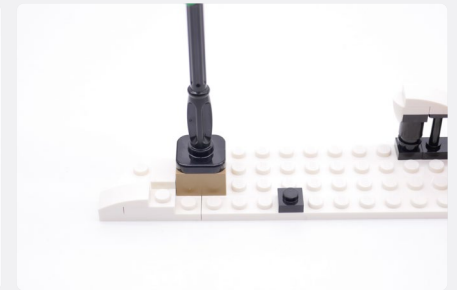  

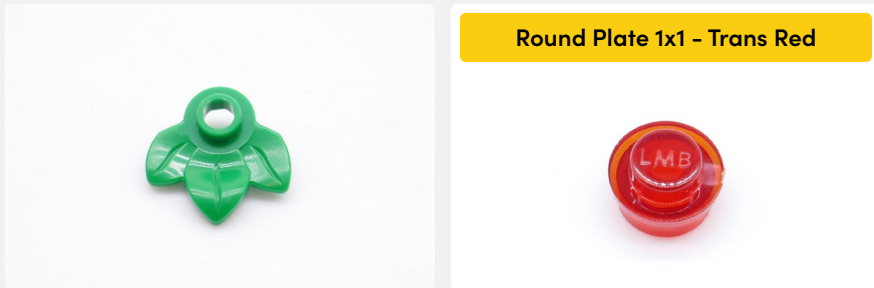 

Round Plate 1x1 - Trans Red

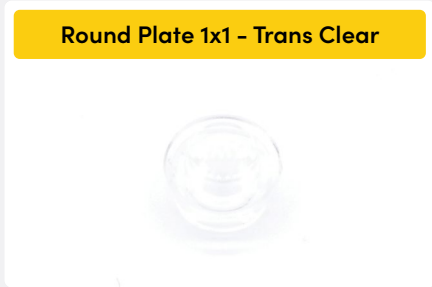 



Round Plate 1x1 - Trans Clear




White 15cm Bit Light



  47


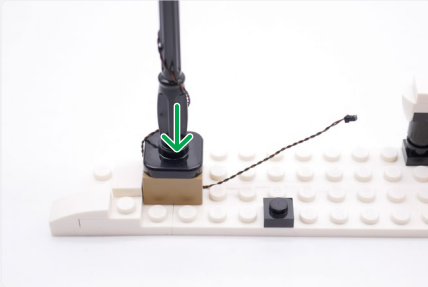
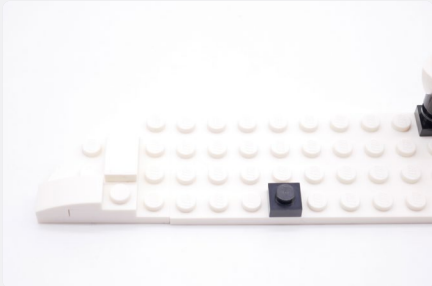


6-Port Expansion Board

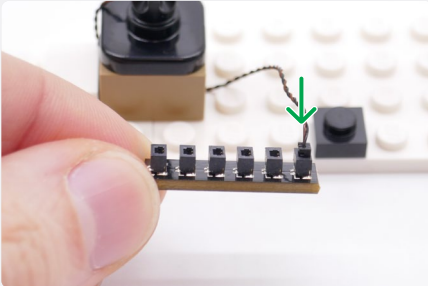 

NOTE

   Connect the 50cm Connecting Cable from the Tram to the Tram Stop.

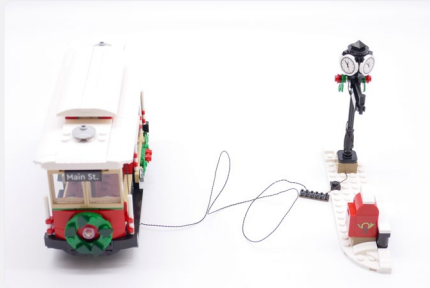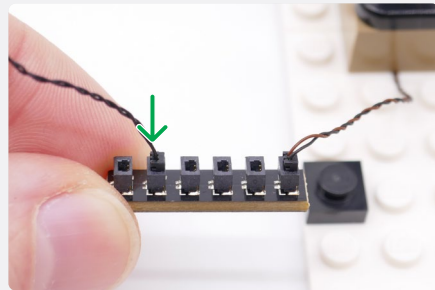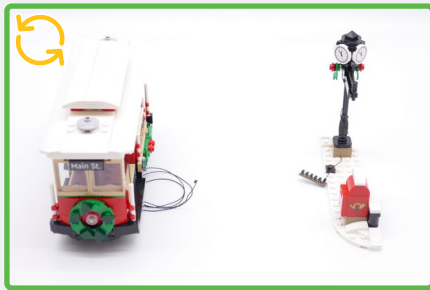


48




NOTE






 
Connect the 50cm Connecting Cable from the front of the Toy Store to the Tram Stop.

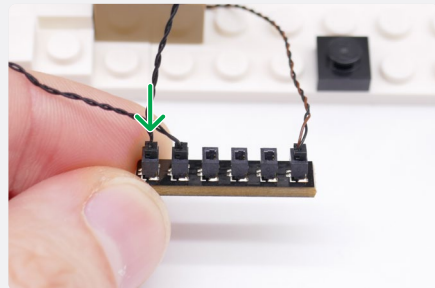


49

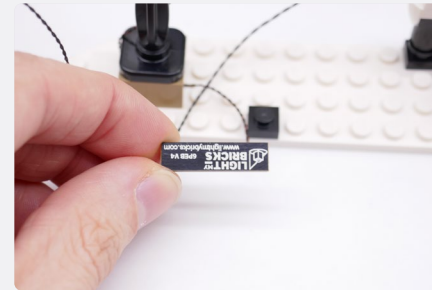 



2x Adhesive Square

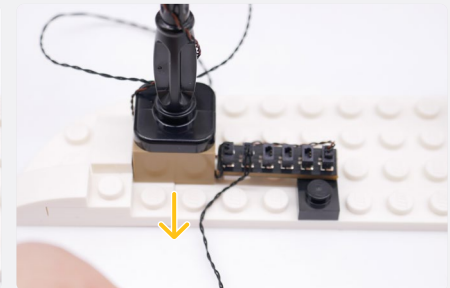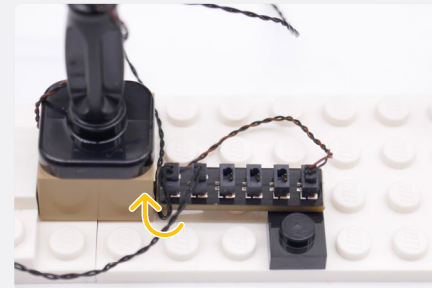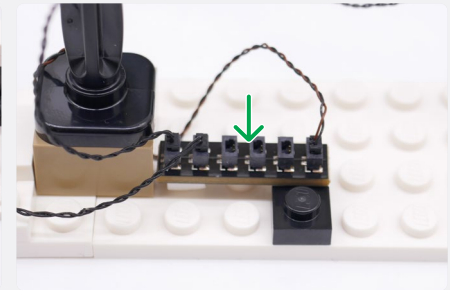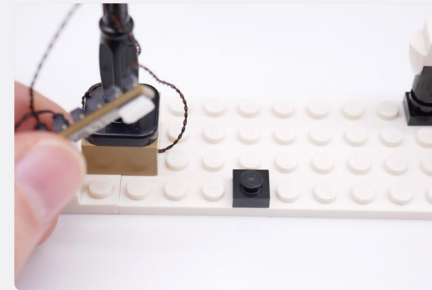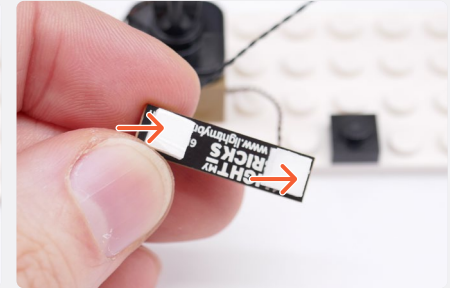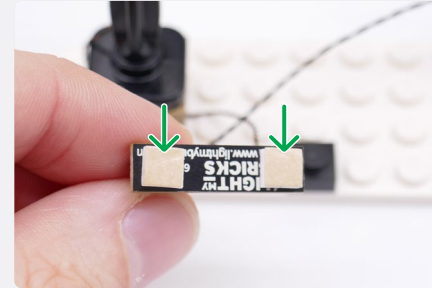      

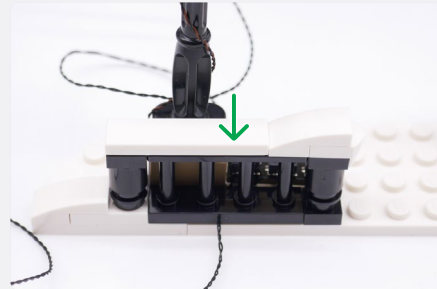 



NOTE

  Twist up any excess cable between the Tram and Tram Stop. Tuck it under the Tram.

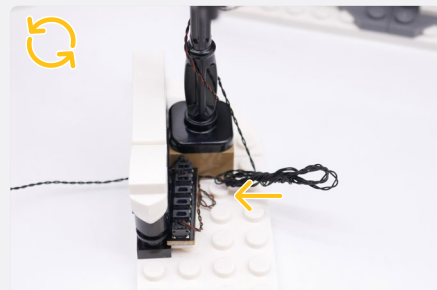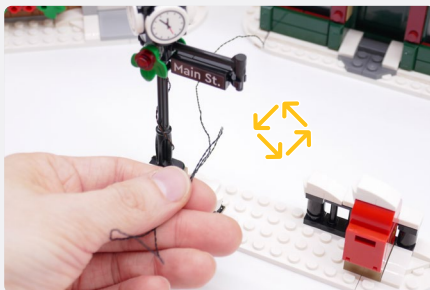

50

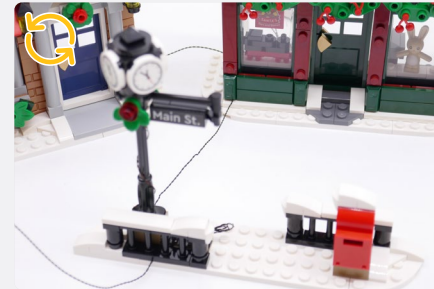 


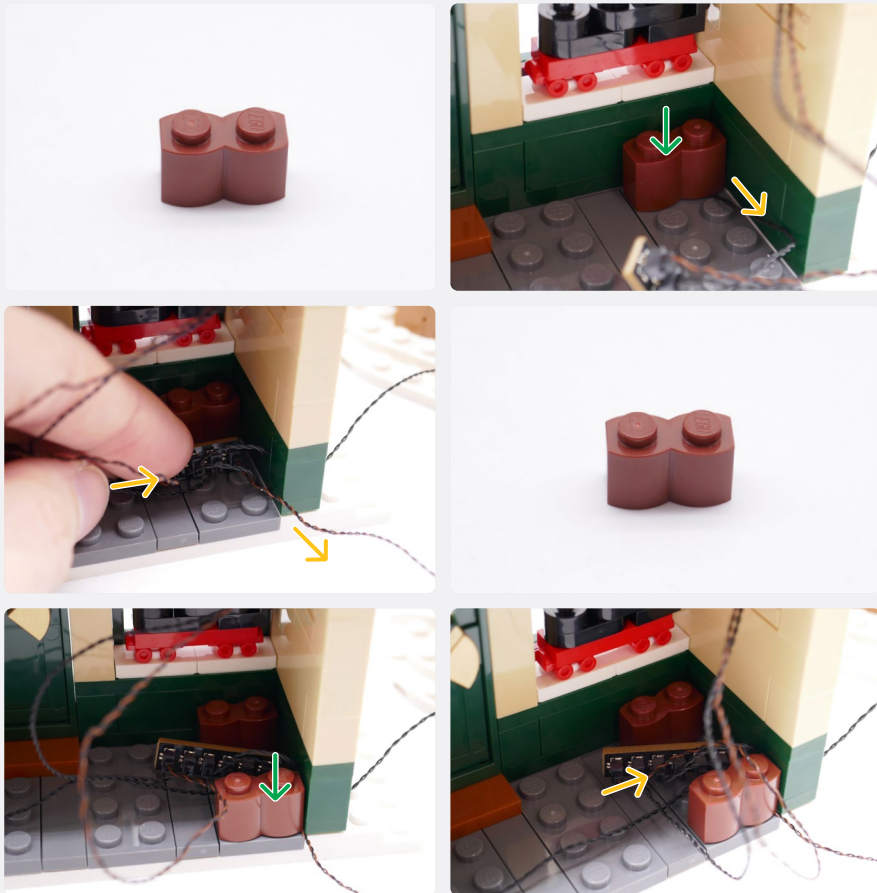 

51



 NOTE
Pull any excess cable up the wall into the ceiling area, to have the cables running flat on the wall.

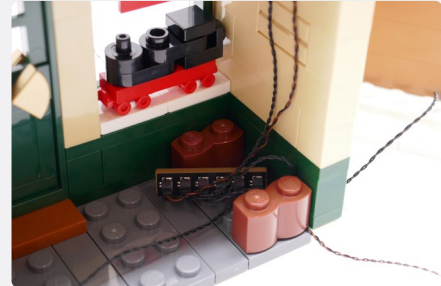

NOTE

Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)



NOTE

You should have these parts left over that were removed from the LEGO set



! If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section. i

FINAL PRODUCT

This finally completes installation of the Light My Bricks

LEGO® Holiday Main Street 10308 Light Kit.





TROUBLESHOOTING

Light My Bricks lighting kits contain individual components that are very small and can be easily damaged if not handled correctly.

To prevent unnecessary damage to components, we highly recommend that the User Guide section, **“Important things to note”** is read carefully. Follow the handling procedures in the User Guide to help prevent faults and damages to your Light My Bricks components.

If you are experiencing issues with your Light My Bricks set, watch our troubleshooting video or read on for a list of common causes to help you troubleshoot.



Wenn Sie Probleme mit Ihrem Light My Bricks-Set haben, sehen Sie sich unser Video zur Fehlerbehebung an oder lesen Sie die Auflistung der häufigsten Ursachen, die Ihnen bei der Fehlersuche helfen hier.



Si vous rencontrez des problèmes avec votre kit Light My Bricks, regardez notre vidéo de dépannage ou consultez la liste des causes les plus fréquentes pour vous aider à les résoudre ici.



Se si verificano problemi con il set Light My Bricks, guardare il nostro video per la risoluzione dei problemi o leggere l'elenco delle cause più comuni per la risoluzione dei problemi qui.

Troubleshooting

Firstly, ensure that the batteries have power using a battery charge gauge.

 
If the batteries have no power, replace the batteries.

If the batteries still have power, check to see if the batteries have been inserted correctly into the battery pack.

Check for AA batteries using the AA battery pack

Inside the battery pack are symbols indicating which direction the AA battery should be inserted. The flat side of the battery should be paired with the spring side of the battery pack.

If the batteries have been installed correctly and your kit still isn't operating correctly, the next step is to check the wiring.

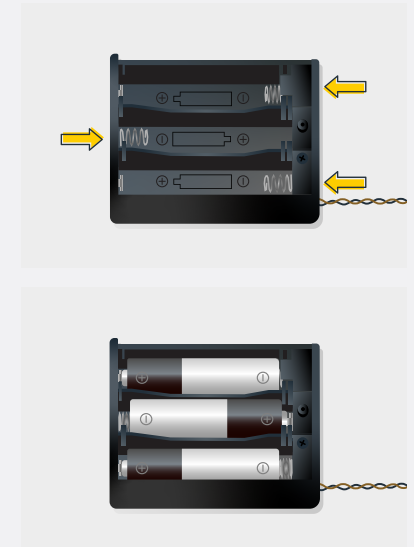

Troubleshooting

Check Your Wires

 
 
In order for Light My Bricks components to fit in between and underneath LEGO® bricks, the components need to be very small. Due to this nature, Light My Bricks components can be easily damaged when not handled correctly.

Be careful when removing unpacked components out of the packaging and ensure not to forcibly pull at the wires as this can damage the soldering that attach the wires to the LEDs.

If the wiring is detached from the LED itself, the light will not operate.

When connecting lights to your LEGO® set, check that there are no pinched wires underneath or in between bricks and plates.

When the wires are pinched and the exposed wires are touching each other, this can cause a crosswire and the lights to not function correctly.

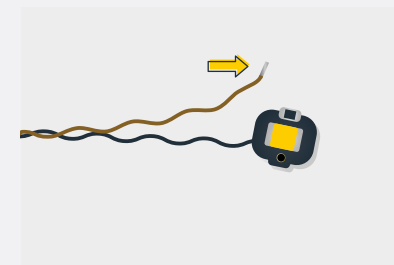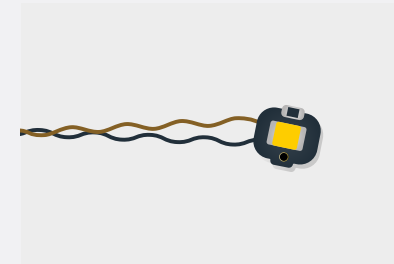


Troubleshooting

Check Your Expansion Board Ports/ Strip Light Ports / Effects Board Ports

It is important to note that connectors can only be inserted to the expansion board, strip light, or effects board ports in one direction.

Forcibly inserting connectors in the incorrect direction will result in damaging the pins inside each of the ports on your component board.


 
Not only will a light connected to the damaged port not work, but if the pins inside the port are bent to a point they are touching each other, this can result in all other lights in the system to stop working. This is a short circuit.

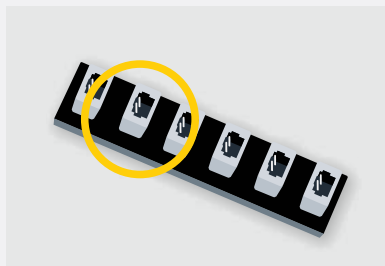

A short circuit can also result in overheating of the board, cable or batteries. If you suspect a short circuit, **DISCONNECT POWER IMMEDIATELY**. Batteries can fail, catch fire, or even explode if left connected to a short circuit for too long.

If you suspect you have a faulty component due to a bent pin, try the following steps:

  If you look carefully inside each of the ports, each port contains 2 small pins that should be straight. You will be able to identify a faulty port if it has any bent pins.

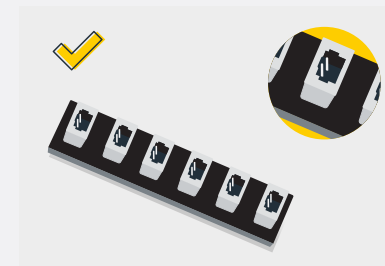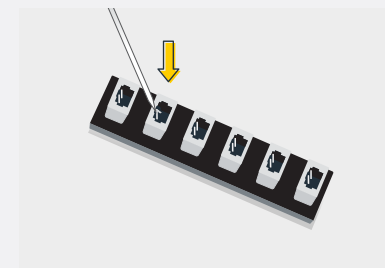



CONTACT US

If you have an enquiry regarding the online shop, our products or a general enquiry please refer to our Frequently Asked Questions webpage.

Alternatively, you can contact our Customer Services team by visiting our online support portal.

support.lightmybricks.com

We thank you for purchasing this product and hope you enjoy!



lightmybricks.com