



**LIGHT^{MY}
BRICKS**



**LEGO[®] DUNGEONS & DRAGONS:
RED DRAGON'S TALE #21348
INSTALLATION GUIDE**

Light My Bricks



LEGO® DUNGEONS & DRAGONS: RED DRAGON'S TALE 21348 INSTALLATION GUIDE

Hi There!

We're here to help you get started on the LEGO® Dungeons & Dragons: Red Dragon's Tale 21348 Light Kit. This PDF details the instructions for the LED light kit only.

If you run into any issues, please refer to the troubleshooting section towards the end of this guide.

Have fun and enjoy!

INSTALLATION GUIDE





PACKAGE CONTENTS:

Individual Bags



- 6 x Yellow 30cm Bit Light *
- 2 x Green 30cm Bit Light
- 2 x Pink 30cm Bit Light
- 1 x Light Blue 30cm Large Bit Light
- 1 x Red 30cm Large Bit Light
- 3 x Yellow 30cm Large Bit Light
- 1 x Orange 30cm Large Bit Light
- 3 x Wireless Power Connector set

Mixed Components 1



- 4 x 2-Port Expansion Board
- 5 x 6-Port Expansion Board
- 1 x Flicker Effects Board
- 6 x Adhesive Squares

Connecting Cables



- 1 x 5cm Connecting Cable
- 3 x 15cm Connecting Cable
- 1 x 30cm Connecting Cable
- 1 x 50cm Connecting Cable

USB Power Cable



- 1x USB Power Cable
(Power Source not Included)

Mixed Components 2



- 5 x Technic, Brick 1 x 1 with Hole - Black
- 1 x Brick 1x2 - Black
- 2 x Tile, Modified 1x1 with Open O Clip - Black
- 2 x Bracket 1 x 2 - 1 x 2 Inverted - Black
- 1 x Brick, Round 1x1 - Black

Mixed Components 3





- 5 x Plate 1x2 - Black
- 1 x Plate, Round 2 x 2 with Rounded Bottom (Boat Stud)
- 4 x Plate, Round 1x1 Open Stud - Trans Orange
- 2 x Plate, Round 1x1 Open Stud - Trans Clear
- 2 x Plate, Round 1x1 with Bar Handle - Black
- 7 x Plate, Round 1x1 Open Stud - Black
- 1 x Tile 1x2 - Light Bluish Grey

* Indicates components which include spares

Contents

Before You Begin	5
Blueprint	10
Instructions	11
Final Product	57
Troubleshooting	58
Contact	62



Before You Begin

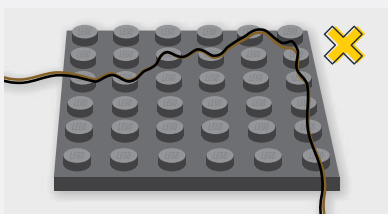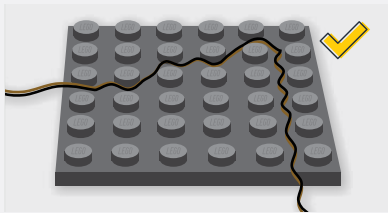

Laying cables in between and underneath bricks

Cables can fit in between and underneath LEGO® bricks, plates, and tiles providing they are laid correctly between the LEGO® studs. Do NOT forcefully join LEGO® together around cables; instead ensure they are laying comfortably in between each stud.

CAUTION: Forcing LEGO® to connect over a cable can result in damaging the cable and light.

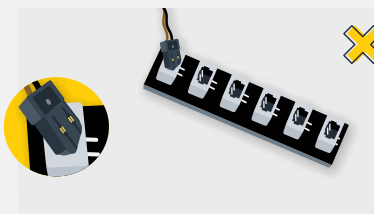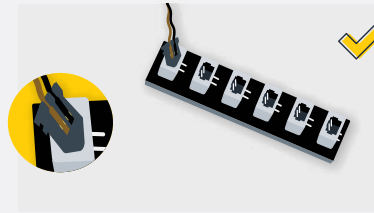

Connecting Cable Connectors To Expansion Boards

Take extra care when inserting connectors to ports of Expansion Boards. Connectors can be inserted only one way. With the expansion board facing up, look for the soldered “=” symbol on the left side of the port. The connector side with the wires exposed should be facing toward the soldered “=” symbol as you insert into the port. If a plug won't fit easily into a port connector, do not force it.

Incorrectly inserting the connector can result in bent pins inside the port or possible overheating of the expansion board when connected.

Before You Begin



Connecting Cable Connectors To Strip Lights

Take extra care when inserting connectors to ports on the Strip Lights. Connectors can be inserted only one way. With the Strip Light facing up, ensure the side of the connector with the wires exposed is facing down. If a plug won't fit easily into a port connector, don't force it. Doing so will damage the plug and the connector.




Connecting Micro Cable Connectors To Micro Expansion Board Ports

Take extra care when inserting the micro connectors to micro ports of Micro Expansion Boards. Connecting Micro Bit Lights to Micro Expansion Boards is similar to connecting lights and cables to Strip Lights. With the expansion board facing up, ensure the side of the connector with the wires exposed is facing down. If a plug won't fit easily into a port connector, do not force it. Use your fingernail to push the plastic part of the connector to the micro port.

Before You Begin

Installing Bit Lights Under Lego® Bricks And Plates

When installing Bit Lights under LEGO® pieces, ensure they are placed the correct way up (Yellow LED component exposed). You can either place them directly on top of LEGO® studs or in between.

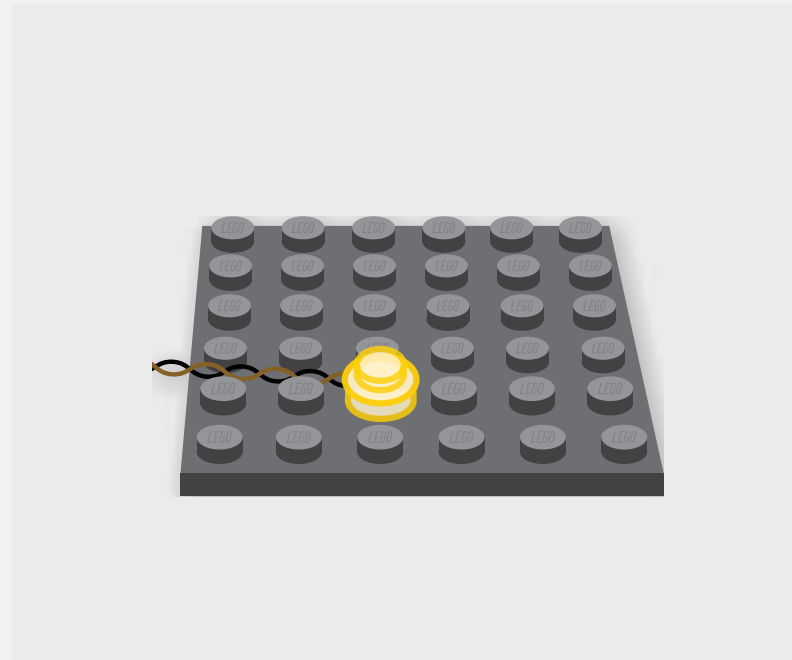

Before You Begin

The Symbols Used In This Guide

When going through the following guide you will come across symbols and formats that will assist with the installation of your light kit. Take notice of them as each has a specific purpose.

Light Kit Component

This is the most important image format as it indicates which part to use from the Light Kit. Make sure you pay close attention to which part is shown.

White 30cm Bit Light



Connect

Used when you need to connect a LEGO piece or LMB component.



Disconnect

Used when you need to remove a LEGO piece/ section or LMB component.



Directional

Used to show where to route cables, place components, or move them.



Bend/Pivot

Used when a component needs to be bent, or part folded or pivoted.



Turn/ Flip

Will be found in the top left corner when the set needs to be rotated or flipped.



Twist/ Braid

Seen when a set of cables need to be grouped and twisted together.



Power On Test

Found at the end of a major step to test the lights. Will be located in the top left corner.



Note

Notes will be found alongside the instruction photos and explain what to do.



Before You Begin

Repeat Step

Repeat the previous step eg. Make a spotlight, then make a second spotlight.



Connect Focus

Used to highlight a hard to see area where a component is being connected.



Disconnect Focus

Used to highlight a hard to see area where a component is being disconnected.



General Focus

Used to highlight a hard to see area where a component needs to be acted on.



General Note


This is a sample note that is used anywhere in this guide. It will explain a difficult section where photos are hard to illustrate or easily confused.

Connect Note

The green coloured note is used when the topic focuses on a component being connected, like the shown Power Bank.

 
Disconnect Note


The red coloured note is used when the topic focuses on a component being disconnected or like here, the removed pieces.



NOTE

Take the 5cm Connecting Cable from the 4-Port Micro Expansion Board and route it into the "IN" port of the Flicker Effects Board

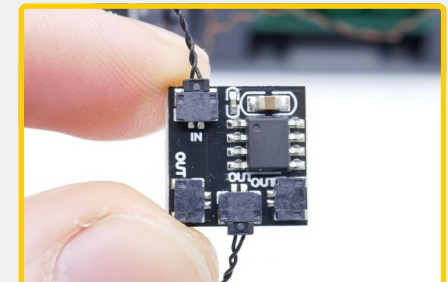




NOTE

 
Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)





NOTE

You should have these parts left over that were removed from the LEGO set

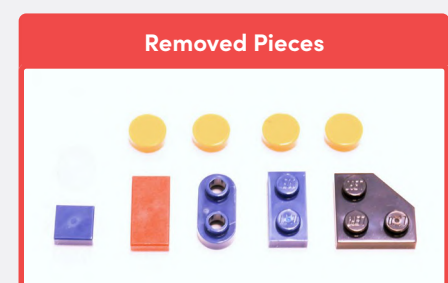




BLUEPRINT

Steps 1-18

Steps 19-26

Steps 27-37

 Steps 38-56

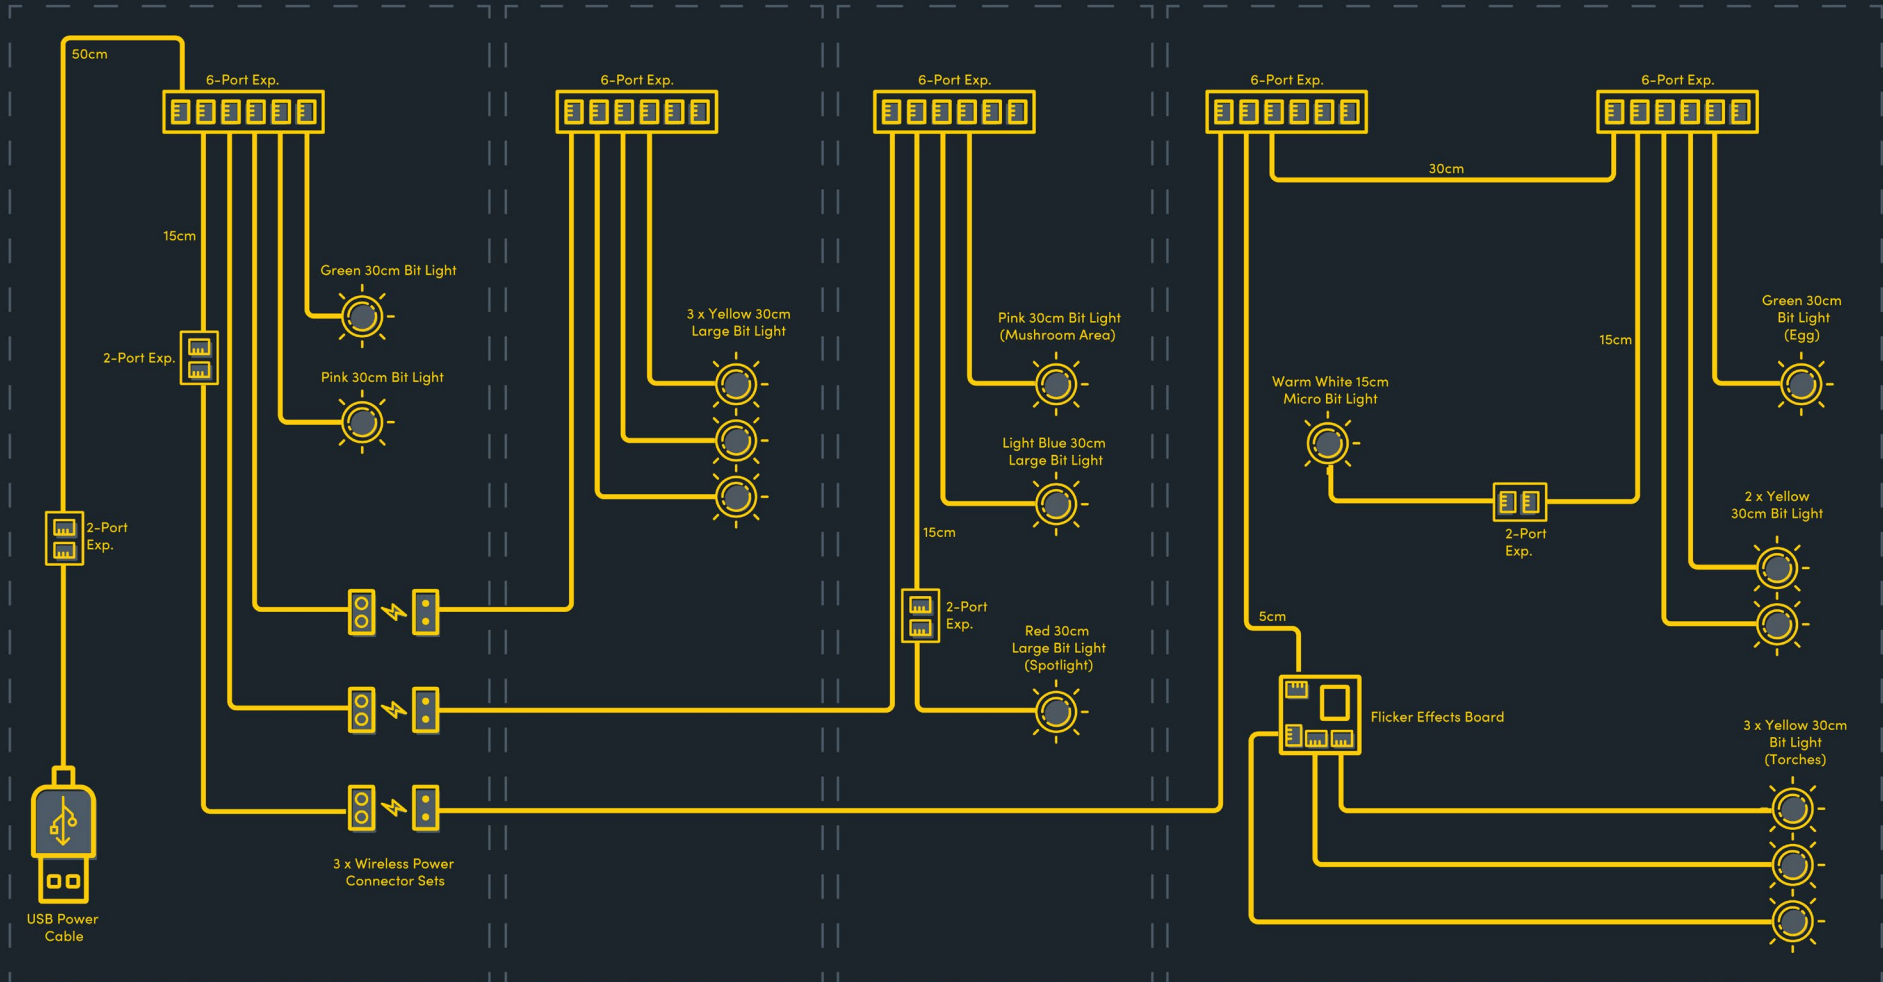



INSTRUCTIONS

To ensure a smooth installation of your light kit, please read and follow each step carefully. If you run into any issues, please refer to the online troubleshooting guide.



Wenn Sie Probleme mit Ihrem Light My Bricks-Set haben, sehen Sie sich unser Video zur Fehlerbehebung an oder lesen Sie die Auflistung der häufigsten Ursachen, die Ihnen bei der Fehlersuche helfen hier.

 


Si vous rencontrez des problèmes avec votre kit Light My Bricks, regardez notre vidéo de dépannage ou consultez la liste des causes les plus fréquentes pour vous aider à les résoudre ici.









Se si verificano problemi con il set Light My Bricks, guardare il nostro video per la risoluzione dei problemi o leggere l'elenco delle cause più comuni per la risoluzione dei problemi qui.

1

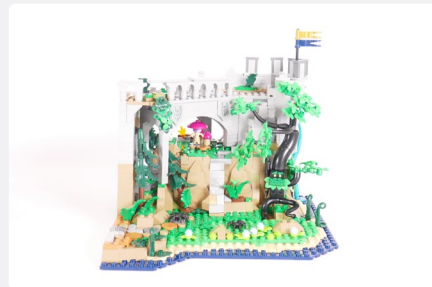


2




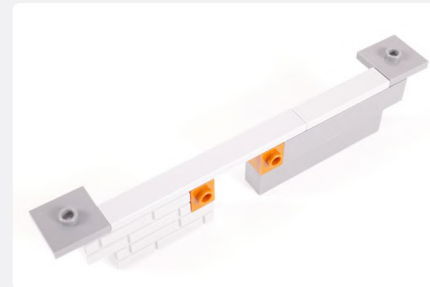 
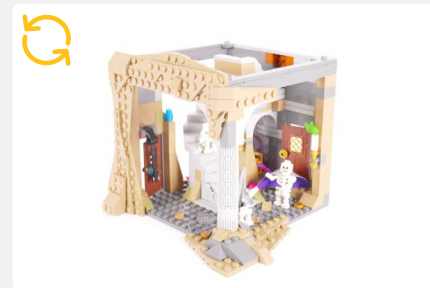 


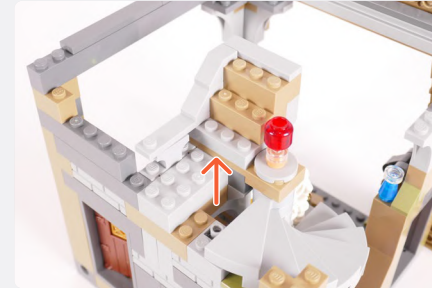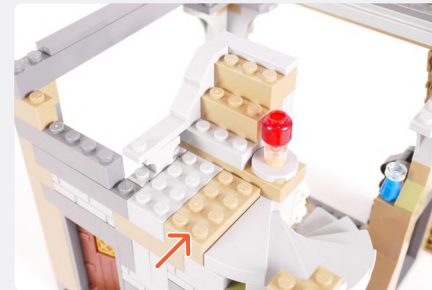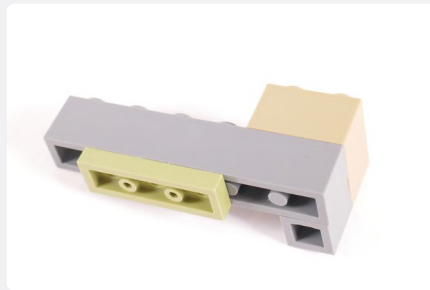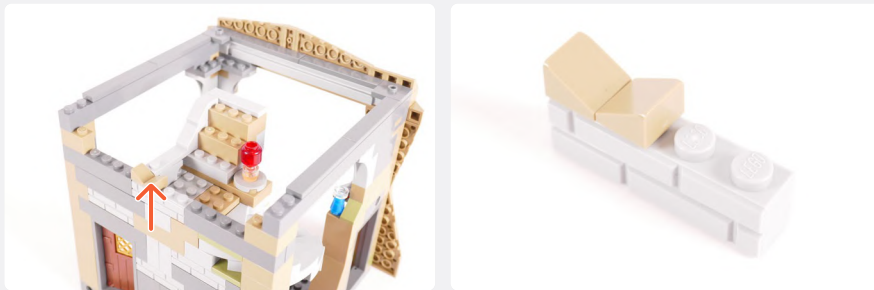    



3

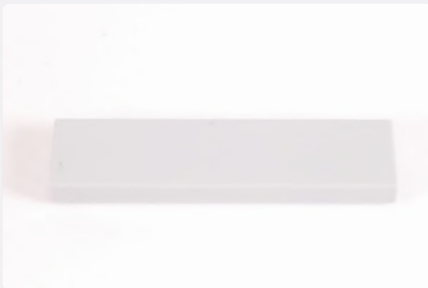 

     Tile 1x2 with Groove - Light Bluish Gray

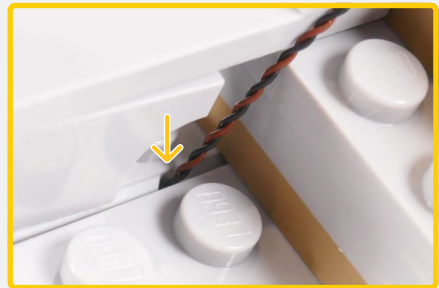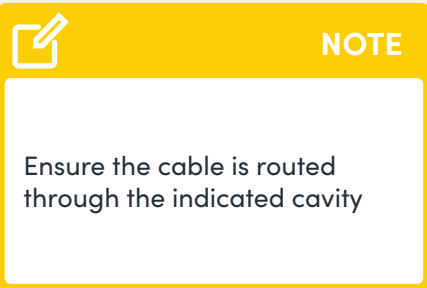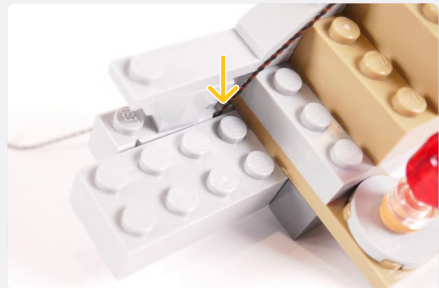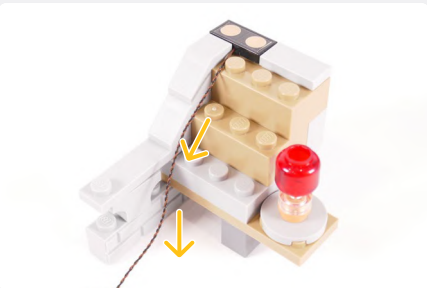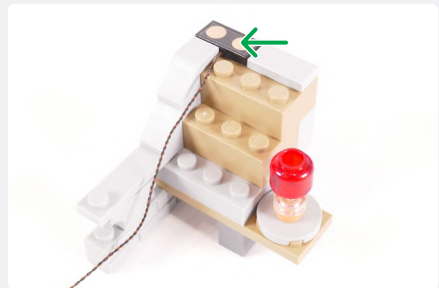


4

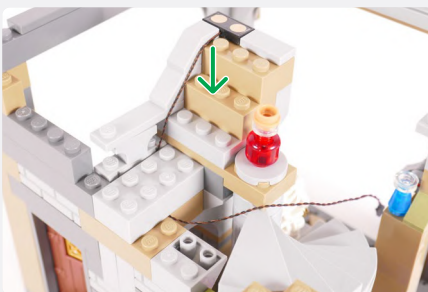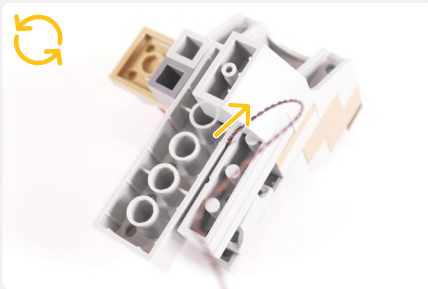  




5







 
Pink 30cm Bit Light

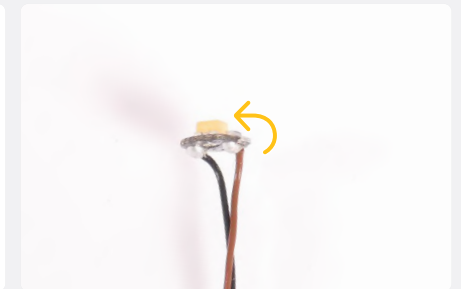



Plate, Round 1x1 with Open Stud - Black

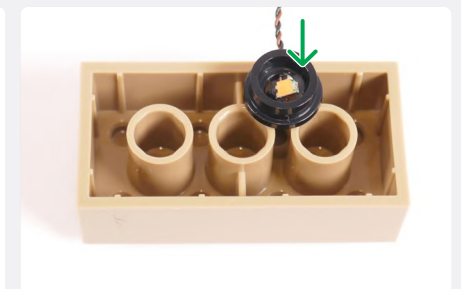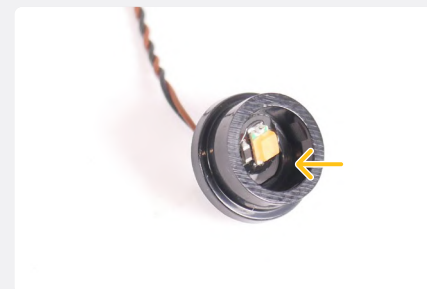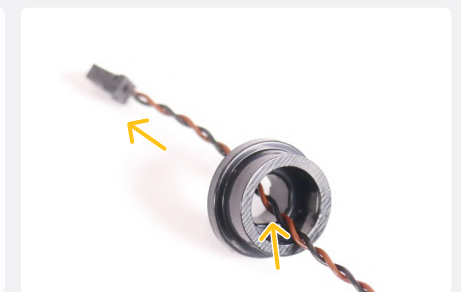   


6

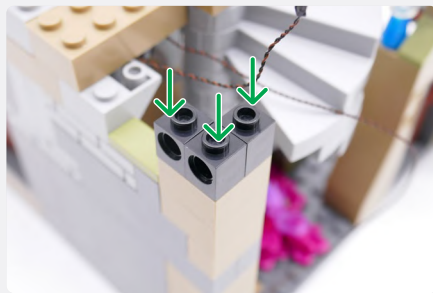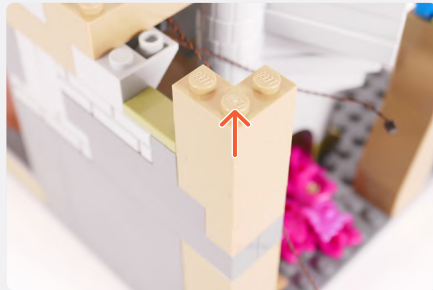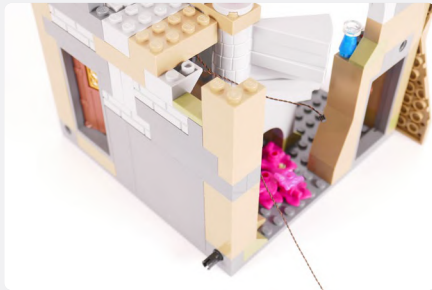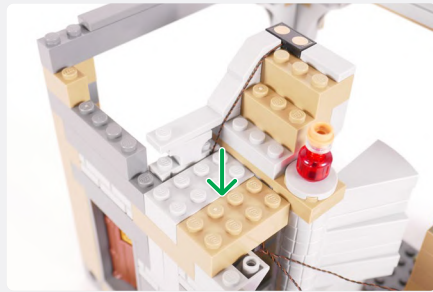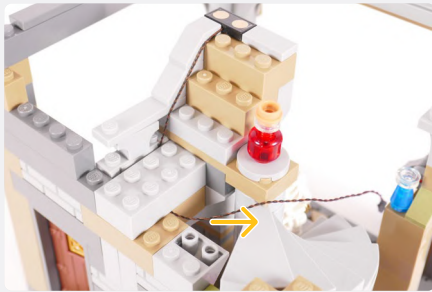     


Wireless Power Connector Plate

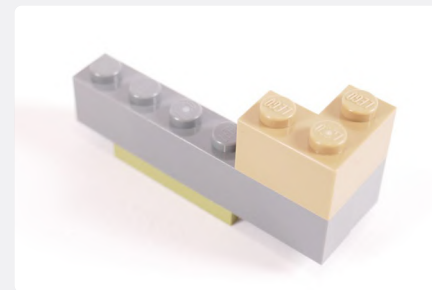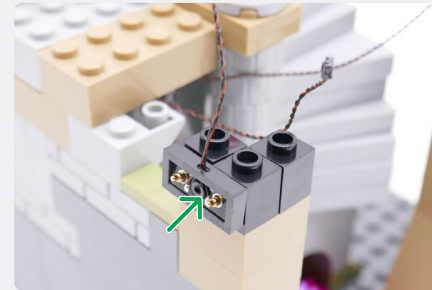  


7

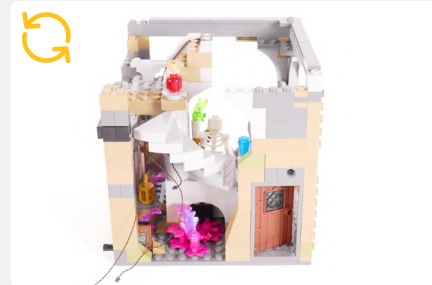 

 **NOTE**

 
Slowly and carefully, partially disconnect the following section from the base

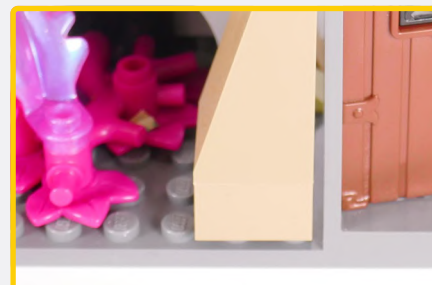

8



 Brick 1x2 - Black



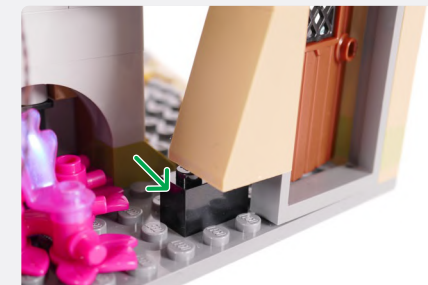



2 x Technic, Brick 1x1 with Hole - Black




9

   
Wireless Power Connector Plate

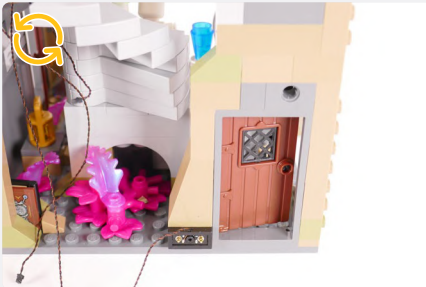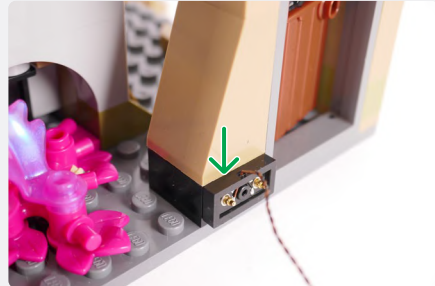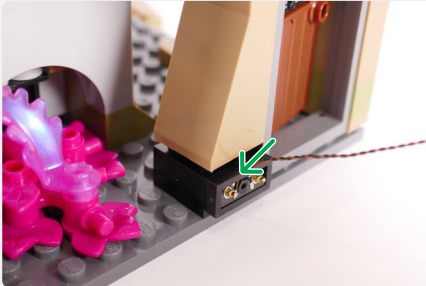




15cm Connecting Cable

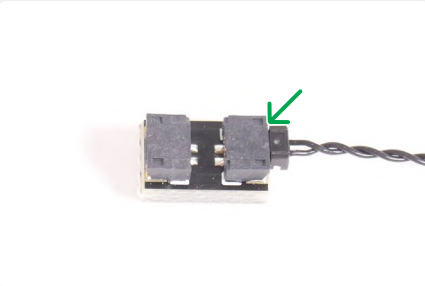 

2-Port Expansion Board

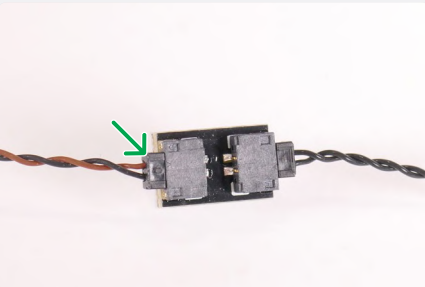 

10

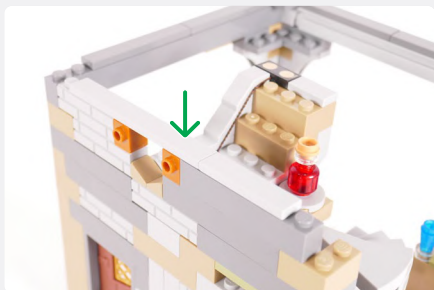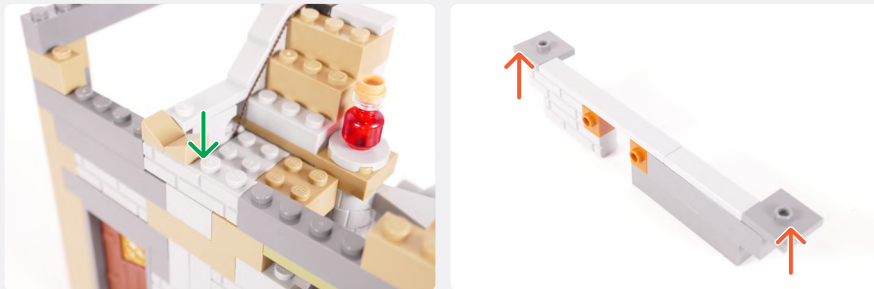  
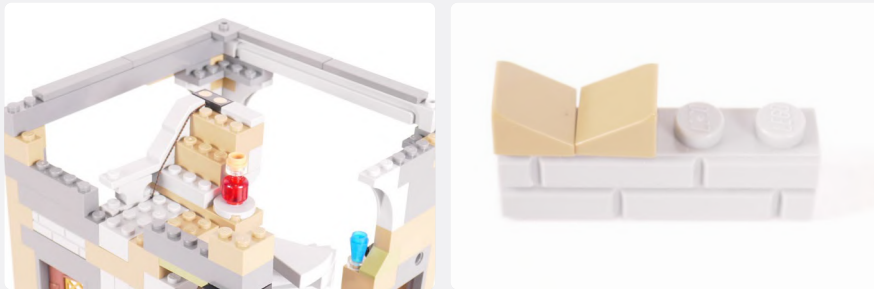 


11

Green 30cm Bit Light



  Plate, Round 1x1 with Open Stud - Black

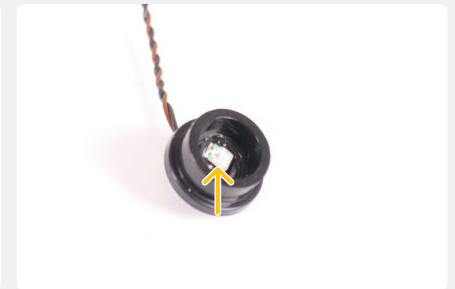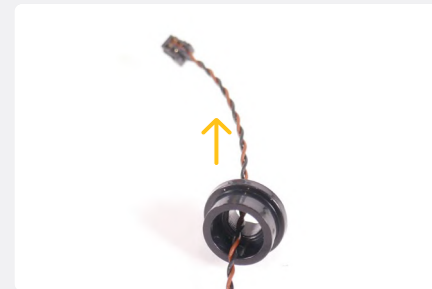




Tile, Modified 1x1 with Open O Clip - Black







Plate, Round 1x1 with Bar Handle - Black



   12

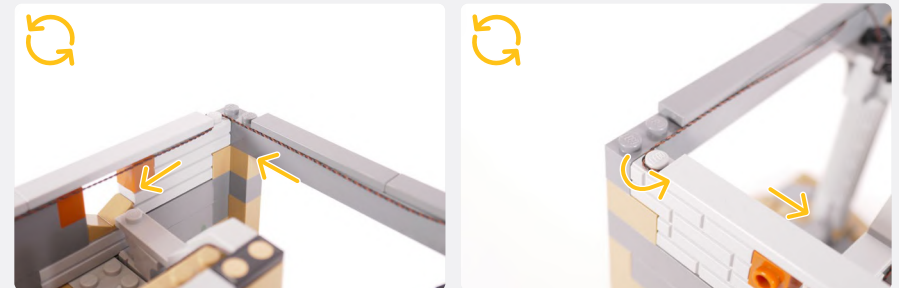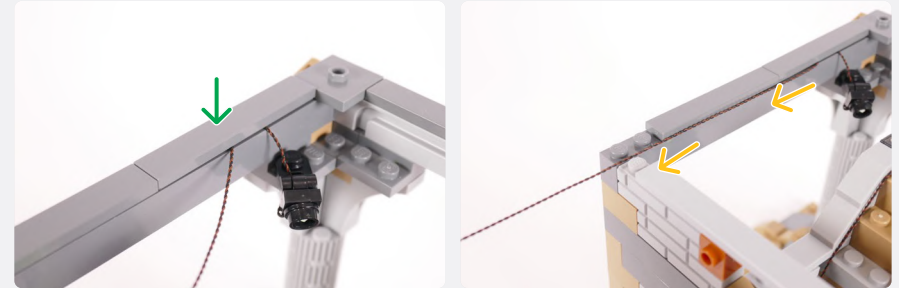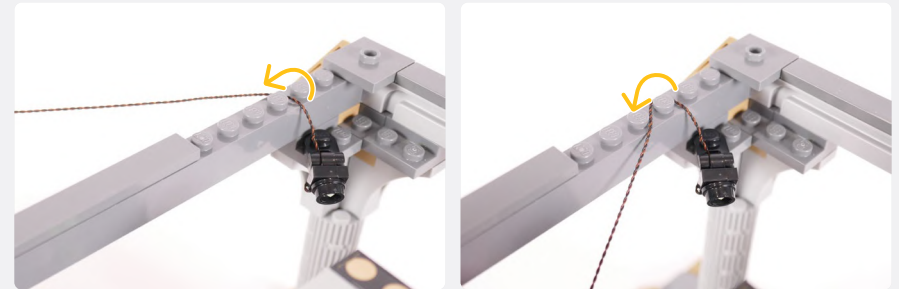

13

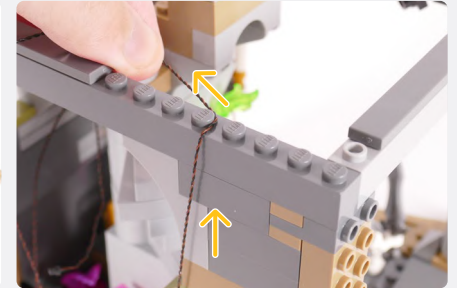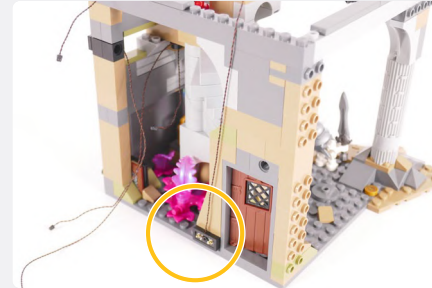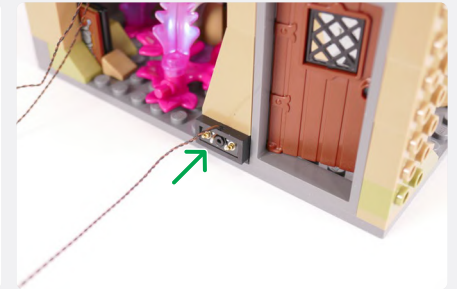   
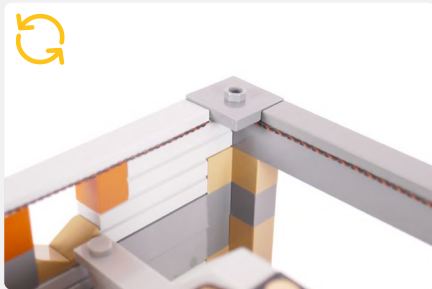 


14

50cm Connecting Cable






  2-Port Expansion Board

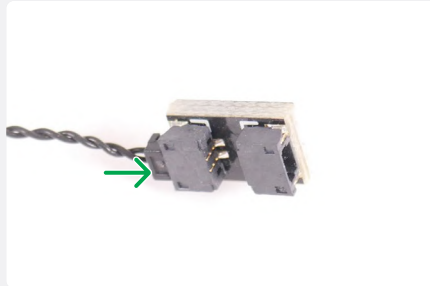

NOTE

   Leave about 20cm of cable slack from the 2-Port Expansion Board to the base of the set



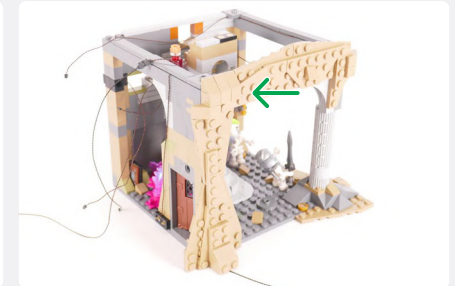
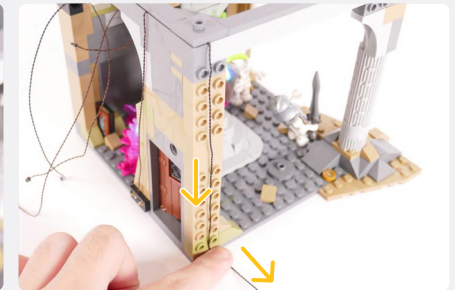
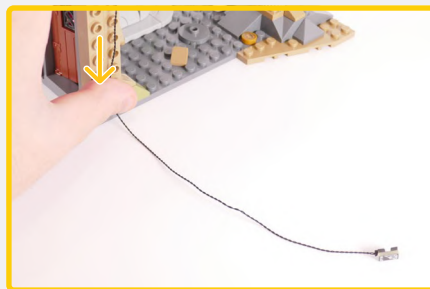


15



NOTE

     Take the three cables from the top and route it as shown

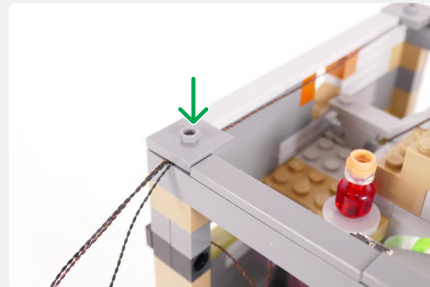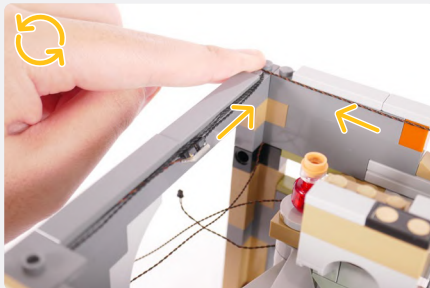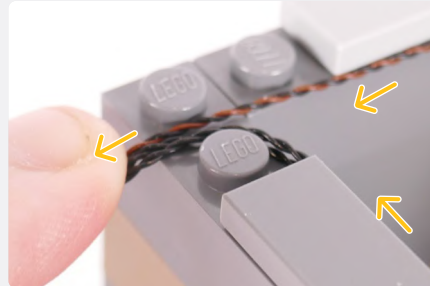
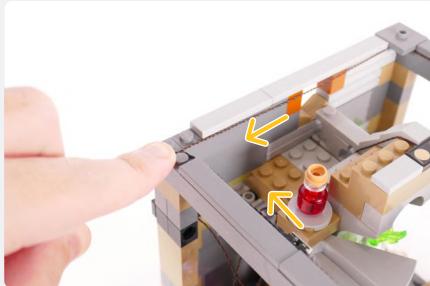
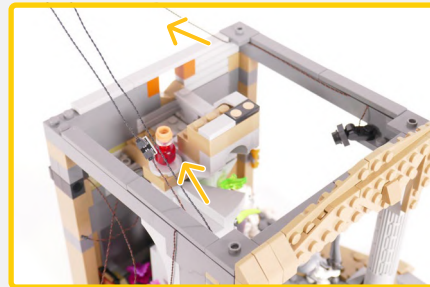


16



NOTE


 
 
 
Pull all the cables towards each other

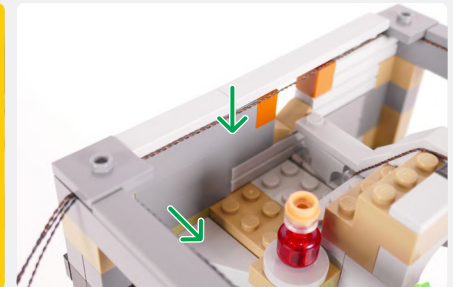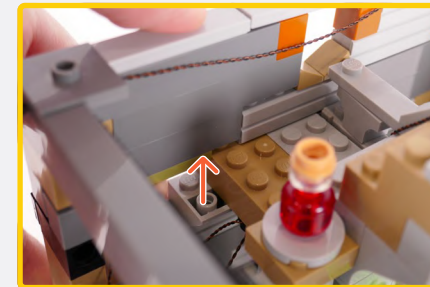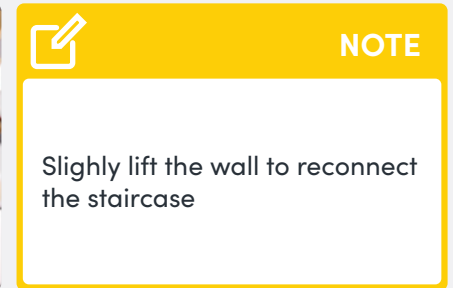

NOTE



Slightly lift the wall to reconnect the staircase

    17

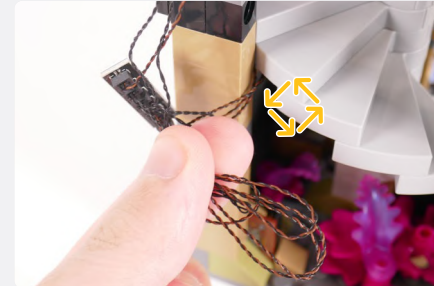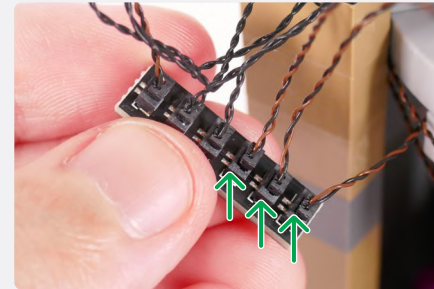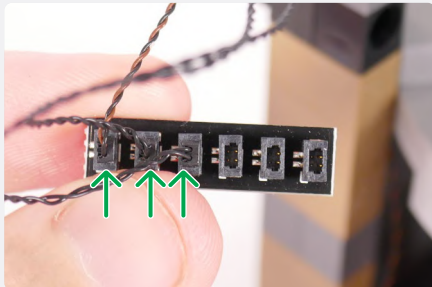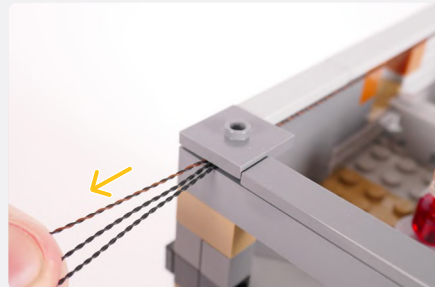


NOTE

  Push the board against the wall until the Adhesive Squares flatten and the Board fits in between the stairs and wall

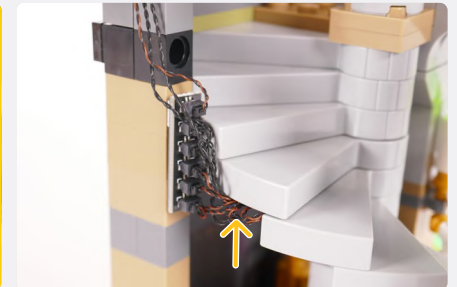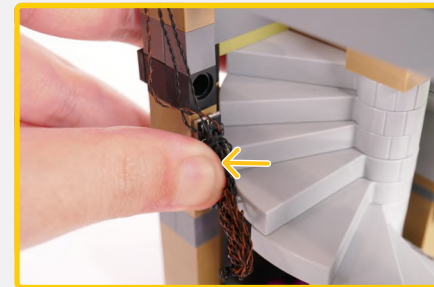

NOTE

 Push the bunched up cables beneath the steps of the stairs

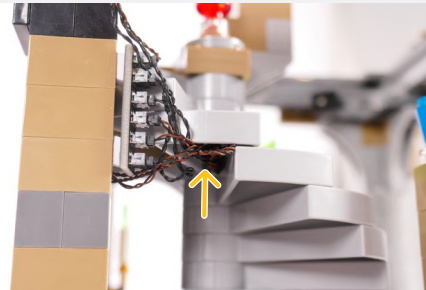


18



NOTE

 Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)

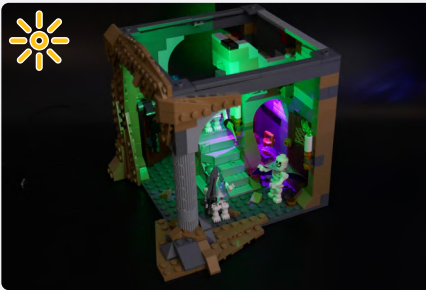

! If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section. **i**



19



20




Bracket 1x2 - 1x2 Inverted - Black








Plate 1x2 - Black



 
Wireless Power Connector Tile

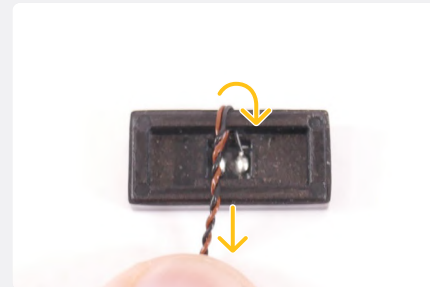



21

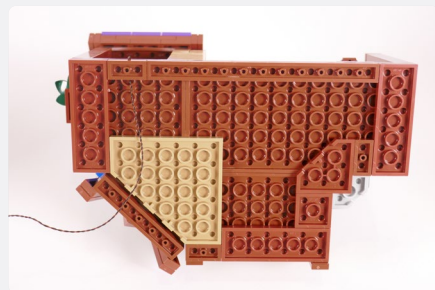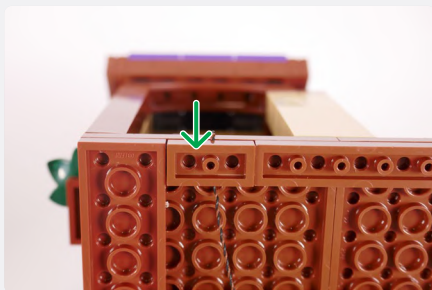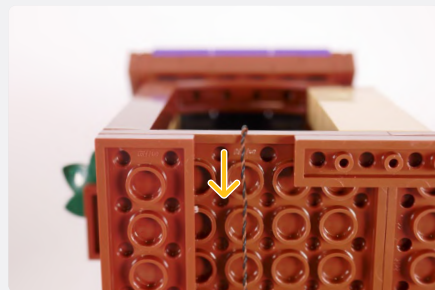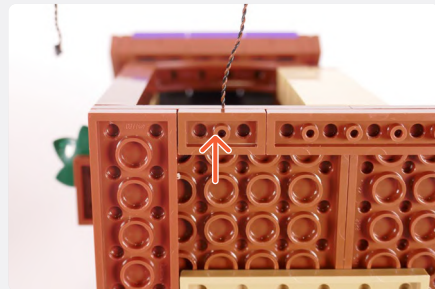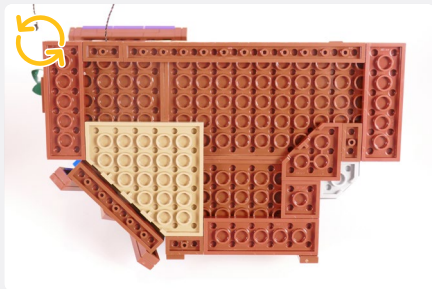     


Yellow 30cm Large Bit Light

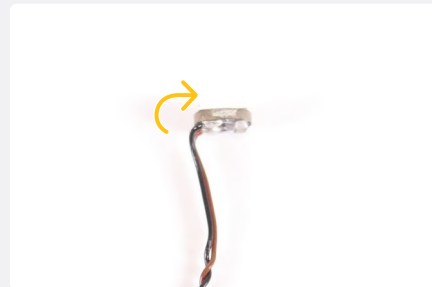 


Plate, Round 1x1 with Open Stud - Black

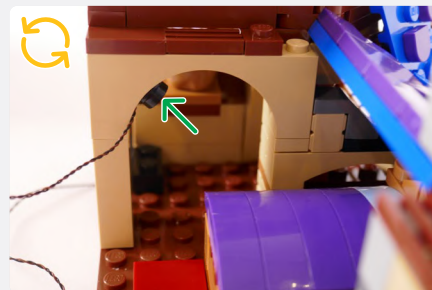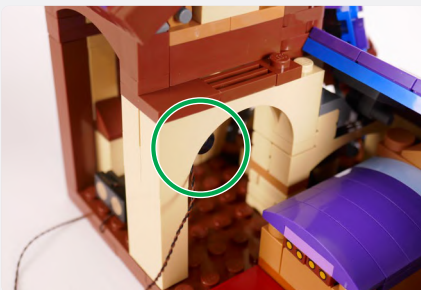  

22

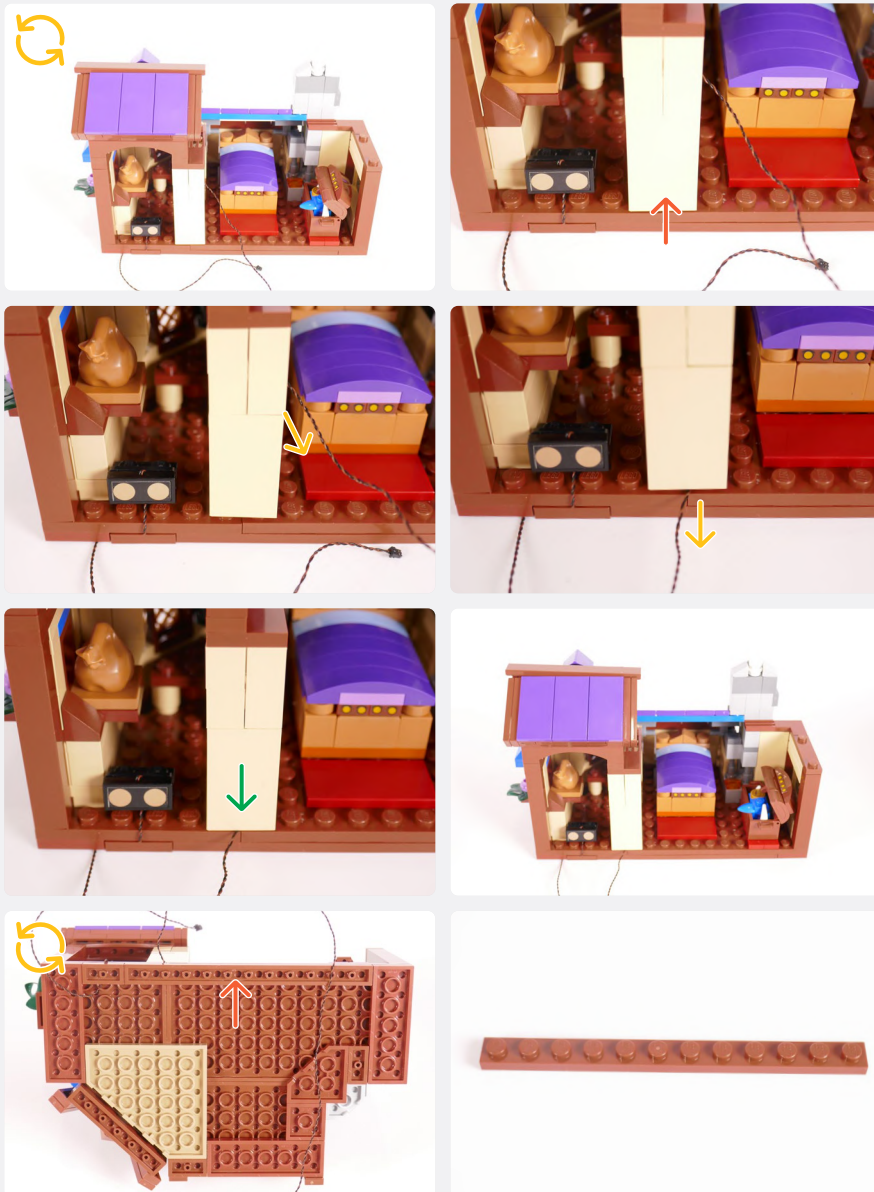 

23

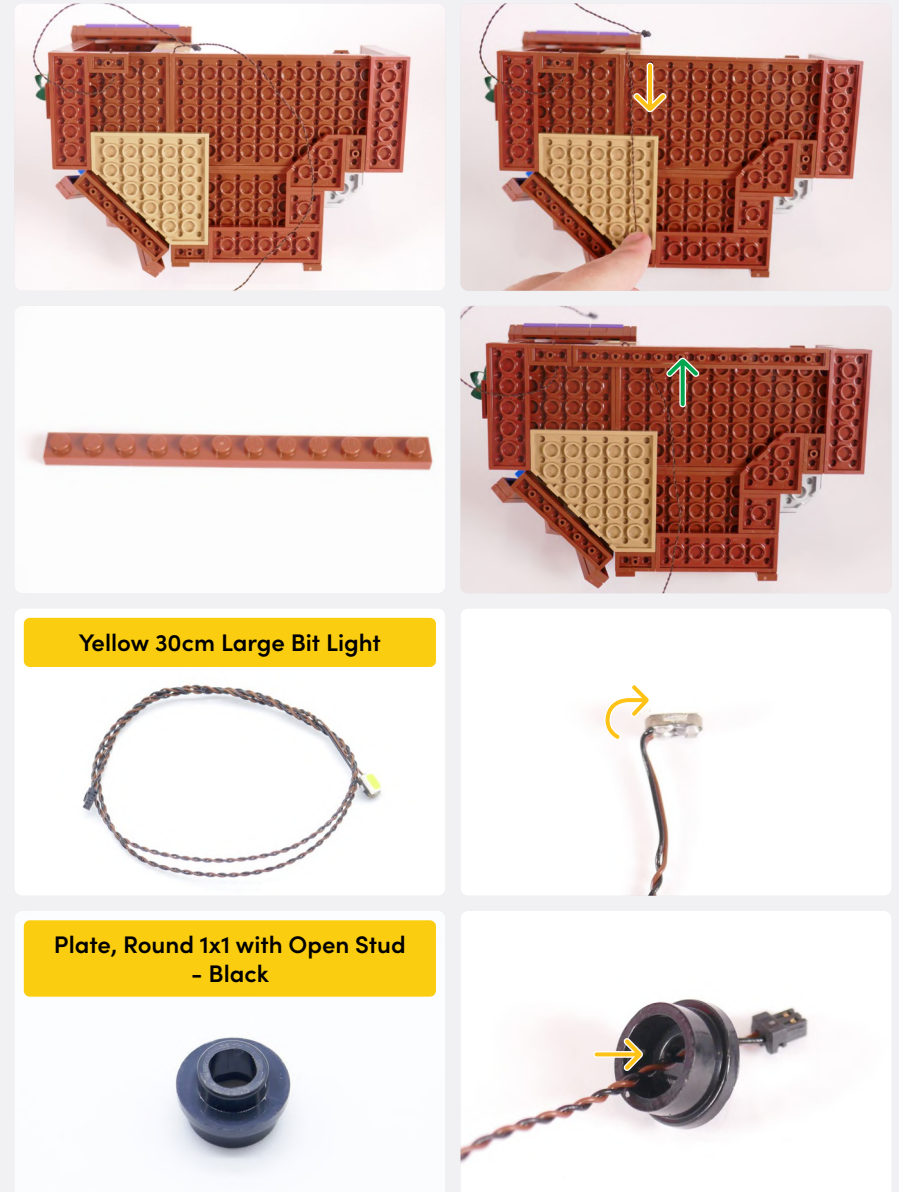 











Yellow 30cm Large Bit Light



Plate, Round 1x1 with Open Stud - Black





          24

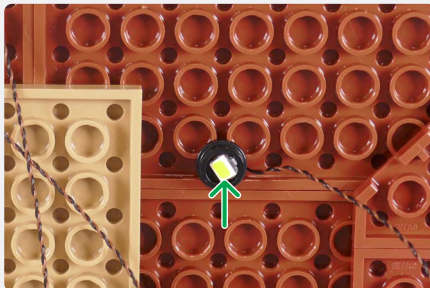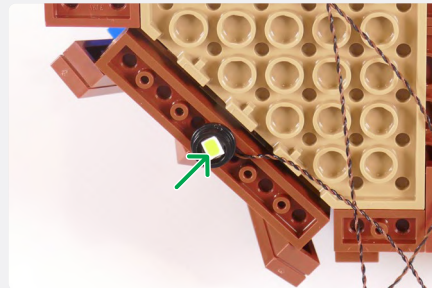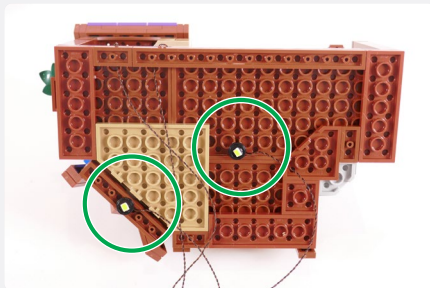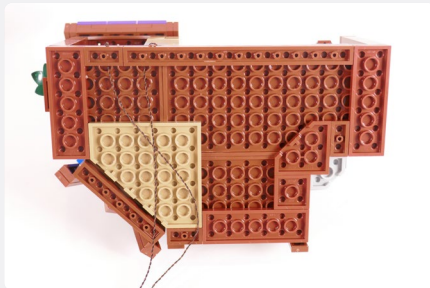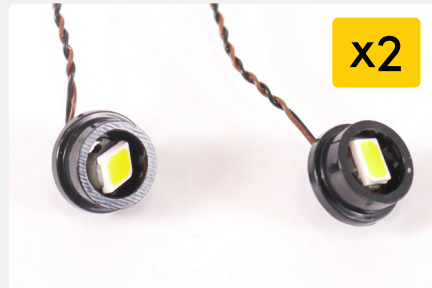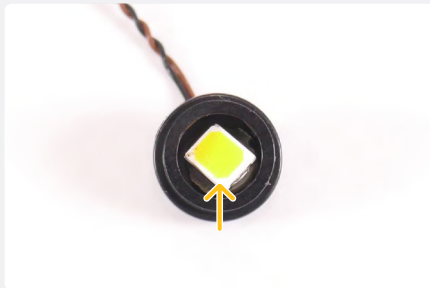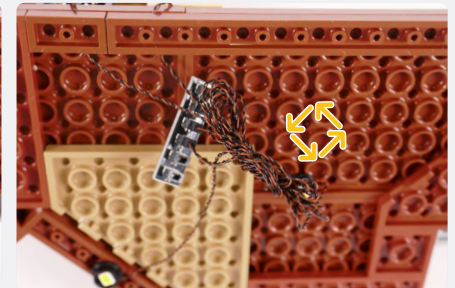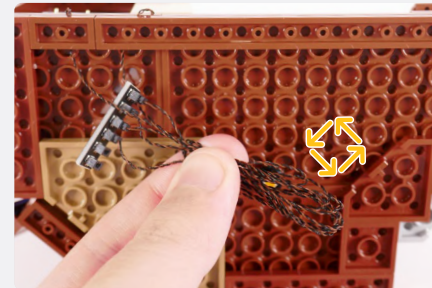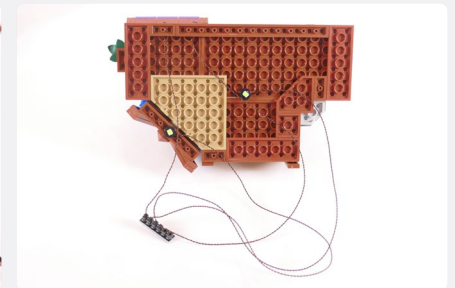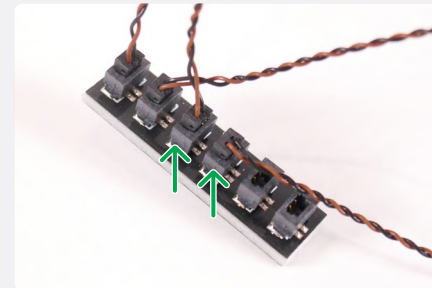
6-Port Expansion Board


NOTE

 
 
Position the Expansion Board inbetween the tubes so that the board gets stuck. If you're having trouble, twist the cables very tight so the board is stuck in position instead.

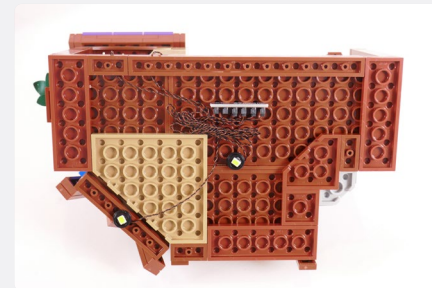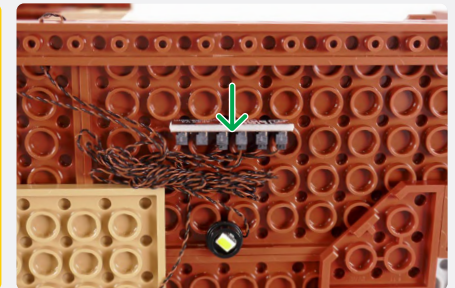


25

NOTE

  When reconnecting the two sections back together, ensure the Wireless Power Connectors are aligned and touching

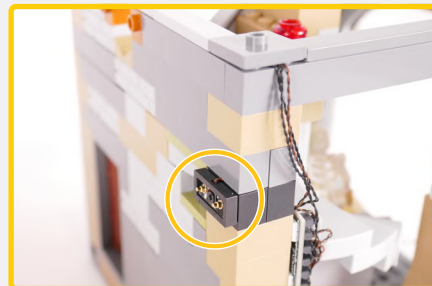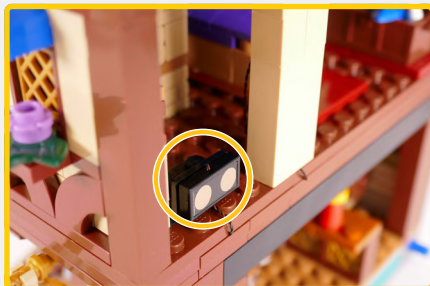
26

NOTE

Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)



! If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.



27



Red 30cm Large Bit Light



Brick, Round 1x1 Open Stud - Black



NOTE

We recommend positioning the LED around the center of the Round Brick. However, depending on brightness preference, the LED can be moved forwards or backwards



 
 
 
 
 
 
 
 
Plate, Round 1x1 with Bar Handle - Black












Tile, Modified 1x1 with Open O Clip - Black









28

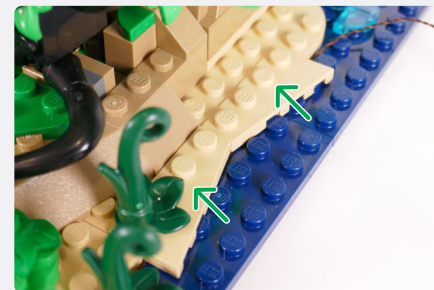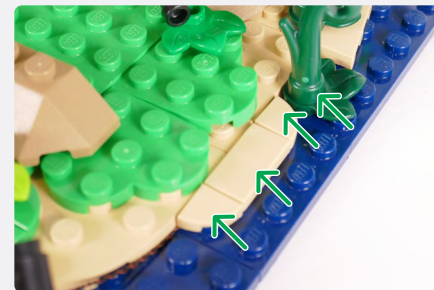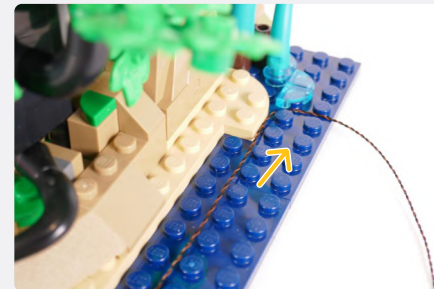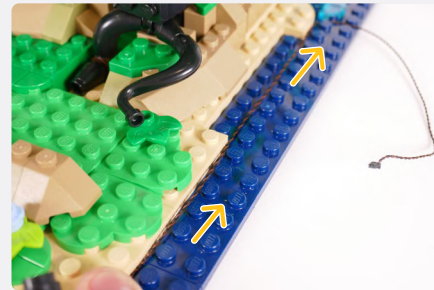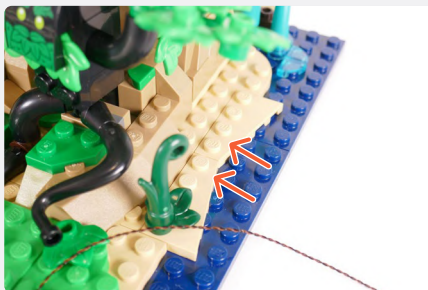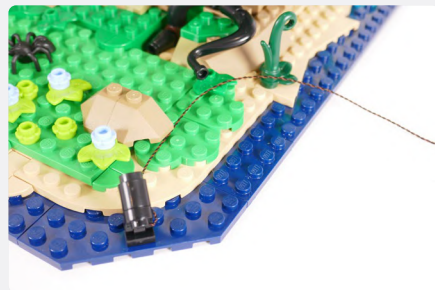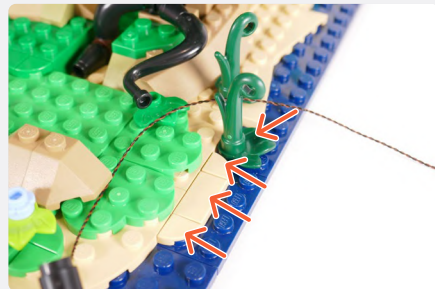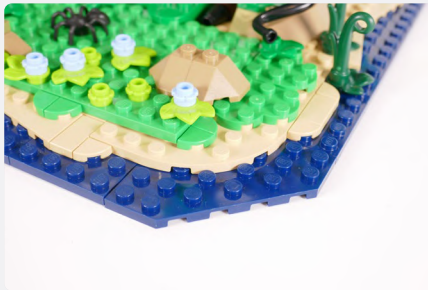


29

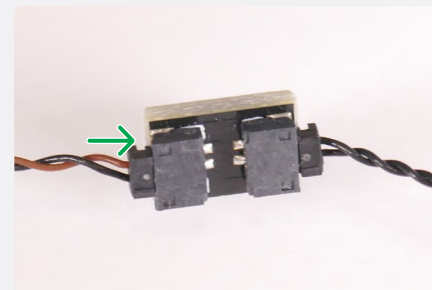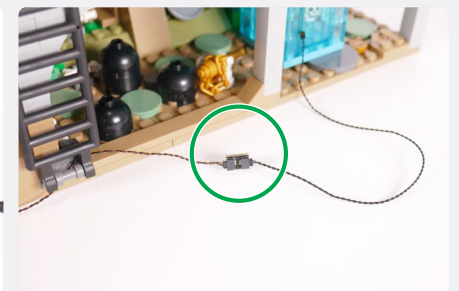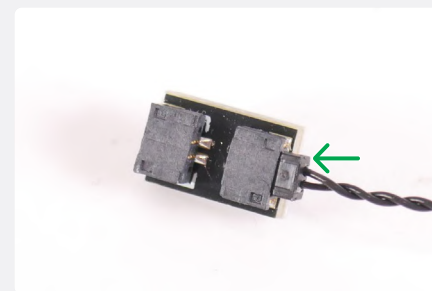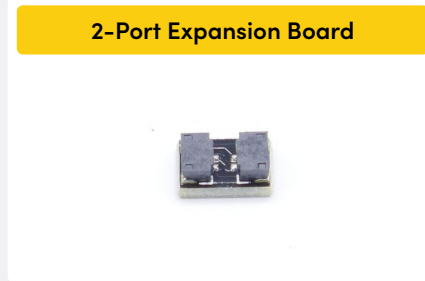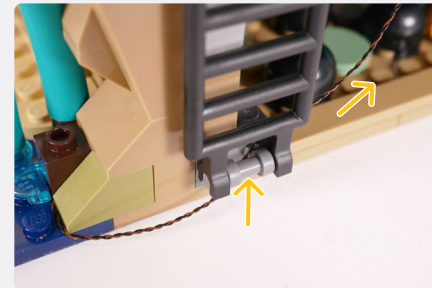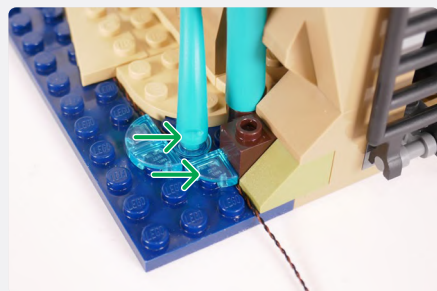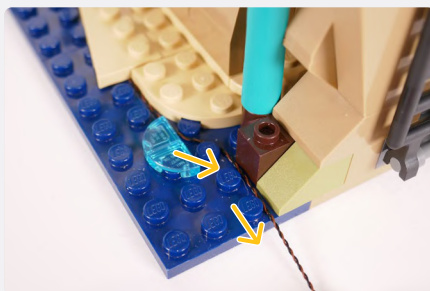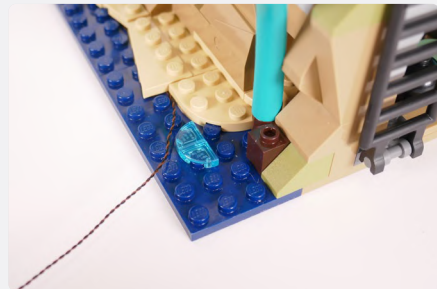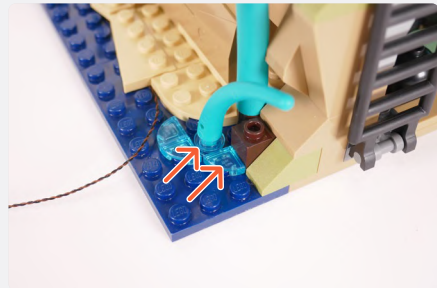         




30

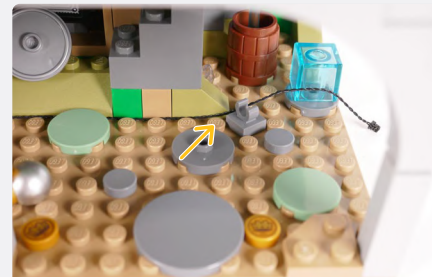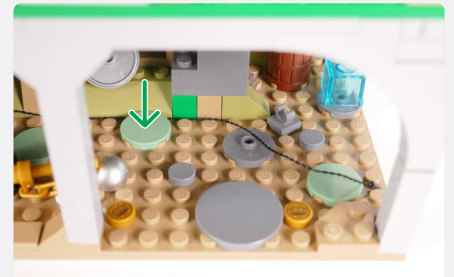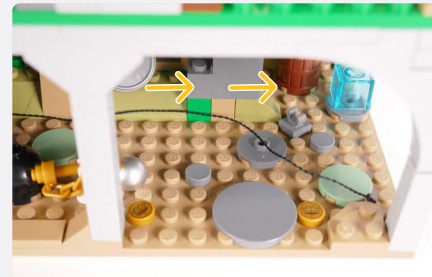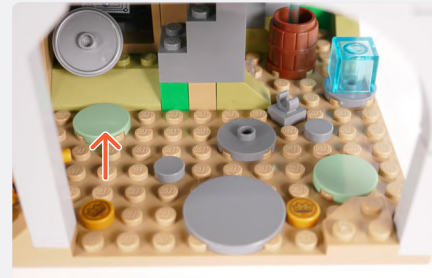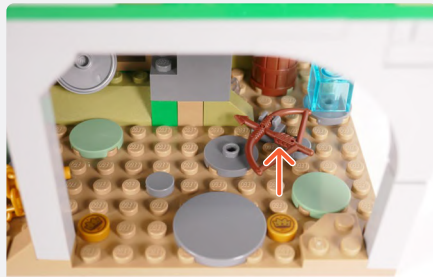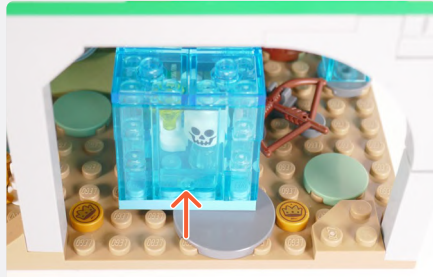      




31

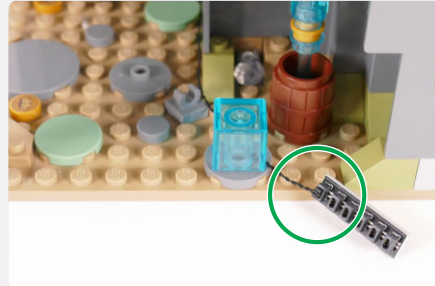 

32

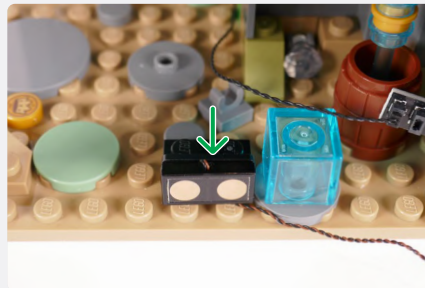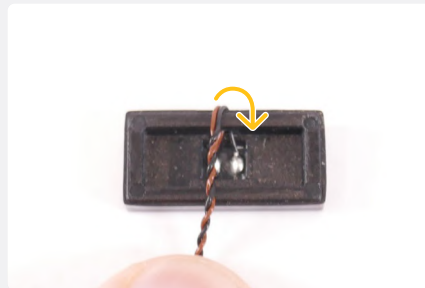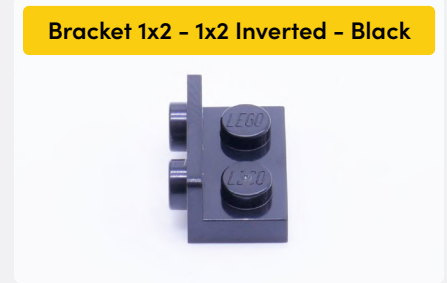   

33

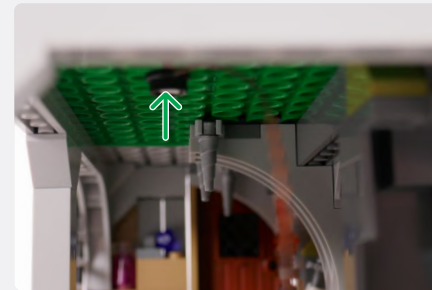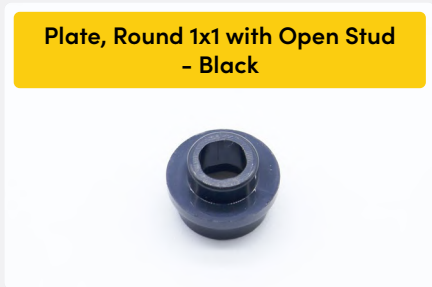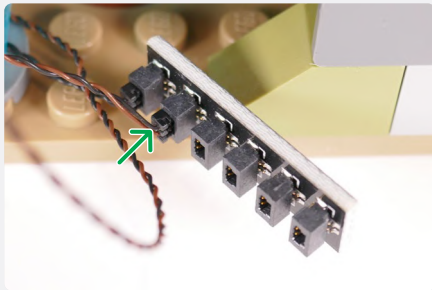   


NOTE

The position of the LED does not have to be exact, anywhere in the vicinity is perfectly fine


NOTE

 Slightly lift the following section to create a gap


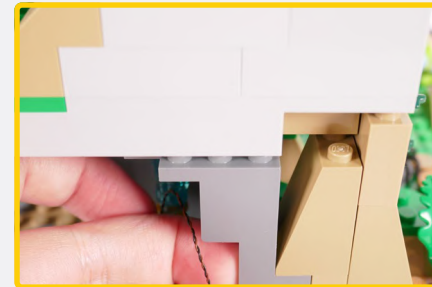


NOTE


 
Thread the Light Blue cable through the gap

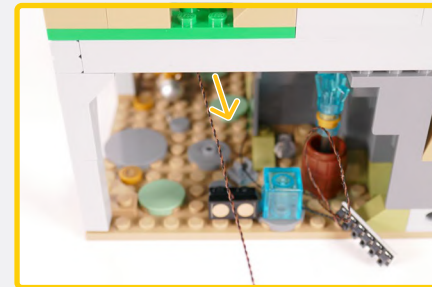

34



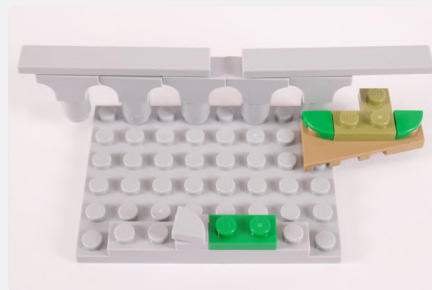 
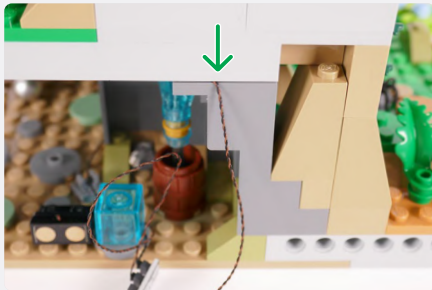 


34

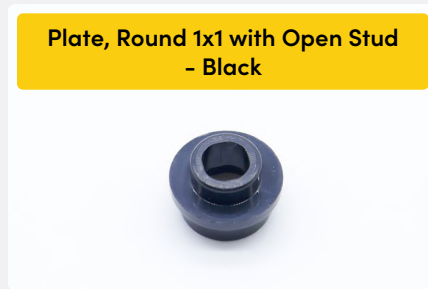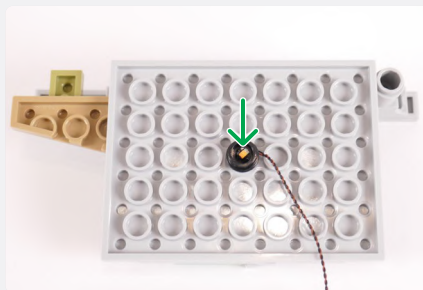  


NOTE
If you're having trouble placing the open stud in position, place it off center, in between the tubes instead

    35

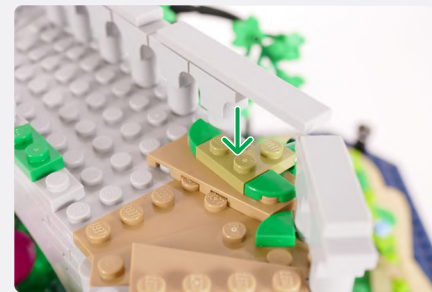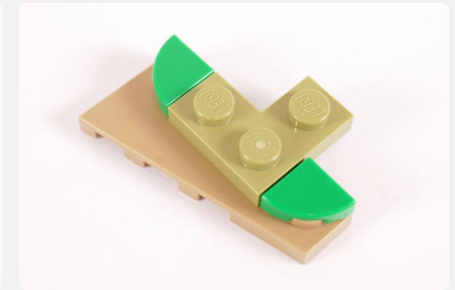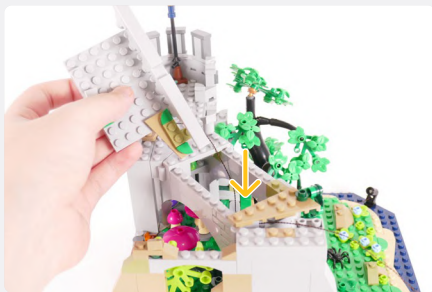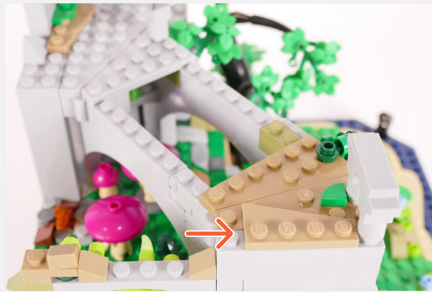
NOTE

 Connect the Pink and Light Blue Bit Lights to the 6-Port Expansion Board

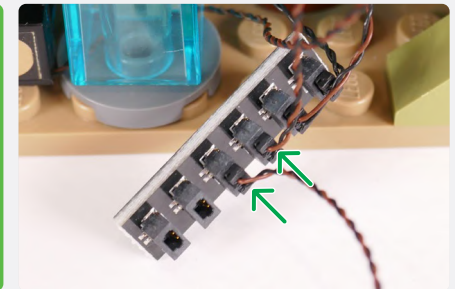



 
 
 
 
 
36

 Plate 1x2 - Black




NOTE

 Pin the Pink and Light Blue cables beneath the 1x2 Plate ensuring the cables are tight along the wall

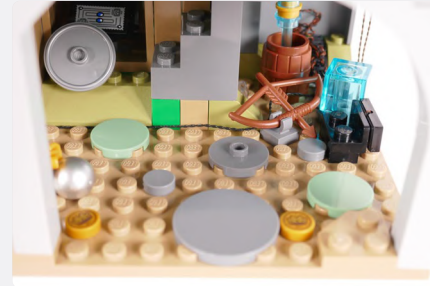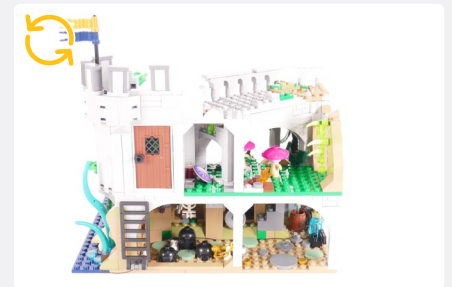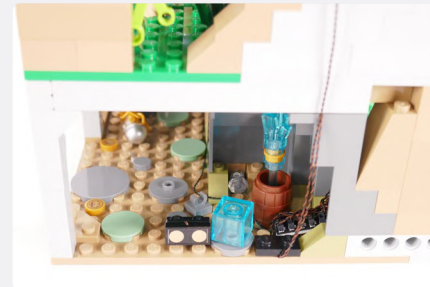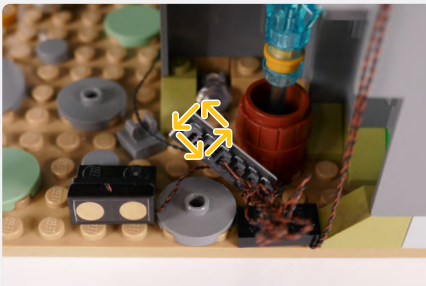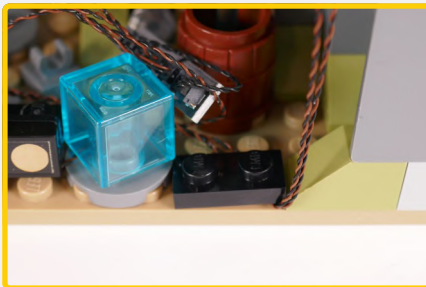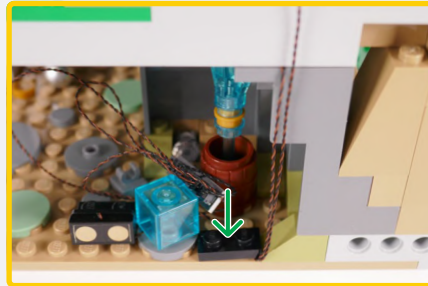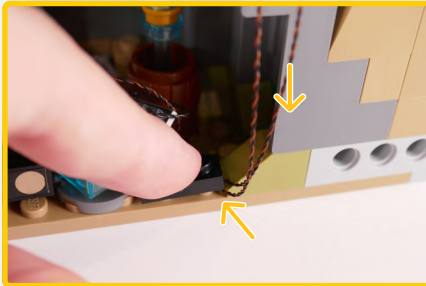

37

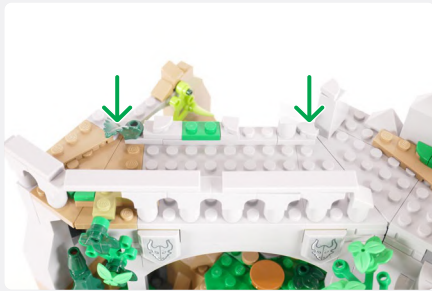 

NOTE

Ensure the Wireless Power Connectors are touching and aligned when the sections reconnect



NOTE

Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)



! If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section. **i**



38



 
39




Yellow 30cm Bit Light





Plate, Round 1x1 with Open Stud - Trans-Orange

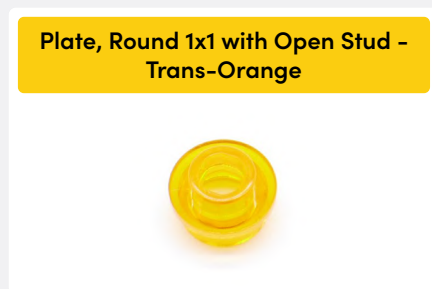






40

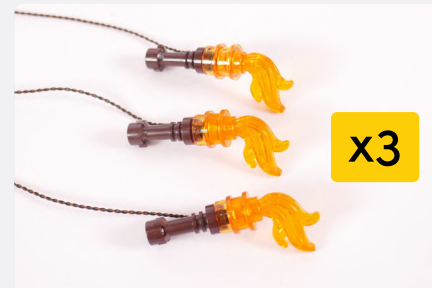 

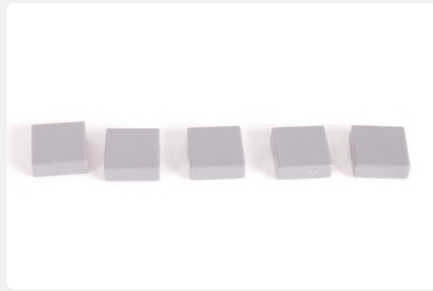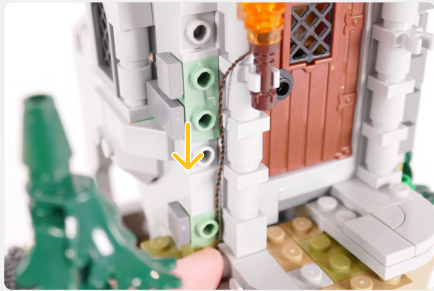  









41

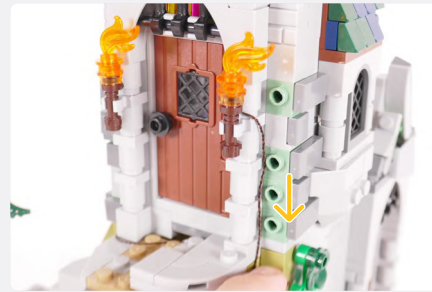 

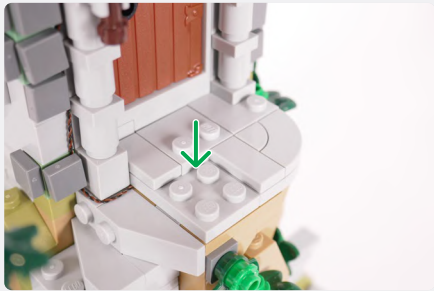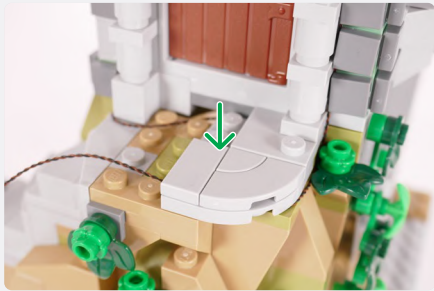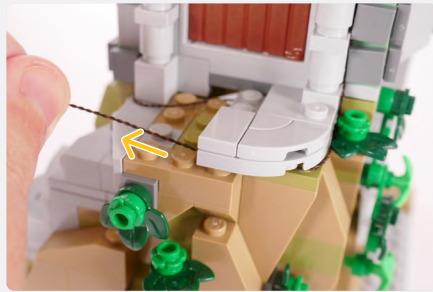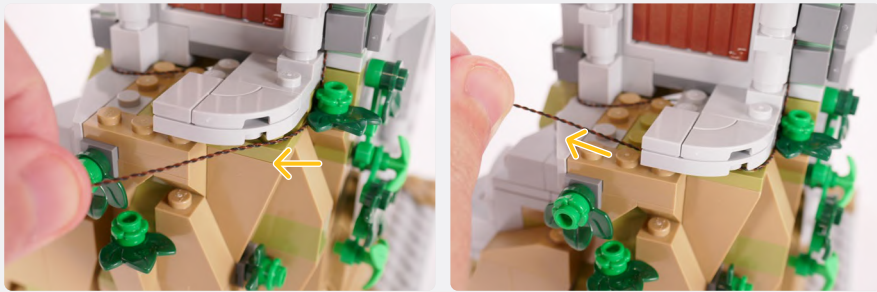    

42

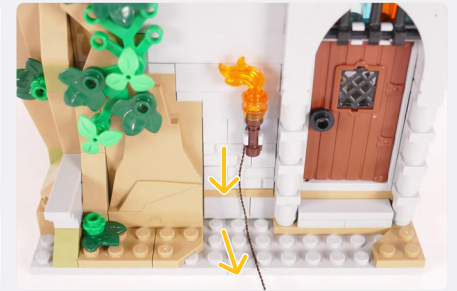 

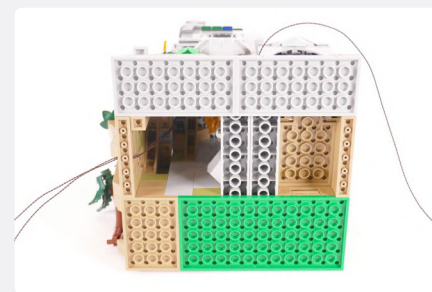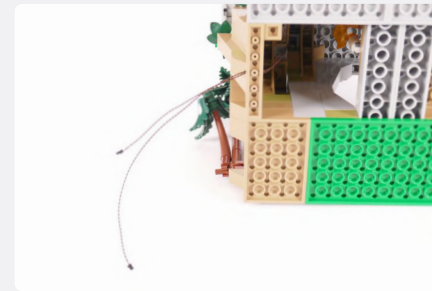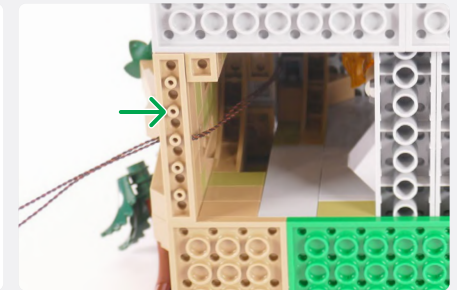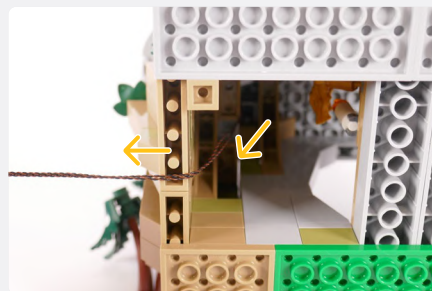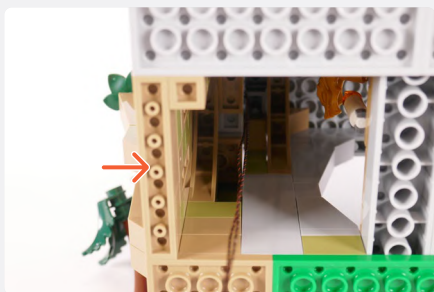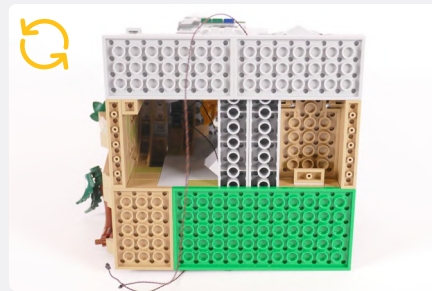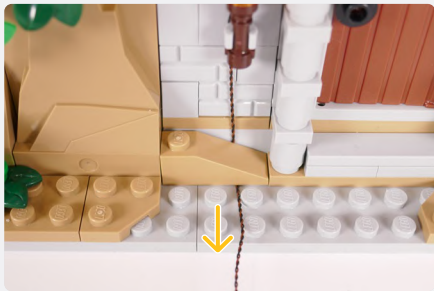       

43

5cm Connecting Cable

 


Flicker Effects Board






NOTE

Connect the 5cm Connecting to the 'IN' port of the Flicker Effects Board


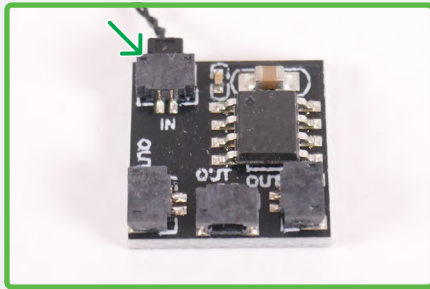


NOTE

   Connect the three Yellow Bit Lights to the 'OUT' port of the Flicker Effects Board

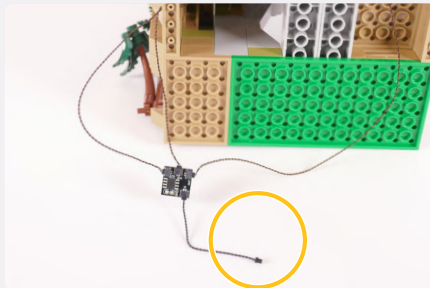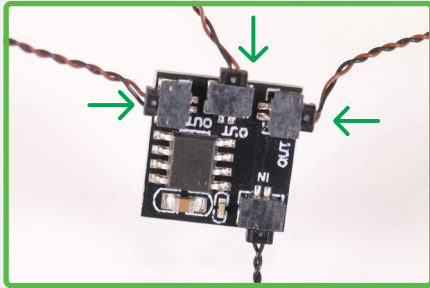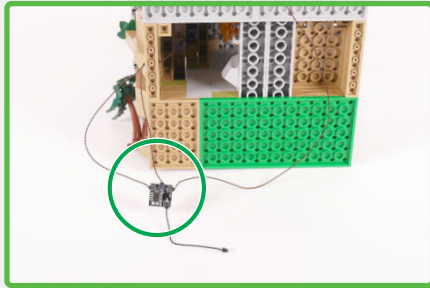


6-Port Expansion Board

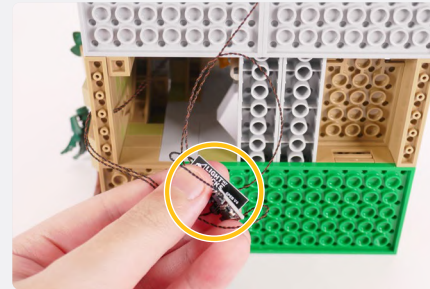 
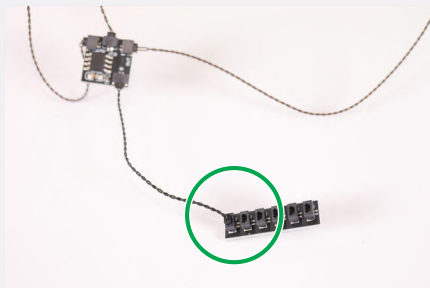 


NOTE


 
Temporarily place the board and cables within the building

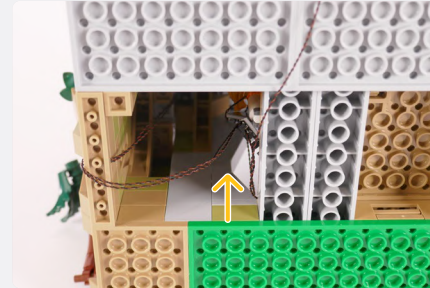

44

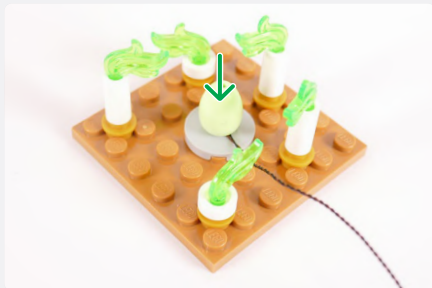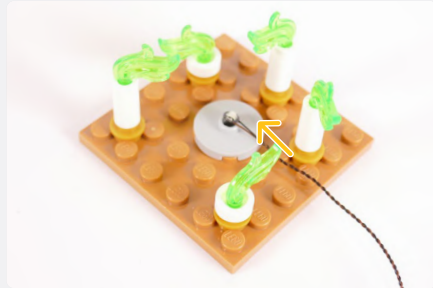  

45



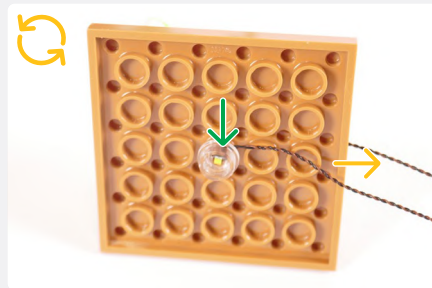 
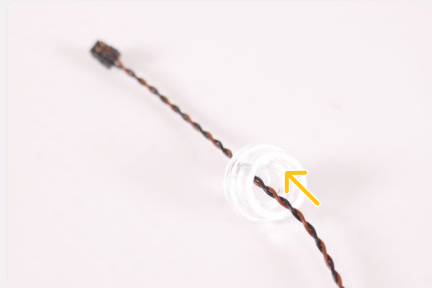 


NOTE




If you're having trouble placing the open stud in position, place it off center, in between the tubes instead



    46

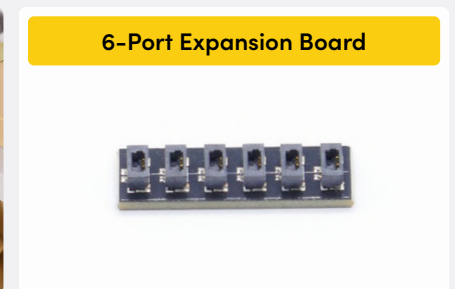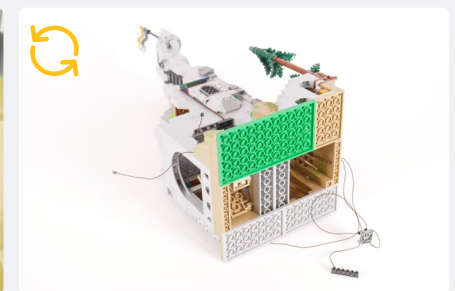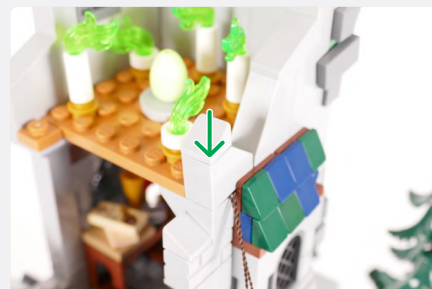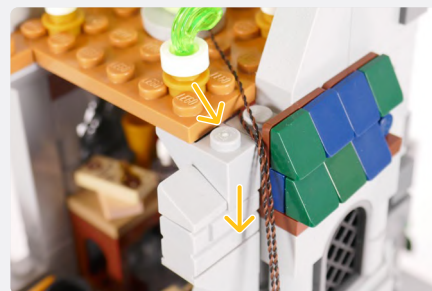



47

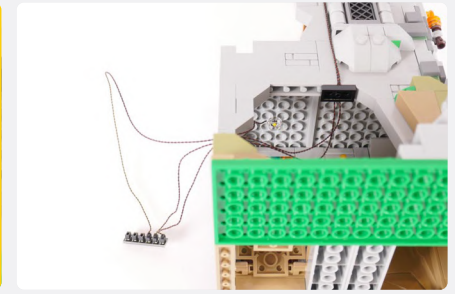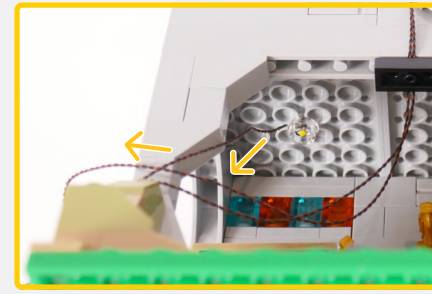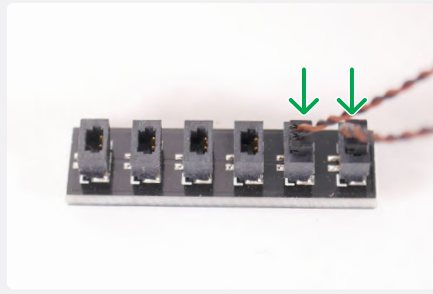   


Yellow 30cm Bit Light

Plate, Round 1x1 with Open Stud - Trans Clear

  15cm Connecting Cable

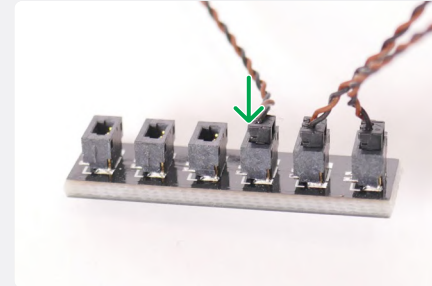
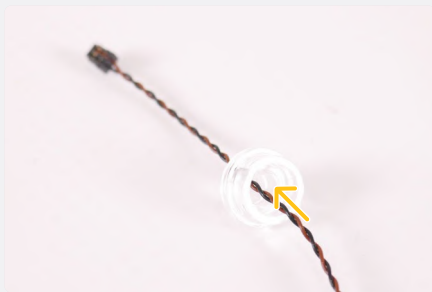


30cm Connecting Cable

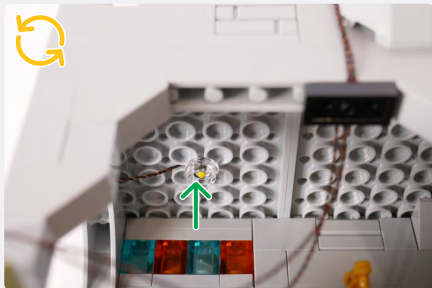 

NOTE

  Ensure the cables are running out through the same gap

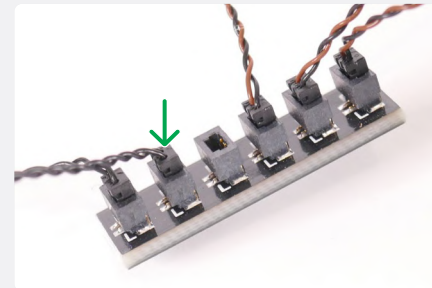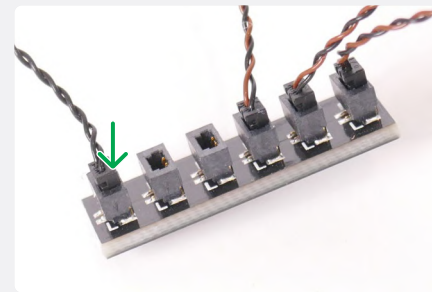


48





NOTE

 Twist the cables together but exclude the 15cm and 30cm Connecting Cables

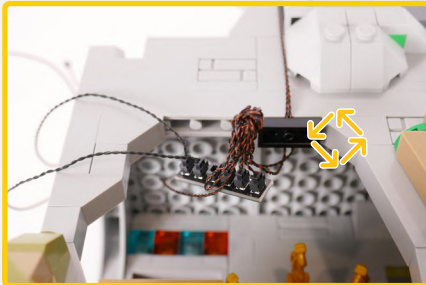





NOTE

  Position the Expansion Board in between the tubes so that it gets stuck. If you're having trouble with this part, use a spare Plate 1x2 - Black to pin the cables and thus pin the board.

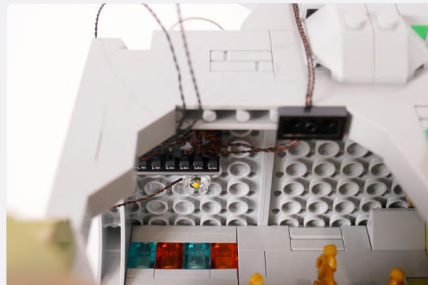
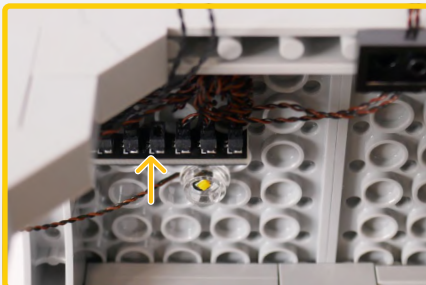


NOTE

    
Thread the 30cm Connecting Cable through the following gap to the bottom of the section

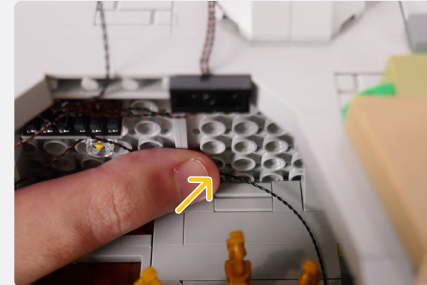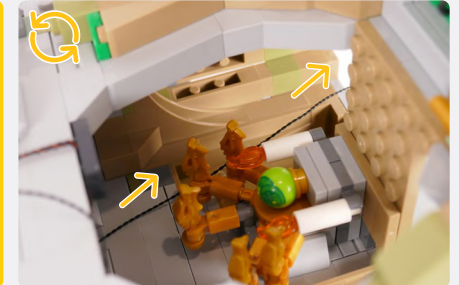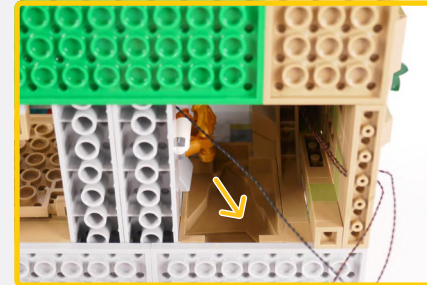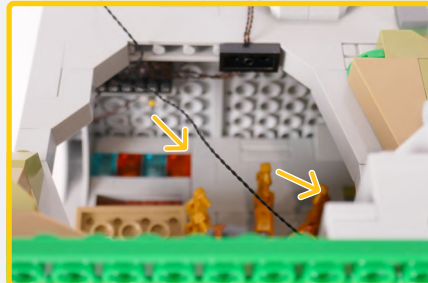


 
 
Plate, Round 2x2 with Rounded Bottom (Boat Stud) - Trans-Clear

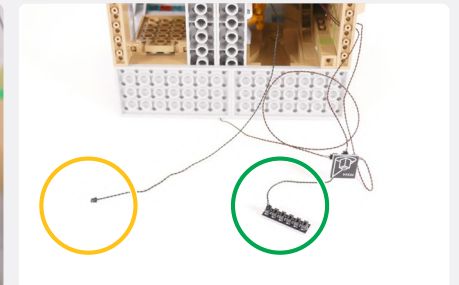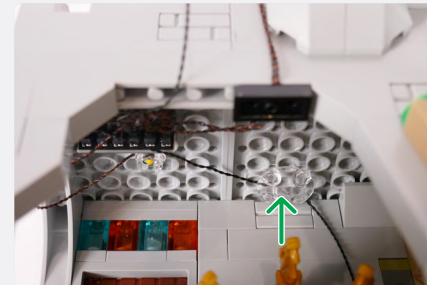



49

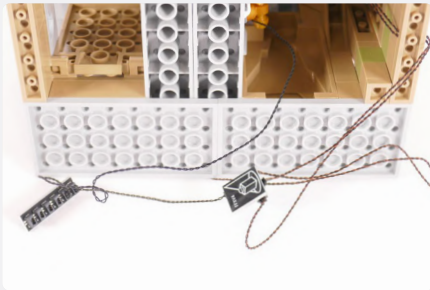 





2x Adhesive Square

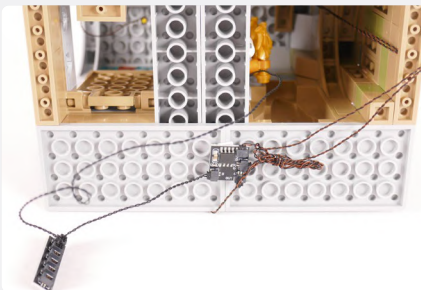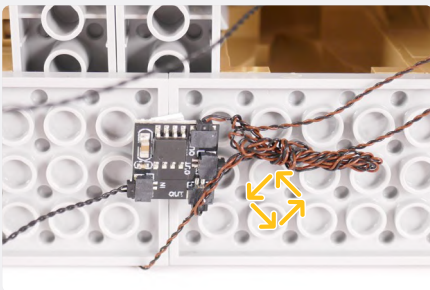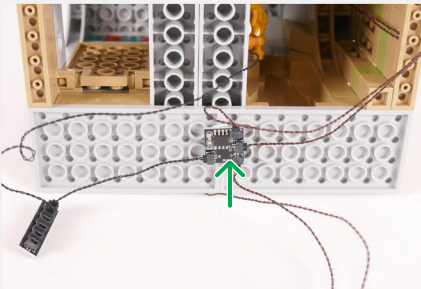   


Wireless Power Connector Plate

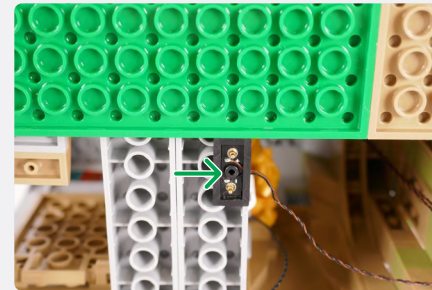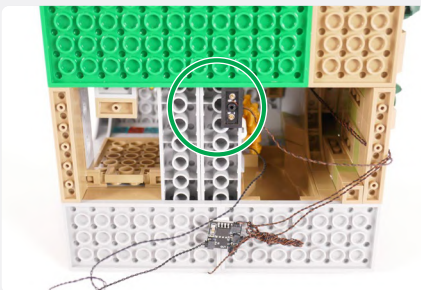  



2x Adhesive Square

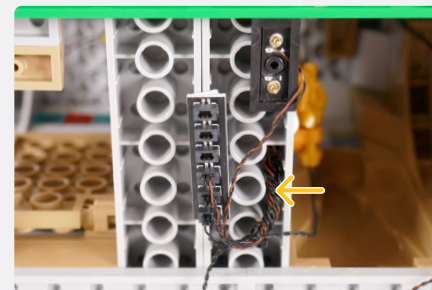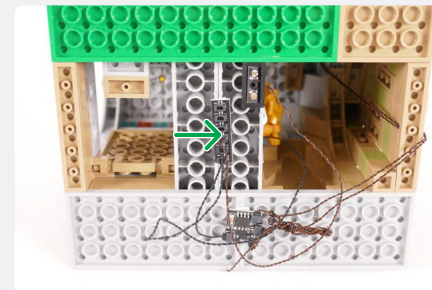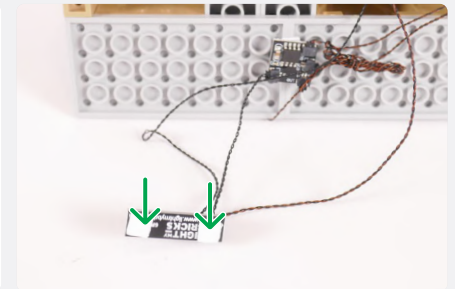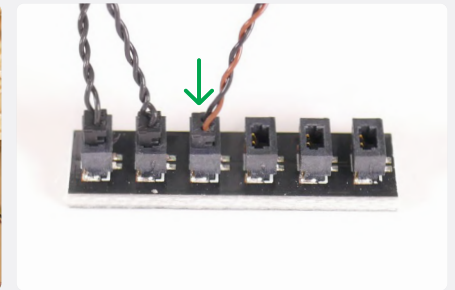    



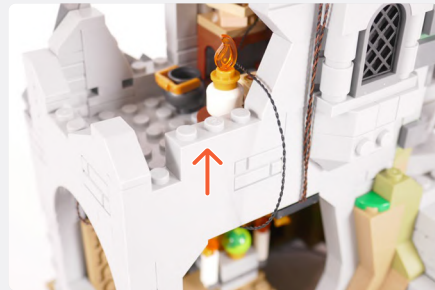 
50


NOTE

  Thread the 15cm Connecting Cable in between the bricks as shown

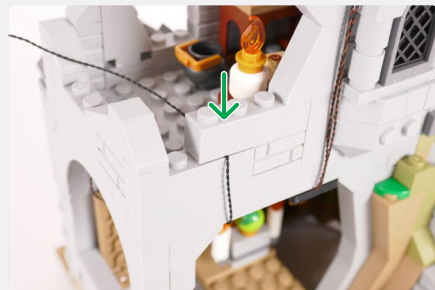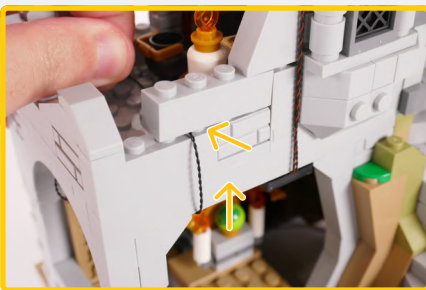

2-Port Expansion Board

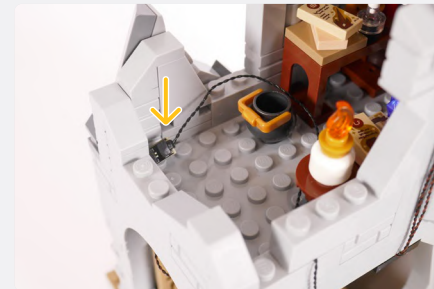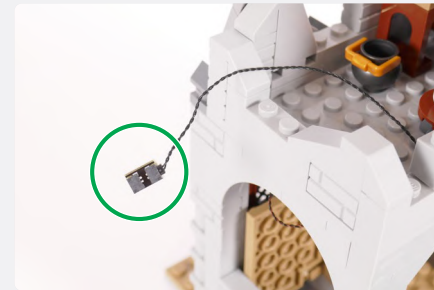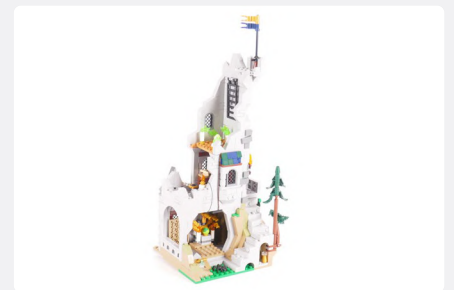   
51


NOTE

Ensure the Wireless Power Connectors are touching and aligned when reconnecting the two sections




NOTE

Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)

 
 
 
 


! If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section. i

 
 
 
53
Orange 30cm Large Bit Light

Plate, Round 1x1 with Open Stud - Trans-Orange


52

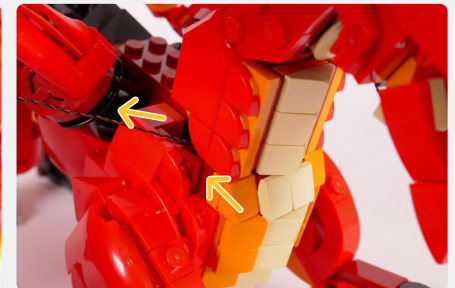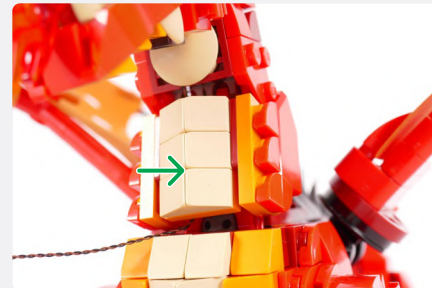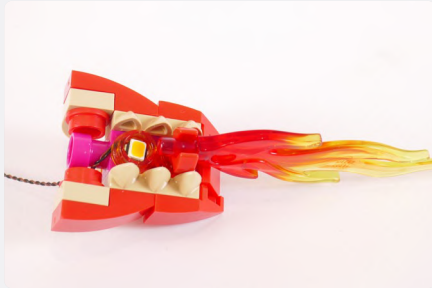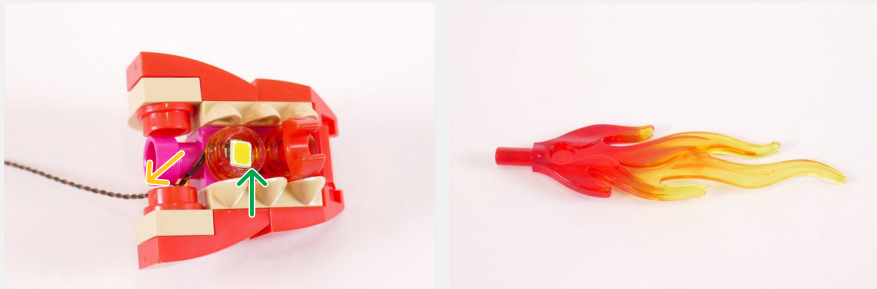

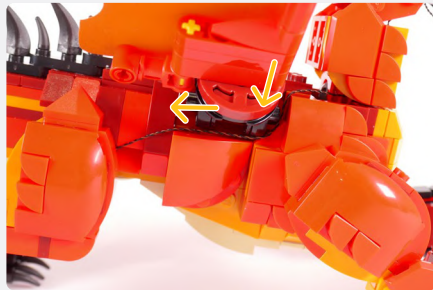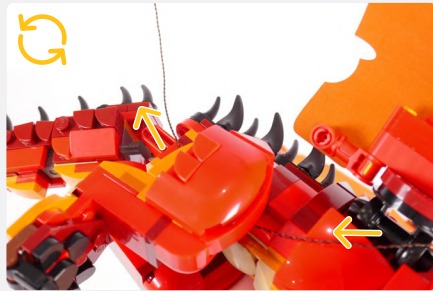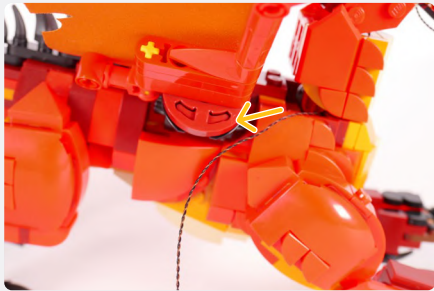

54

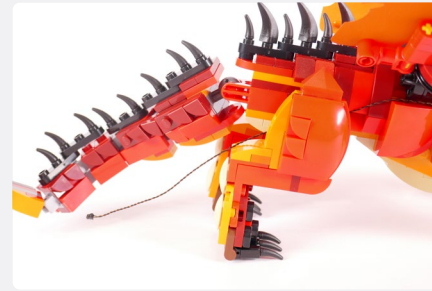 




55



 **NOTE**

   
Place the dragon in the following position by wedging its leg on the castle

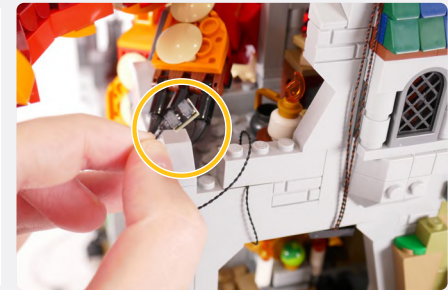

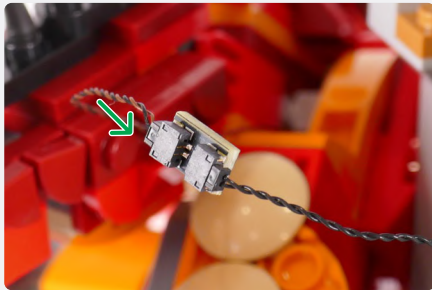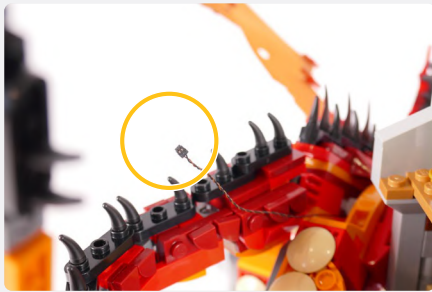

NOTE

 Place excess cable in the castle

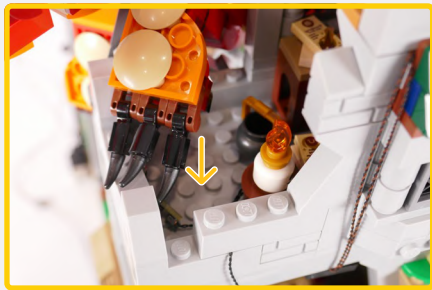

56

NOTE

Connect to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)



! If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section. **i**

NOTE

You should have these parts left over that were removed from the LEGO set



FINAL PRODUCT

This finally completes installation of the Light My Bricks

LEGO® Dungeons & Dragons: Red Dragon's Tale 21348





TROUBLESHOOTING

Light My Bricks lighting kits contain individual components that are very small and can be easily damaged if not handled correctly.

To prevent unnecessary damage to components, we highly recommend that the User Guide section, **“Important things to note”** is read carefully. Follow the handling procedures in the User Guide to help prevent faults and damages to your Light My Bricks components.

If you are experiencing issues with your Light My Bricks set, watch our troubleshooting video or read on for a list of common causes to help you troubleshoot.



Wenn Sie Probleme mit Ihrem Light My Bricks-Set haben, sehen Sie sich unser Video zur Fehlerbehebung an oder lesen Sie die Auflistung der häufigsten Ursachen, die Ihnen bei der Fehlersuche helfen hier.



Si vous rencontrez des problèmes avec votre kit Light My Bricks, regardez notre vidéo de dépannage ou consultez la liste des causes les plus fréquentes pour vous aider à les résoudre ici.



Se si verificano problemi con il set Light My Bricks, guardare il nostro video per la risoluzione dei problemi o leggere l'elenco delle cause più comuni per la risoluzione dei problemi qui.

Troubleshooting

Firstly, ensure that the batteries have power using a battery charge gauge.

 
If the batteries have no power, replace the batteries.

If the batteries still have power, check to see if the batteries have been inserted correctly into the battery pack.

Check for AA batteries using the AA battery pack

Inside the battery pack are symbols indicating which direction the AA battery should be inserted. The flat side of the battery should be paired with the spring side of the battery pack.

If the batteries have been installed correctly and your kit still isn't operating correctly, the next step is to check the wiring.

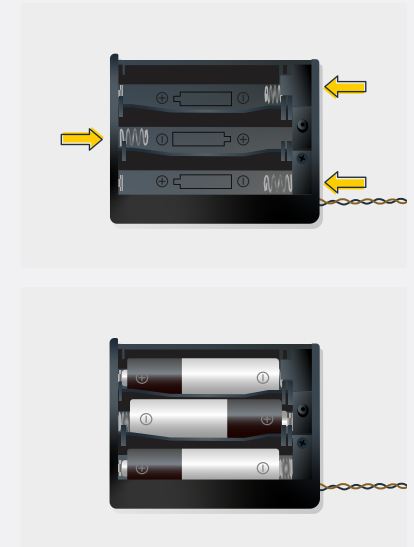

Troubleshooting

 
 
Check Your Wires

In order for Light My Bricks components to fit in between and underneath LEGO® bricks, the components need to be very small. Due to this nature, Light My Bricks components can be easily damaged when not handled correctly.

Be careful when removing unpacked components out of the packaging and ensure not to forcibly pull at the wires as this can damage the soldering that attach the wires to the LEDs.

If the wiring is detached from the LED itself, the light will not operate.

When connecting lights to your LEGO® set, check that there are no pinched wires underneath or in between bricks and plates. When the wires are pinched and the exposed wires are touching each other, this can cause a crosswire and the lights to not function correctly.

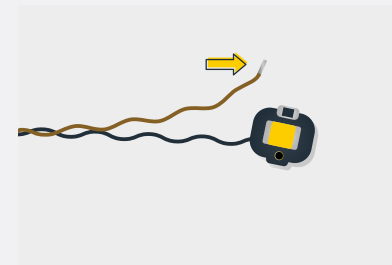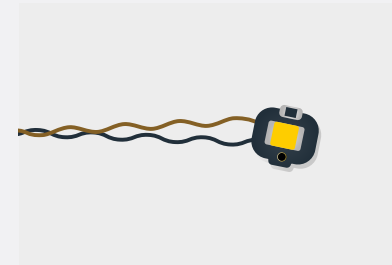



Troubleshooting

Check Your Expansion Board Ports/ Strip Light Ports / Effects Board Ports

It is important to note that connectors can only be inserted to the expansion board, strip light, or effects board ports in one direction.

Forcibly inserting connectors in the incorrect direction will result in damaging the pins inside each of the ports on your component board.


 
 
Not only will a light connected to the damaged port not work, but if the pins inside the port are bent to a point they are touching each other, this can result in all other lights in the system to stop working. This is a short circuit.

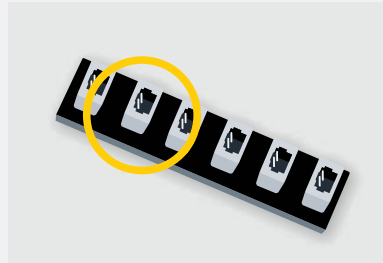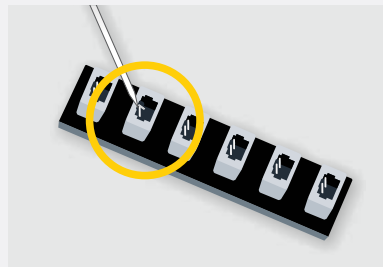

A short circuit can also result in overheating of the board, cable or batteries. If you suspect a short circuit, **DISCONNECT POWER IMMEDIATELY**. Batteries can fail, catch fire, or even explode if left connected to a short circuit for too long.

If you suspect you have a faulty component due to a bent pin, try the following steps:

   If you look carefully inside each of the ports, each port contains 2 small pins that should be straight. You will be able to identify a faulty port if it has any bent pins.

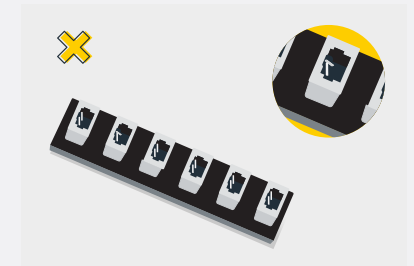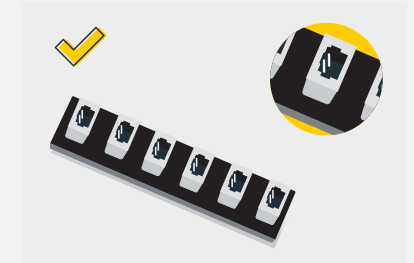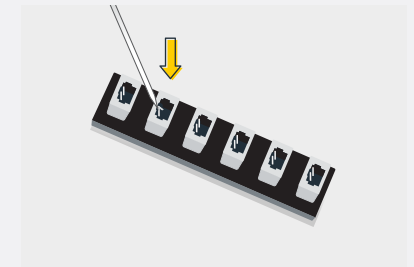



CONTACT US

If you have an enquiry regarding the online shop, our products or a general enquiry please refer to our Frequently Asked Questions webpage.

Alternatively, you can contact our Customer Services team by visiting our online support portal.

support.lightmybrick.com

We thank you for purchasing this product and hope you enjoy!



lightmybricks.com