



**LIGHT^{MY}
BRICKS**



LEGO® JAZZ QUARTET #21344

LIGHT KIT

INSTALLATION GUIDE

Light My Bricks



LEGO JAZZ QUARTET 21344 INSTALLATION GUIDE

Hi There!

We're here to help you get started on the LEGO Jazz Quartet 21344 Light Kit.

This PDF details the instructions for the LED light kit only.

If you run into any issues, please refer to the troubleshoot-ing section towards the end of this guide.

Have fun and enjoy!

INSTALLATION GUIDE





PACKAGE CONTENTS:



- 8 x Yellow 30cm Bit Light*
- 1 x Pink 30cm Bit Light
- 1 x Blue 30cm Bit Light
- 1 x Red 30cm Bit Light



3 x 6-Port Expansion Board



2 x 30cm Connecting Cable



1x USB Power Cable
(Power Source not Included)

ASSORTED BRICKS:




- 1 x Tile 1x2 - Black
- 2 x Tile 1x1 - Black
- 4 x Plate 1x2 MW Stud Jumper - Black
- 6 x Tile 1x1 W Clip Round Edges - Black
- 6 x Plate 2x2 w/ Rounded Bottom - Trans Clear
- 1 x Round Plate 1x1 - Trans Light Blue
- 9 x Round Plate 1x1 Open Stud - Black
- 7 x Plate 1x1 Mod Rounded w Handle - Black
- 1 x Plate 1x2 MW Handle On End - Black
- 1 x Arm Skeleton, Bent with Clips at 90 degrees - Black

* Indicates components which include spares

Contents

Before You Begin	5
Blueprint	8
Instructions	10
Final Product	31
Troubleshooting	32
Contact	37

Before You Begin

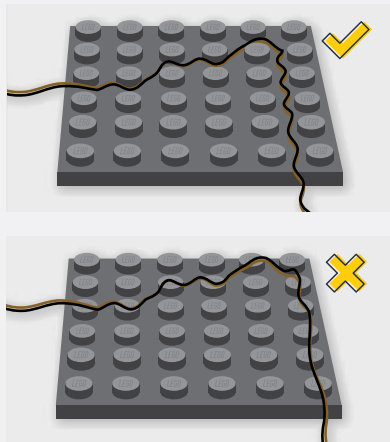

Laying cables in between and underneath bricks

Cables can fit in between and underneath LEGO® bricks, plates, and tiles providing they are laid correctly between the LEGO® studs. Do NOT forcefully join LEGO® together around cables; instead ensure they are laying comfortably in between each stud.

CAUTION: Forcing LEGO® to connect over a cable can result in damaging the cable and light.



Connecting Cable Connectors To Expansion Boards

Take extra care when inserting connectors to ports of Expansion Boards. Connectors can be inserted only one way. With the expansion board facing up, look for the soldered "=" symbol on the left side of the port. The connector side with the wires exposed should be facing toward the soldered "=" symbol as you insert into the port. If a plug won't fit easily into a port connector, do not force it.

Incorrectly inserting the connector can result in bent pins inside the port or possible overheating of the expansion board when connected.

Before You Begin



Connecting Cable Connectors To Strip Lights

Take extra care when inserting connectors to ports on the Strip Lights. Connectors can be inserted only one way. With the Strip Light facing up, ensure the side of the connector with the wires exposed is facing down. If a plug won't fit easily into a port connector, don't force it. Doing so will damage the plug and the connector.




Connecting Micro Cable Connectors To Micro Expansion Board Ports

Take extra care when inserting the micro connectors to micro ports of Micro Expansion Boards. Connecting Micro Bit Lights to Micro Expansion Boards is similar to connecting lights and cables to Strip Lights. With the expansion board facing up, ensure the side of the connector with the wires exposed is facing down. If a plug won't fit easily into a port connector, do not force it. Use your fingernail to push the plastic part of the connector to the micro port.

Before You Begin


Installing Bit Lights Under Lego® Bricks And Plates

When installing Bit Lights under LEGO® pieces, ensure they are placed the correct way up (Yellow LED component exposed). You can either place them directly on top of LEGO® studs or in between.

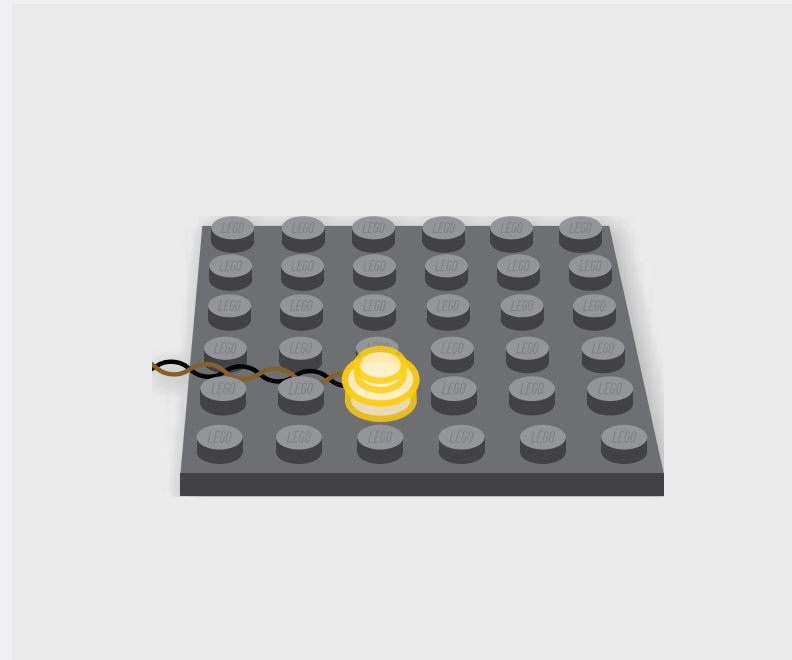

BLUEPRINT

Jazz Quartet 21334

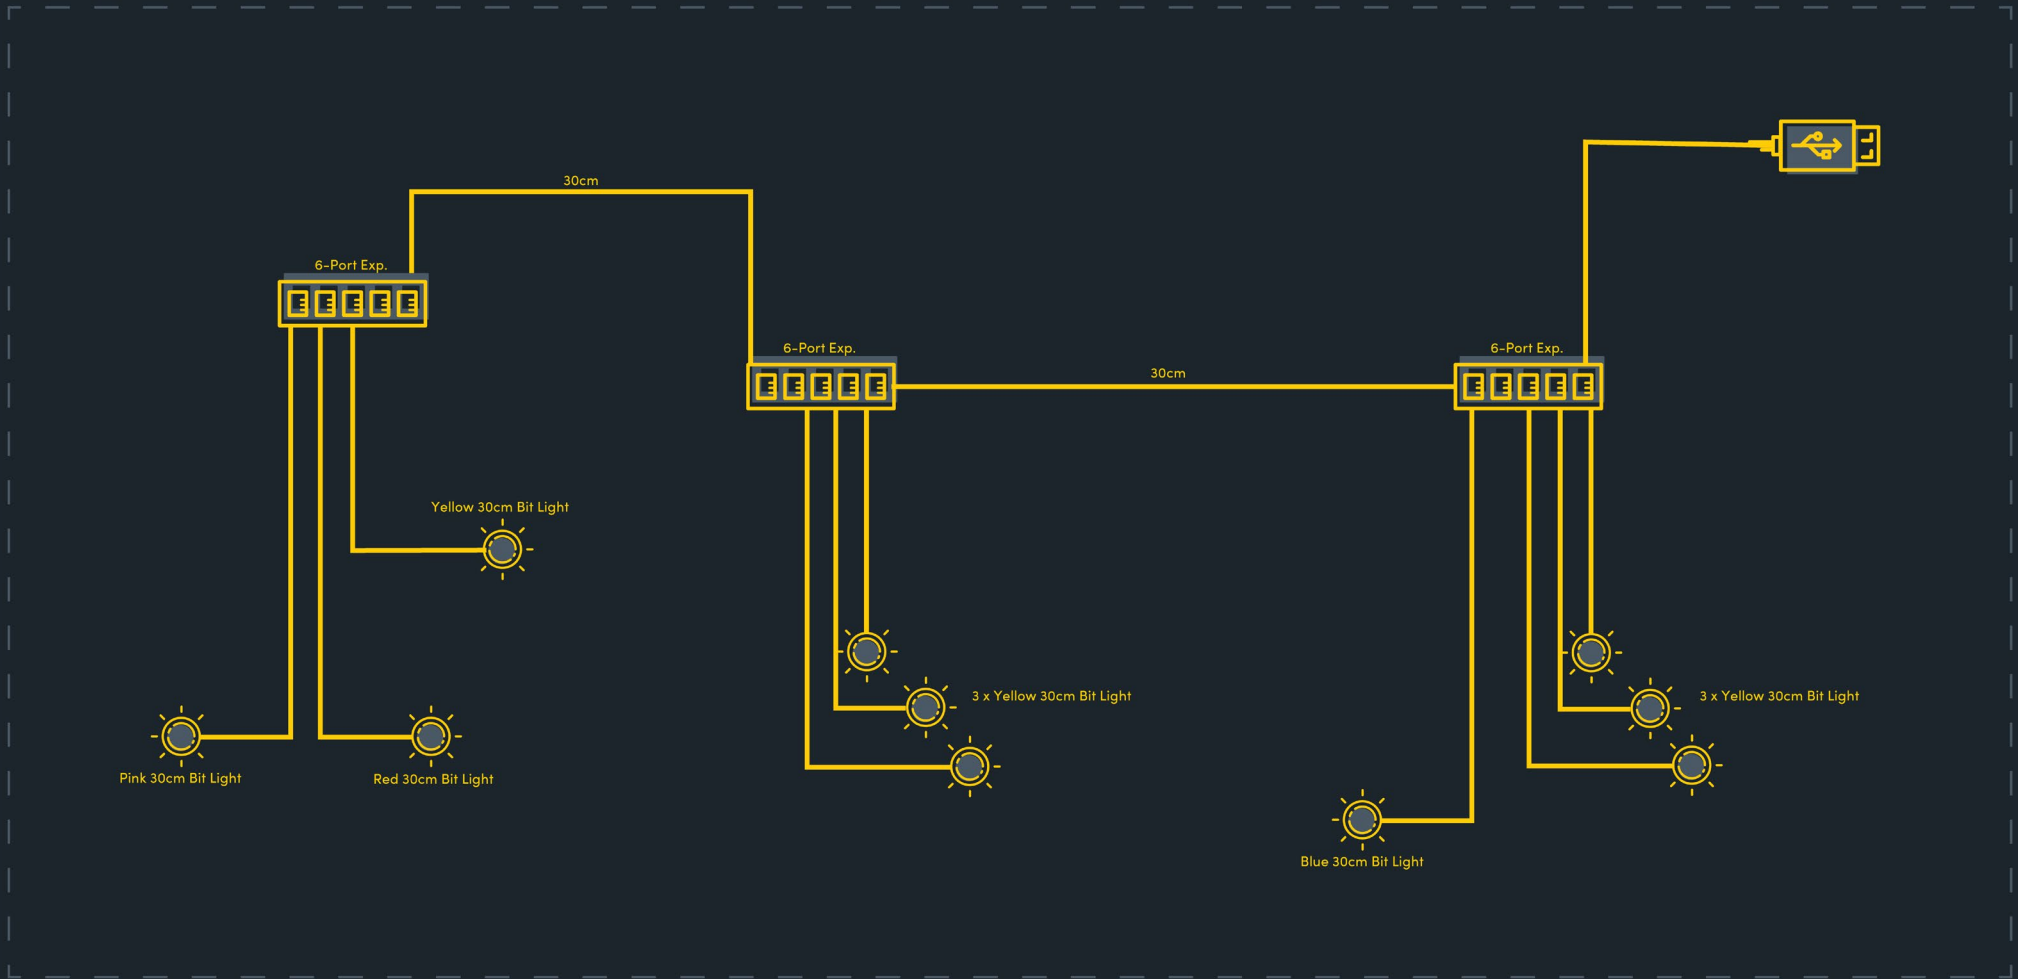



INSTRUCTIONS

To ensure a smooth installation of your light kit, please read and follow each step carefully. If you run into any issues, please refer to the online troubleshooting guide.



LEGEND: → DISCONNECT



CONNECT / RECONNECT



TURN / FLIP



DIRECTIONAL



TWIST / BRAID



POWER ON / TEST



LEGENDE: → TRENNEN



VERNINDEN / WIEDERVERBINDEN



WENDEN / KIPPEN



DIRECTIONAL



DREHEN / VERDREHEN



EINSCHALTEN / TESTEN



LÉGENDE: → DÉCONNECTER



CONNECTER / RECONNECTER



TOUR / INCLINAISON



DIRECTIONNEL



TORSION / TRESSER



POWER ON / TEST



LEGGENDA: → SCOLLEGARE



CONNETTI / RICONNETTI



ROTARE / INCLINARE



DIREZIONALE




TWIST / TRECCIA



POWER ON / TEST

1

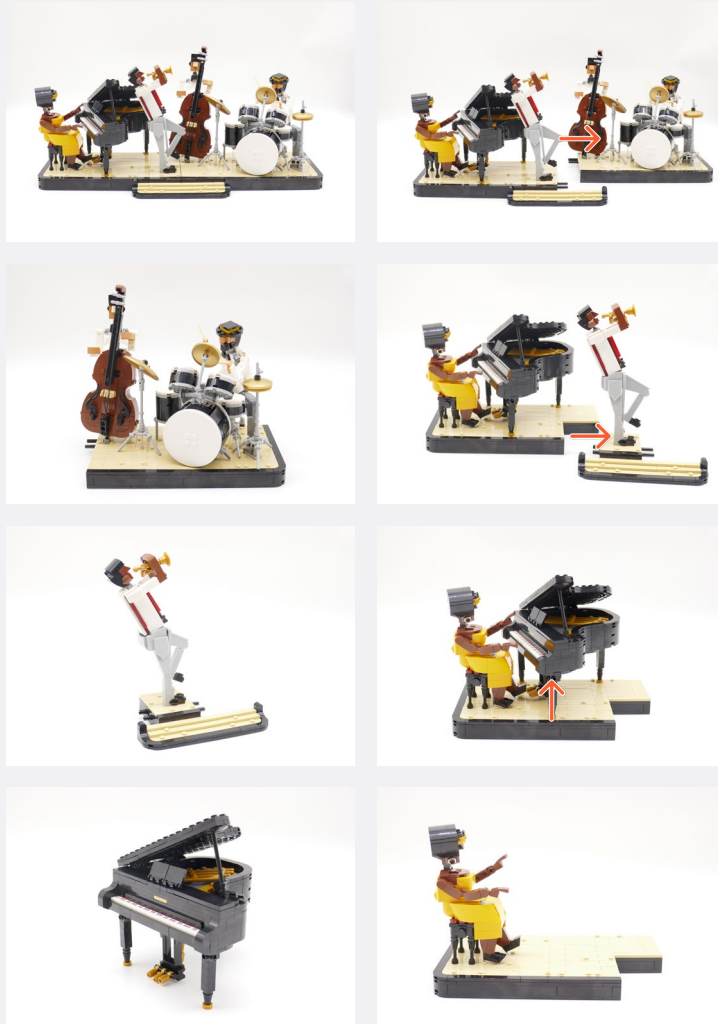

2


Yellow 30cm Bit Light



Black Round Plate 1x1 w/ Open Stud



Black 1x1 Plate Modified Plate Rounded w/ Handle

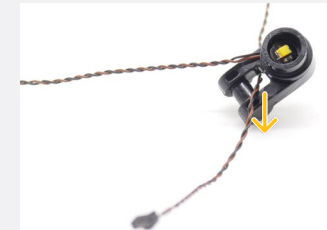

Legend

- DISCONNECT
- CONNECT / RECONNECT
- TURN / FLIP
- DIRECTIONAL
- TWIST / BRAID
- POWER ON TEST
- NOTE ICON

3



Tile 1x1 w/ Clip Rounded Edges - Black




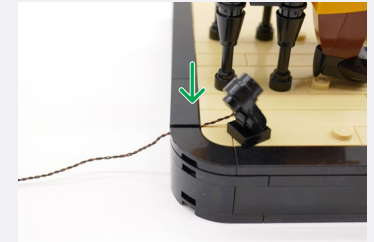




Plate 2x2 W Rounded Bottom - Trans Clear

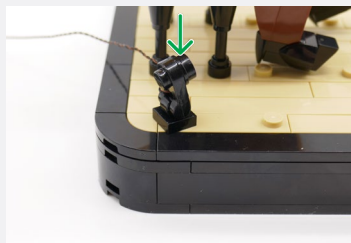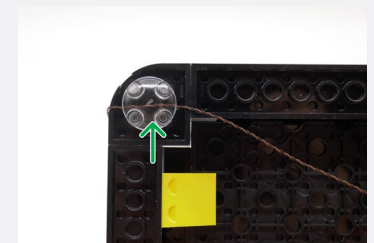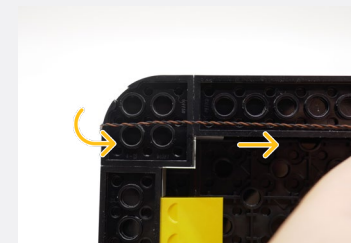




Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ↻ TWIST / BRAID ✨ POWER ON TEST 📝 NOTE ICON

4

6-Port Expansion Board

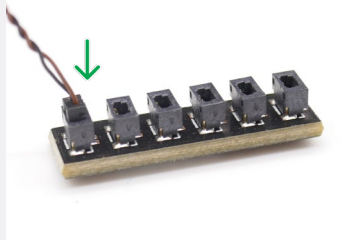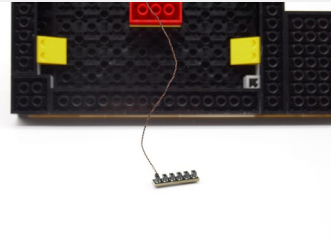

30cm Connecting Cable

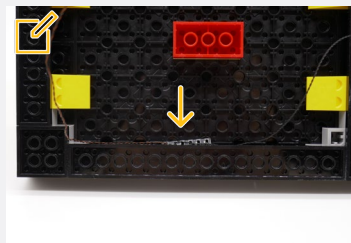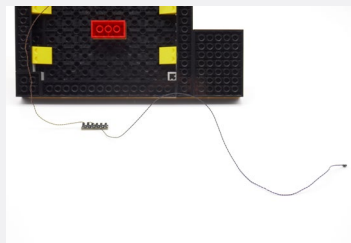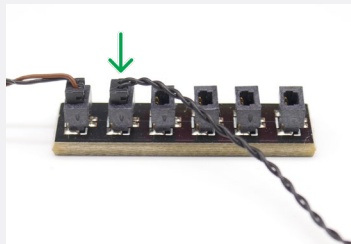

Place the 6-Port Expansion Board in the cavity




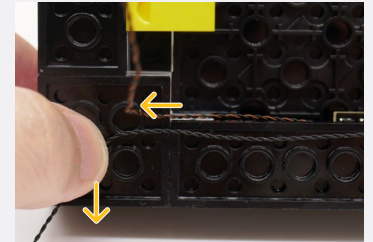



Plate 2x2 W Rounded Bottom - Trans Clear

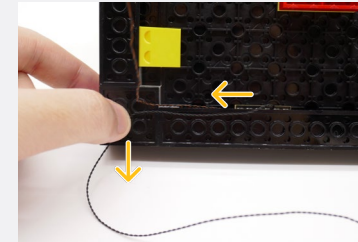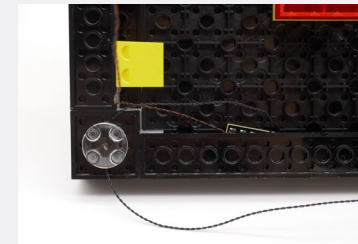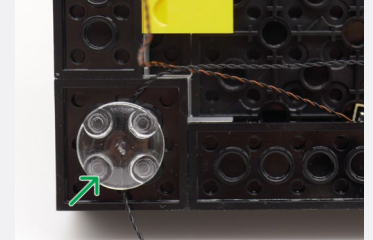

Legend

- DISCONNECT
- CONNECT / RECONNECT
- TURN / FLIP
- DIRECTIONAL
- TWIST / BRAID
- POWER ON TEST
- NOTE ICON

5

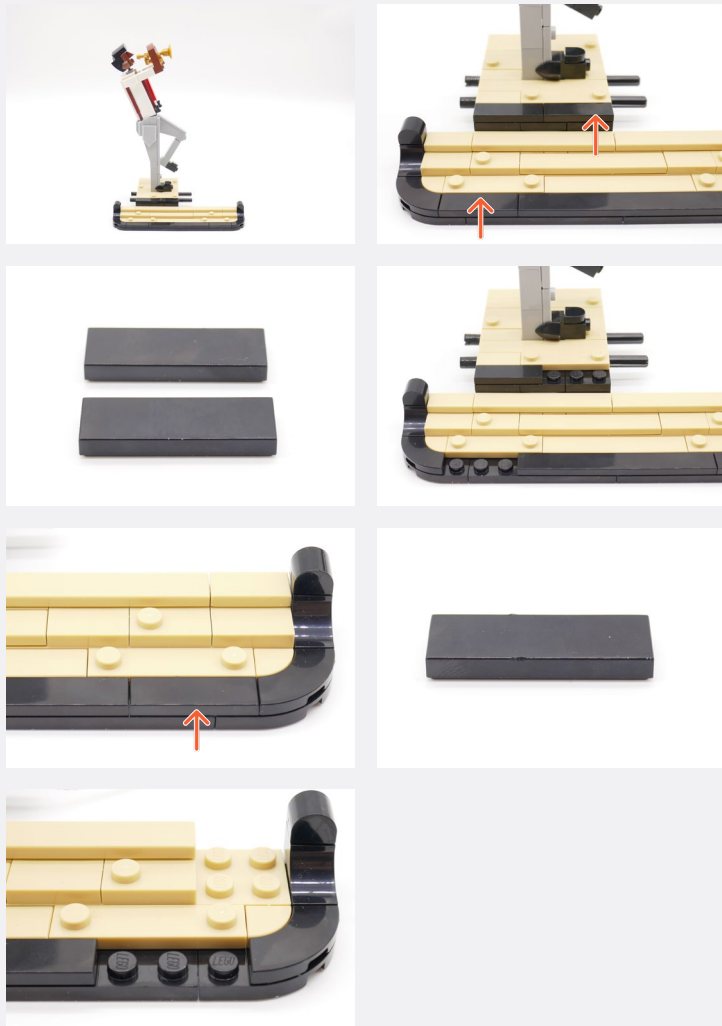


6


Yellow 30cm Bit Light



Black Round Plate 1x1 w/ Open Stud

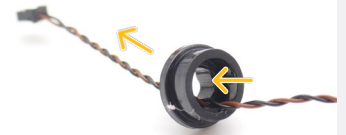

Black 1x1 Plate Modified Plate Rounded w/ Handle

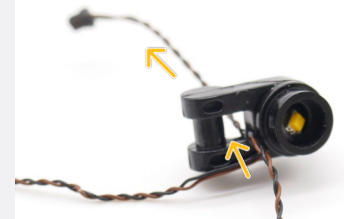

Legend









Tile 1x1 w/ Clip Rounded Edges - Black



Plate 1x2 MW Stud Jumper - Black





7

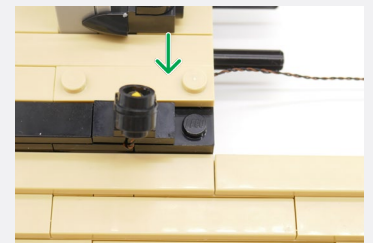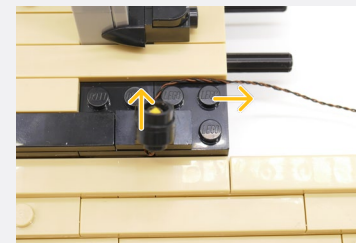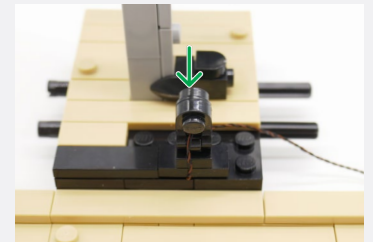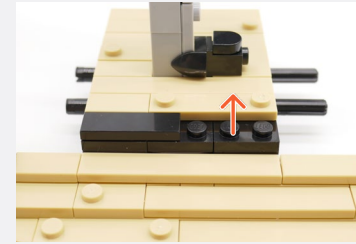


Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ↻ TWIST / BRAID * POWER ON TEST 📄 NOTE ICON



8

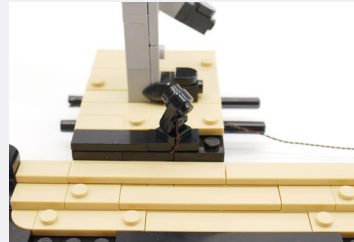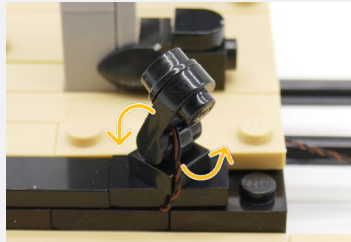

Yellow 30cm Bit Light

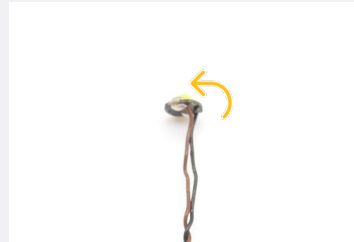

Black Round Plate 1x1 w/ Open Stud

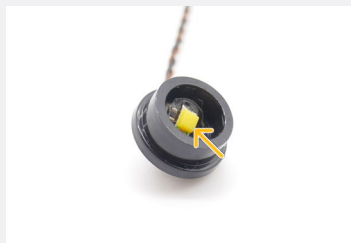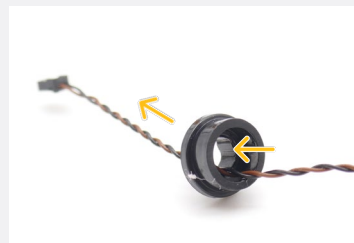

Black 1x1 Plate Modified Plate Rounded w/ Handle



Tile 1x1 w/ Clip Rounded Edges - Black





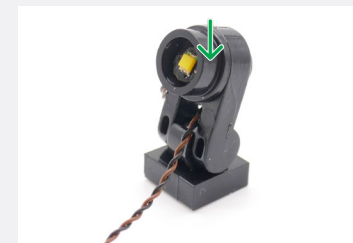


Plate 1x2 MW Stud Jumper - Black

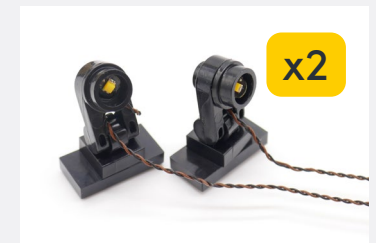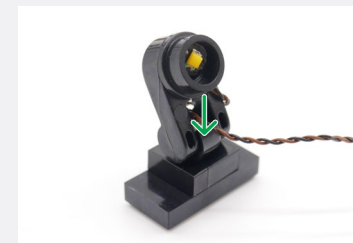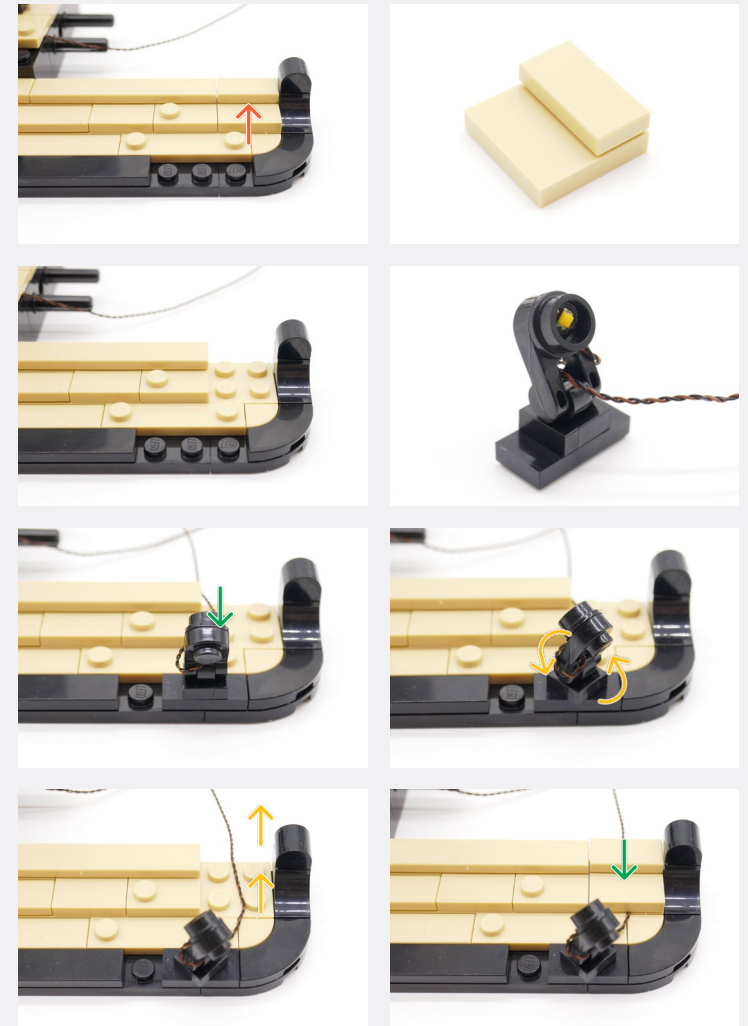

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ↻ TWIST / BRAID ✨ POWER ON TEST 📝 NOTE ICON


9

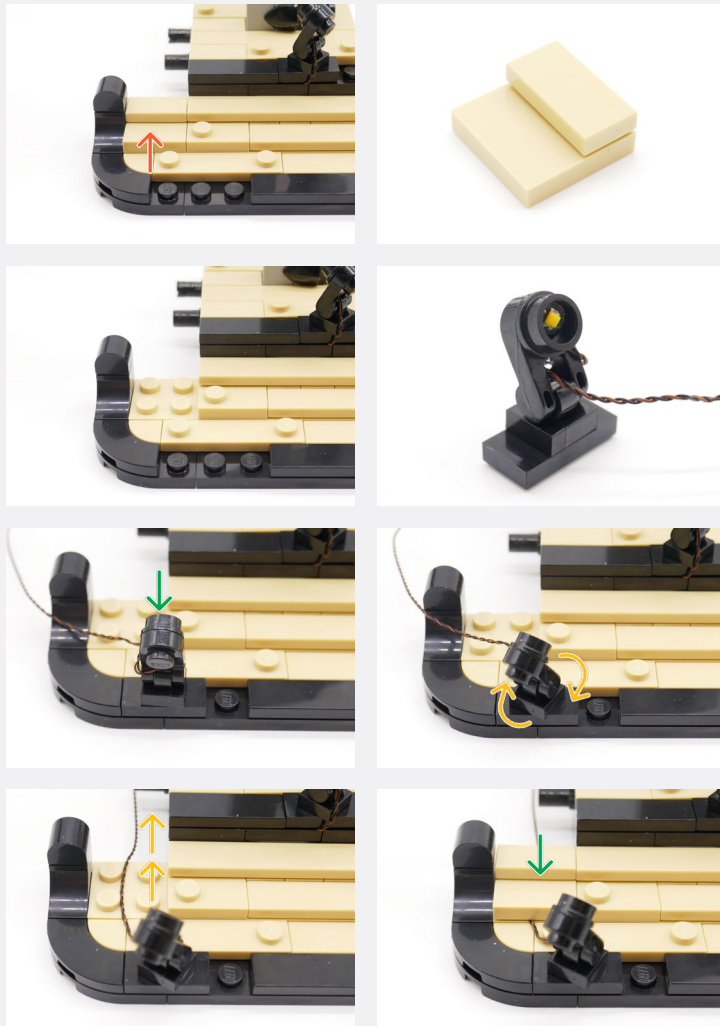


Legend

- DISCONNECT
- CONNECT / RECONNECT
- ↻ TURN / FLIP
- DIRECTIONAL
- ↔↔ TWIST / BRAID
- ✳ POWER ON TEST
- 📝 NOTE ICON


10

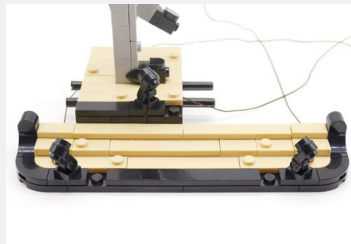


2 x Tile 1x1 - Black

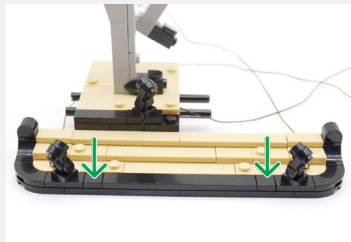


11

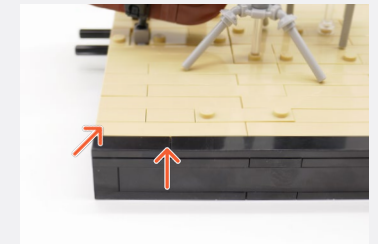

Yellow 30cm Bit Light

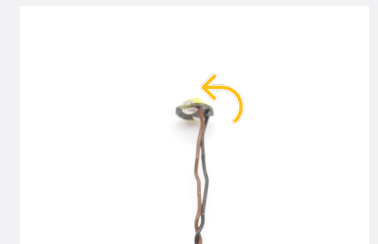

Black Round Plate 1x1 w/ Open Stud

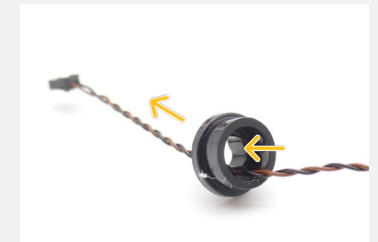

Legend



CONNECT / RECONNECT



TURN / FLIP



DIRECTIONAL



TWIST / BRAID



POWER ON TEST



NOTE ICON


	<p>Black 1x1 Plate Modified Plate Rounded w/ Handle</p>
	<p>Tile 1x1 w/ Clip Rounded Edges - Black</p>
	<p>Plate 1x2 MW Stud Jumper - Black</p>

12


Legend

- DISCONNECT
- CONNECT / RECONNECT
- TURN / FLIP
- DIRECTIONAL
- TWIST / BRAID
- POWER ON TEST
- NOTE ICON




13

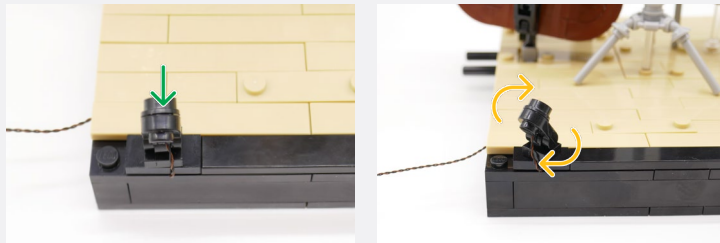


Yellow 30cm Bit Light

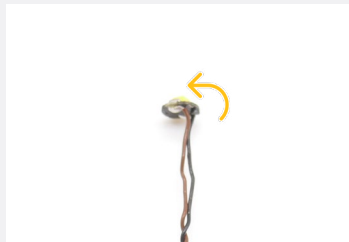

Black Round Plate 1x1 w/ Open Stud

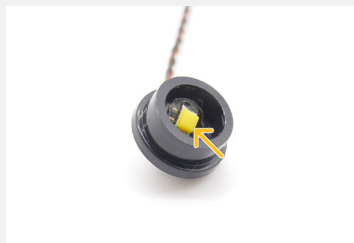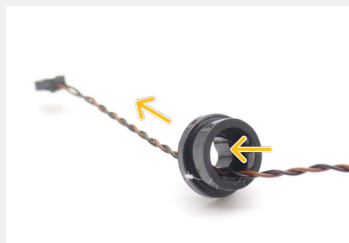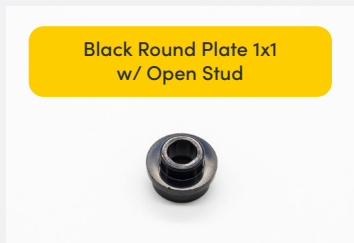

Black 1x1 Plate Modified Plate Rounded w/ Handle

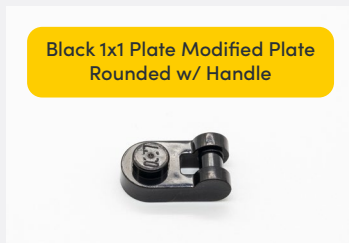

Tile 1x1 w/ Clip Rounded Edges - Black




Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ↻ TWIST / BRAID ✨ POWER ON TEST 📝 NOTE ICON

14




15

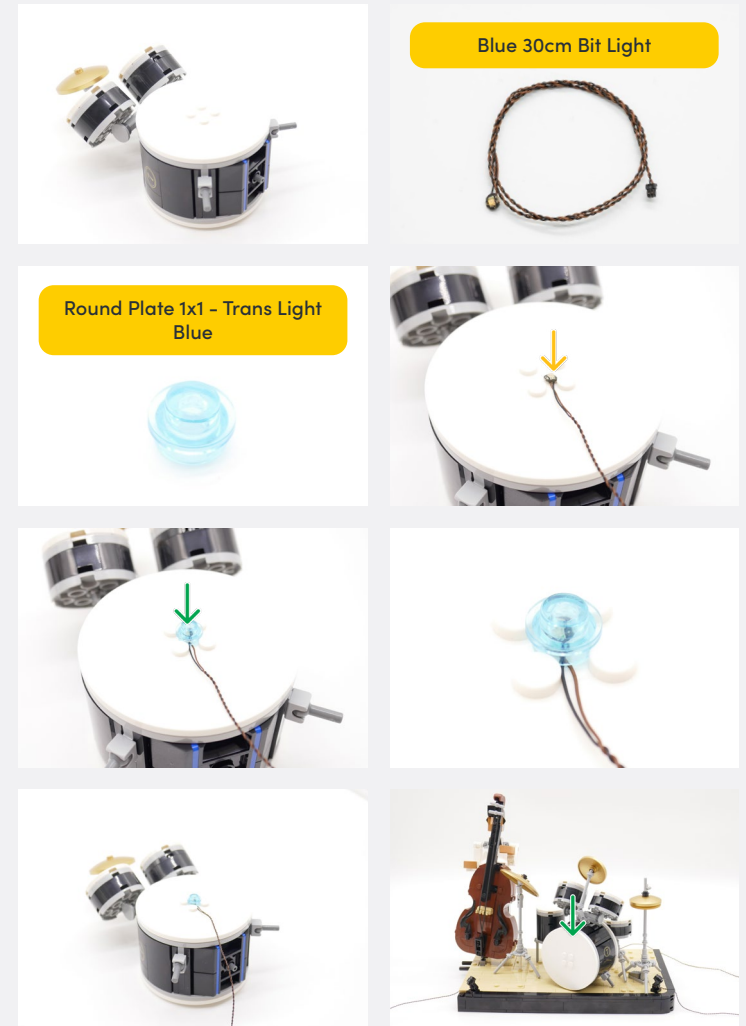

Legend

- DISCONNECT
- CONNECT / RECONNECT
- ↻ TURN / FLIP
- DIRECTIONAL
- ↻↻ TWIST / BRAID
- ✱ POWER ON TEST
- 📝 NOTE ICON

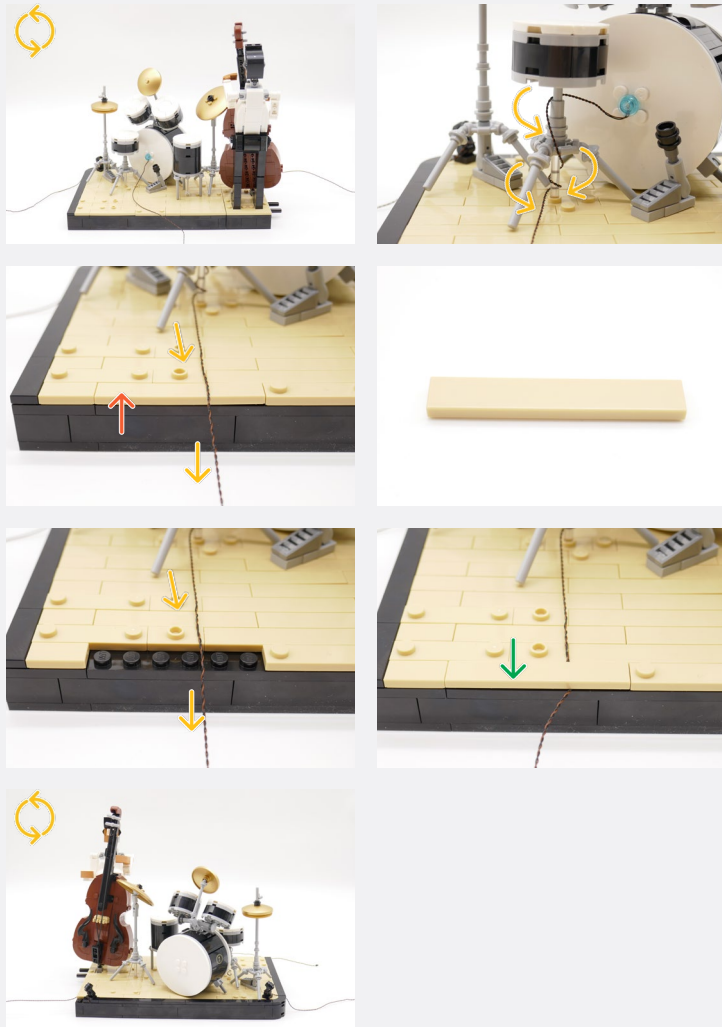

16

Take the Blue 30cm Bit Light cable from the Drum



Plate 2x2 W Rounded Bottom - Trans Clear




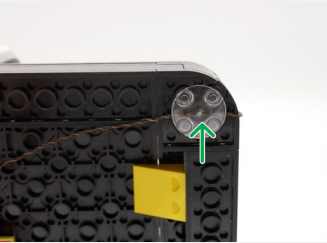








Plate 2x2 W Rounded Bottom - Trans Clear

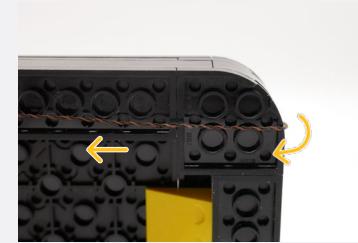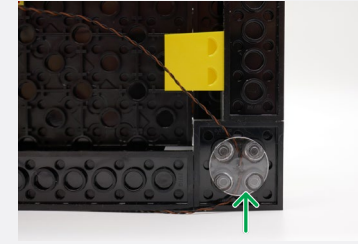

6-Port Expansion Board

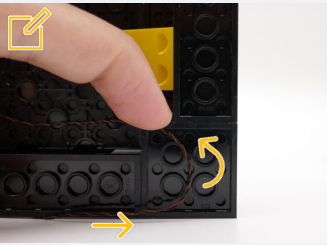




Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ↻ TWIST / BRAID * POWER ON TEST 📝 NOTE ICON

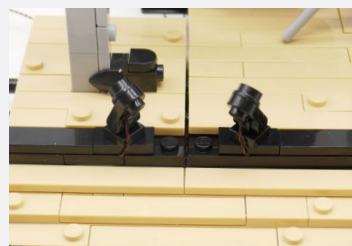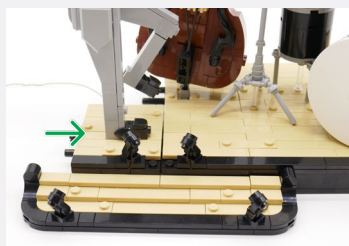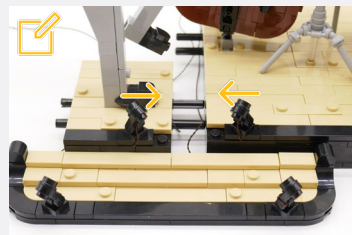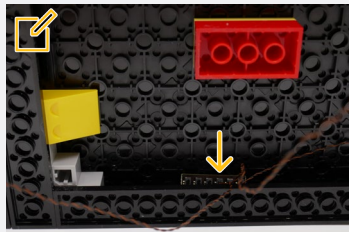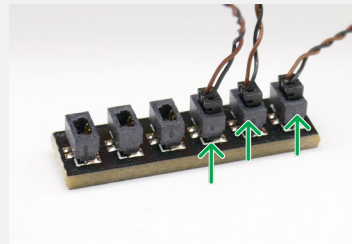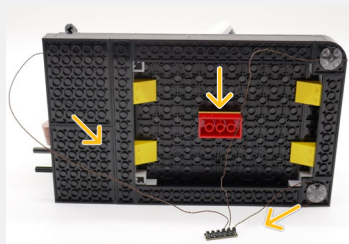

Place the 6-Port Expansion Board in the cavity

17

Ensure all the cables are running beneath the stage when reconnecting the sections

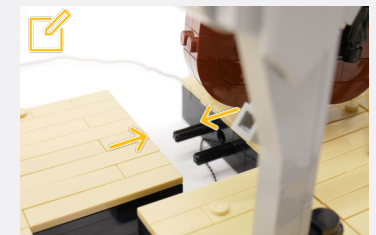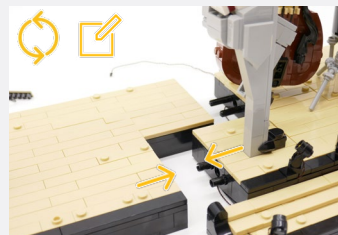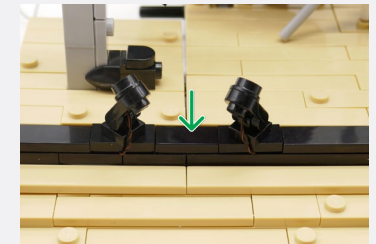

Ensure all the cables are running beneath the stage when reconnecting the sections

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ↻ TWIST / BRAID * POWER ON TEST 📝 NOTE ICON

18



✍️ Connect this singular Bit Light to the Expansion Board on the right side

Plate 2x2 W Rounded Bottom - Trans Clear

Plate 2x2 W Rounded Bottom - Trans Clear








Legend





- DISCONNECT
- CONNECT / RECONNECT
- ↻ TURN / FLIP
- DIRECTIONAL
- ↻ TWIST / BRAID
- ✳️ POWER ON TEST
- ✍️ NOTE ICON

19

30cm Connecting Cable

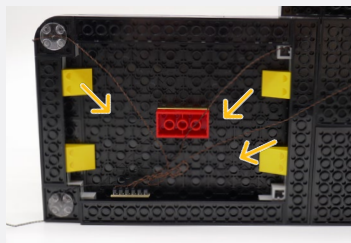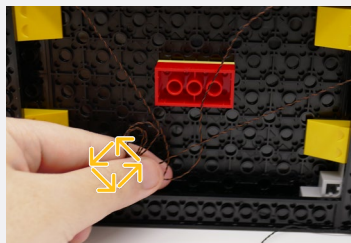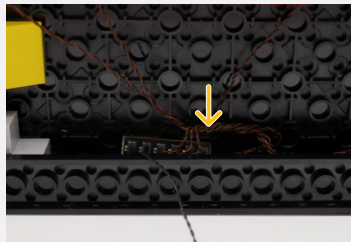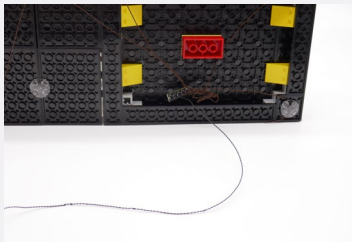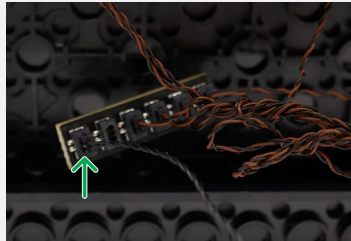

✂ Exclude the 30cm Connecting Cable from the twisting of cables

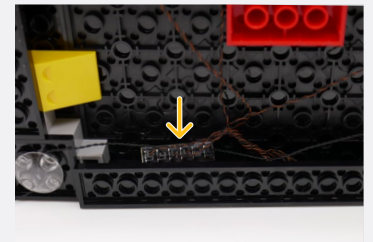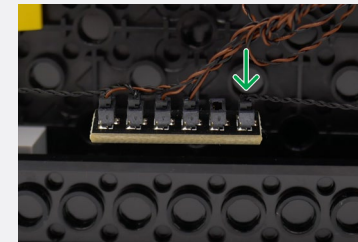
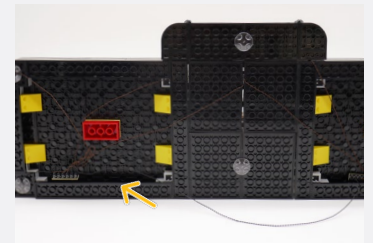
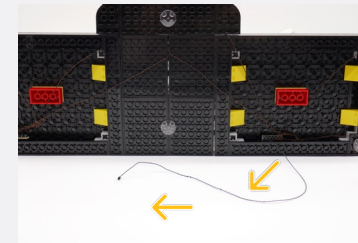


Legend



- DISCONNECT
- CONNECT / RECONNECT
- TURN / FLIP
- DIRECTIONAL
- TWIST / BRAID
- POWER ON TEST
- NOTE ICON

20



✂️ Twist the 30cm Connecting Cable on either side to shorten and tighten the cable

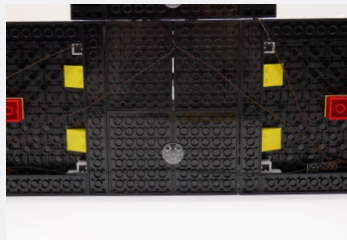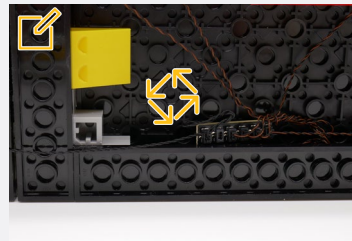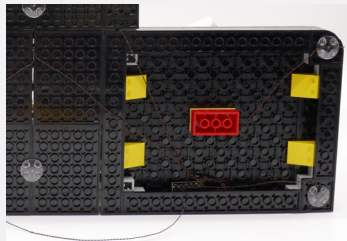

USB Power Cable

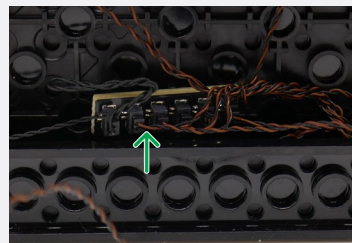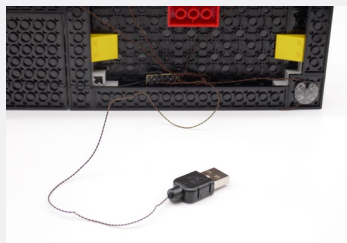



21

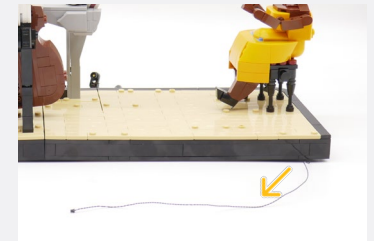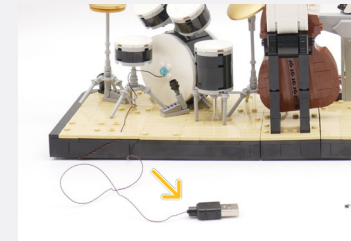

Pink 30cm Bit Light




Black Round Plate 1x1 w/ Open Stud

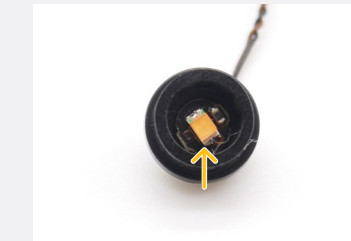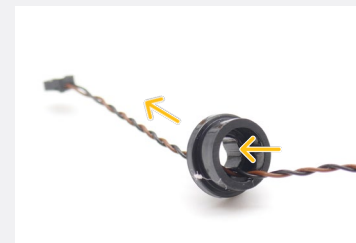


Legend

- DISCONNECT
- CONNECT / RECONNECT
- ↻ TURN / FLIP
- DIRECTIONAL
- ↔ TWIST / BRAID
- ✳️ POWER ON TEST
- 📝 NOTE ICON

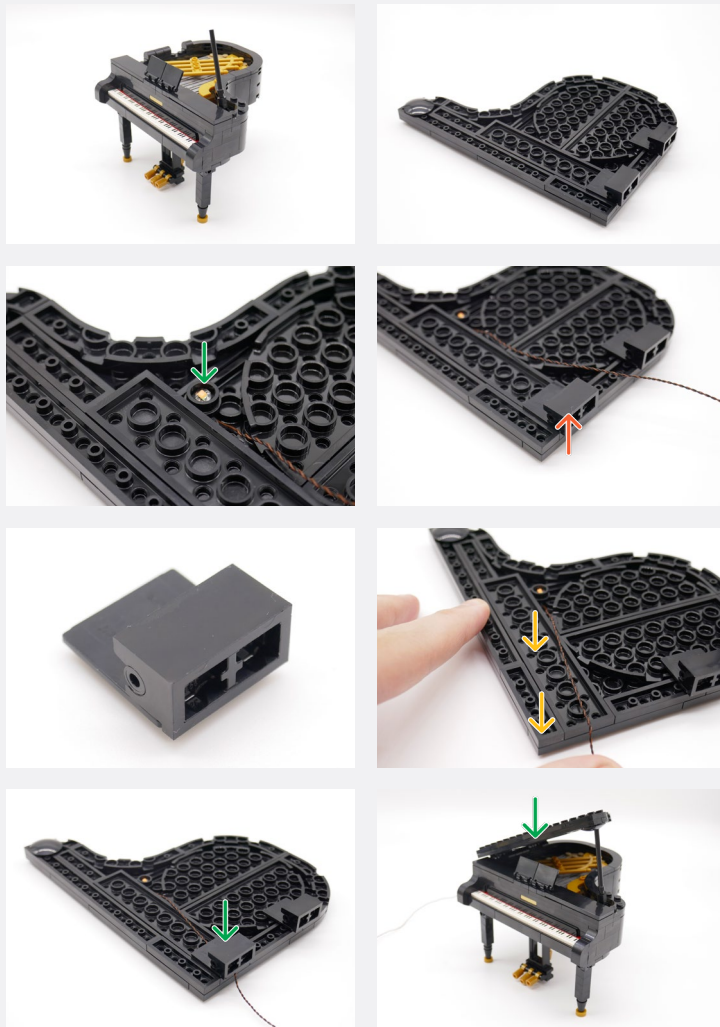


22

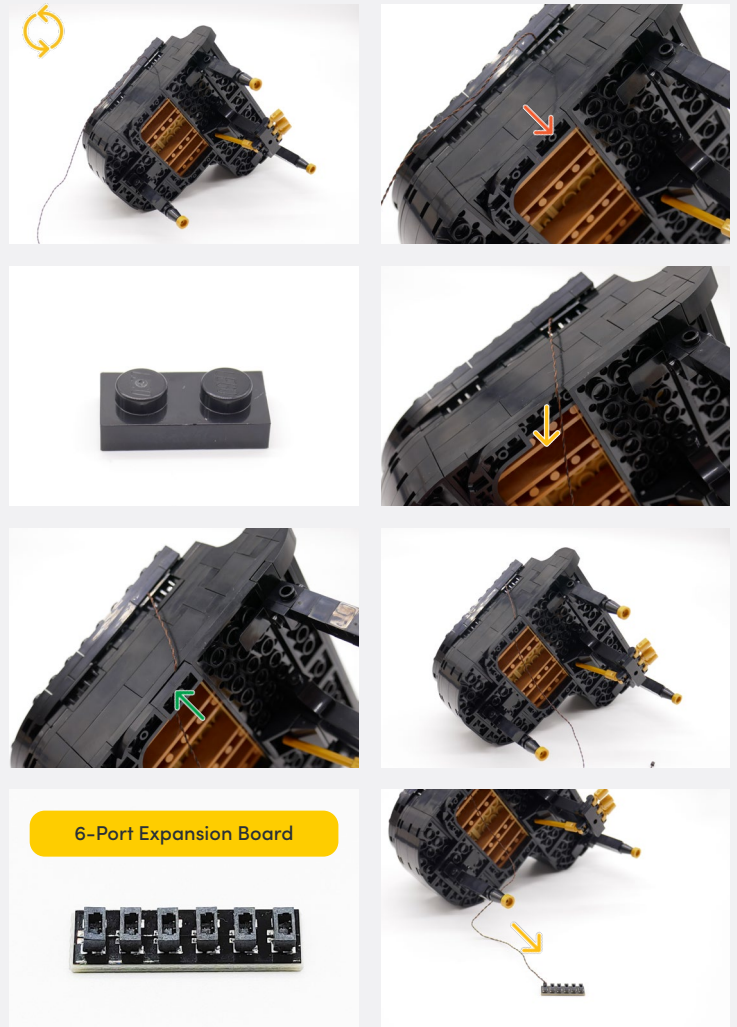


Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ↻ TWIST / BRAID * POWER ON TEST 📝 NOTE ICON



23

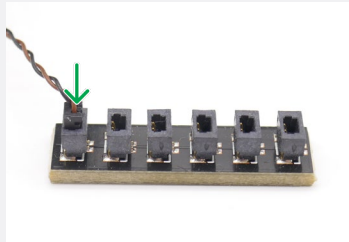


Yellow 30cm Bit Light

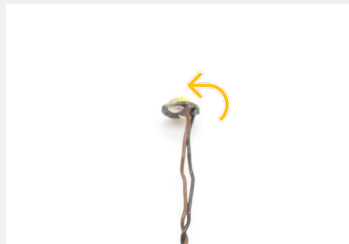

Black Round Plate 1x1 w/ Open Stud

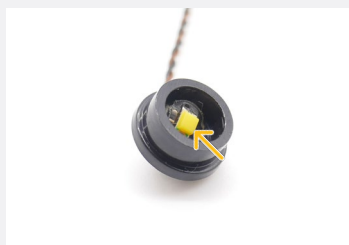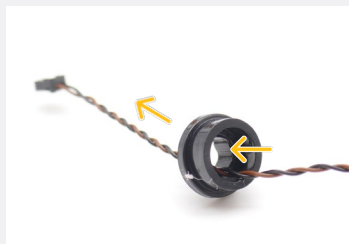

Black 1x1 Plate Modified Plate Rounded w/ Handle

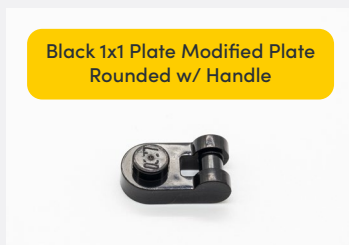

Arm Skeleton, Bent with Clips at 90 degrees - Any Colour

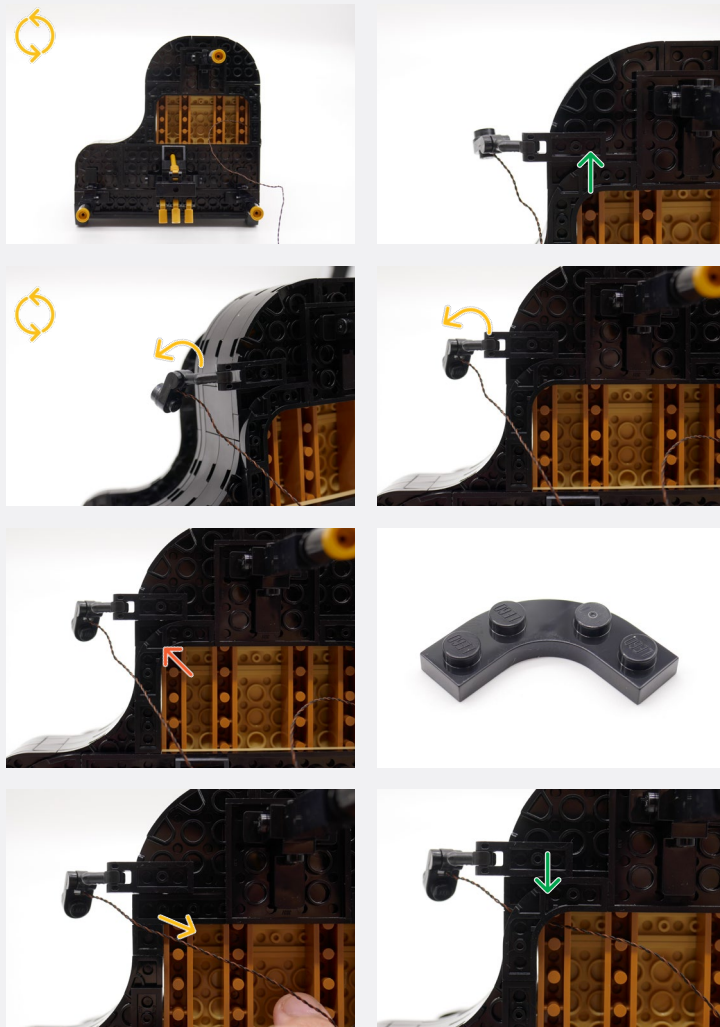


Plate 1x2 MW Handle On End - Black




Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ↺ TWIST / BRAID ✨ POWER ON TEST 📄 NOTE ICON

24



25

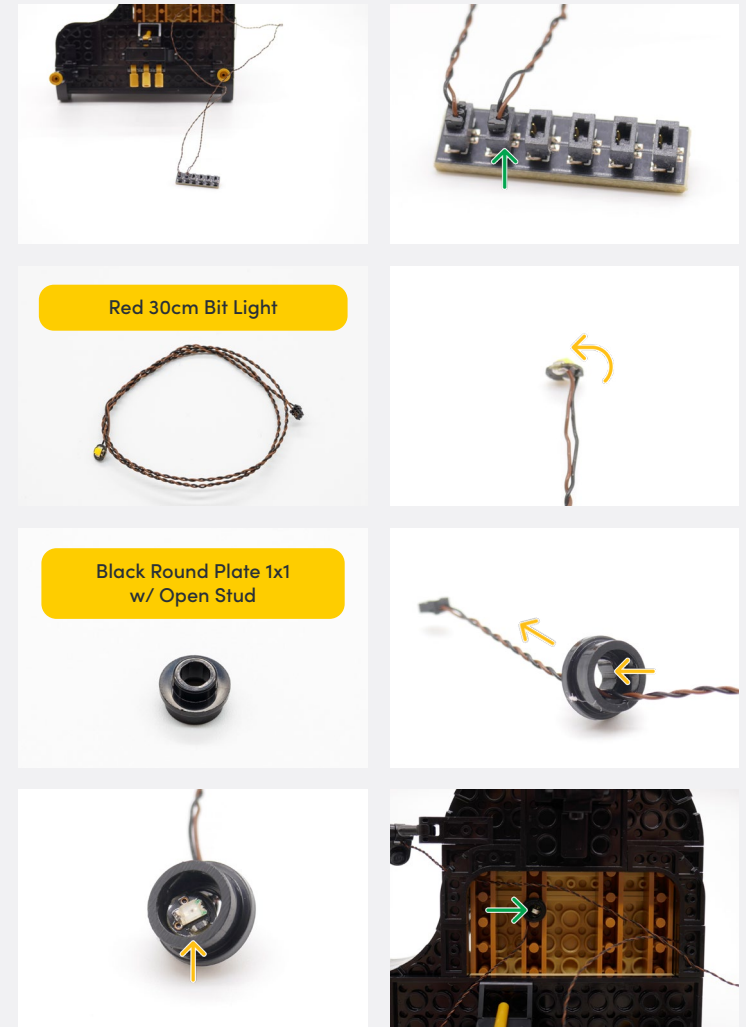

Red 30cm Bit Light




Black Round Plate 1x1 w/ Open Stud




Legend

- DISCONNECT
- CONNECT / RECONNECT
- ↻ TURN / FLIP
- DIRECTIONAL
- ↻↻ TWIST / BRAID
- ✳ POWER ON TEST
- 📝 NOTE ICON



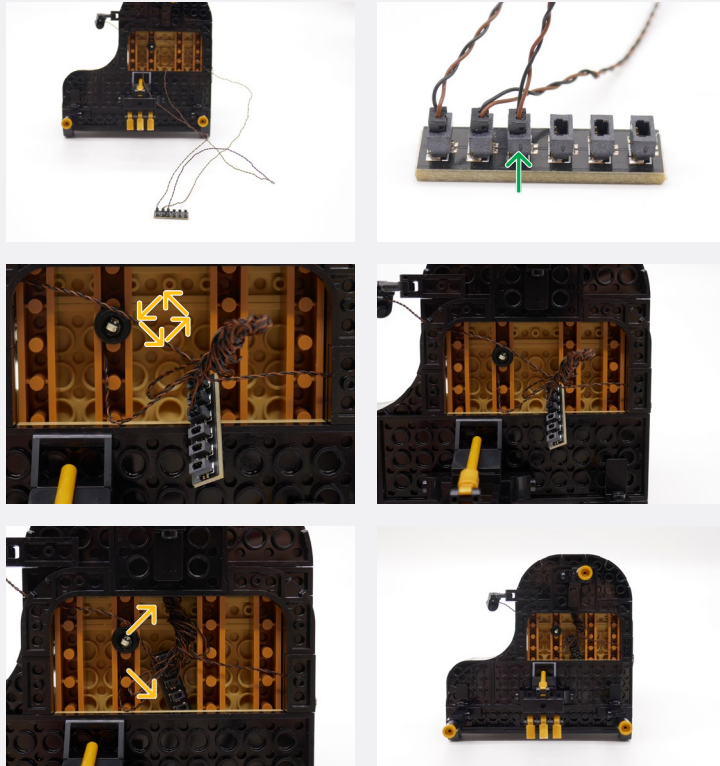


26

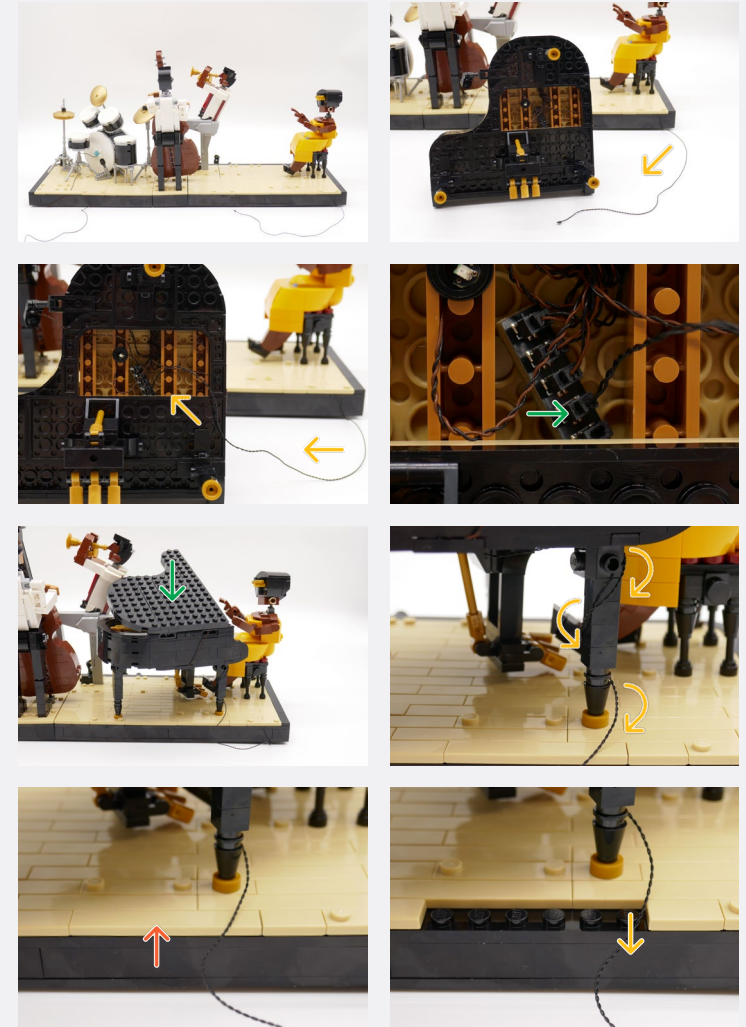

Legend → DISCONNECT → CONNECT / RECONNECT ↻ TURN / FLIP → DIRECTIONAL ↻ TWIST / BRAID * POWER ON TEST 📝 NOTE ICON

If you experience any issues with the lights not working and suspect an issue with a component, please try a different port on the expansion board to verify where the fault lies (with the light or expansion board). To correct any issues with expansion board ports, please view the section addressing expansion board issues in our troubleshooting section.

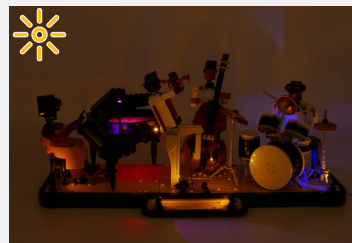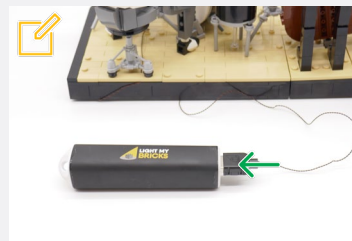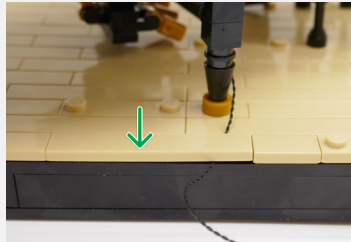

You should have these parts left over that were removed from the LEGO set





Connect the other end to a 5V USB Power Bank, 5V USB Wall Adaptor, or USB to AA Battery Pack (sold separately)

Legend DISCONNECT CONNECT / RECONNECT TURN / FLIP DIRECTIONAL TWIST / BRAID POWER ON TEST NOTE ICON

FINAL PRODUCT

This finally completes installation of the Light My Bricks
LEGO Jazz Quartet 21344 Light Kit.

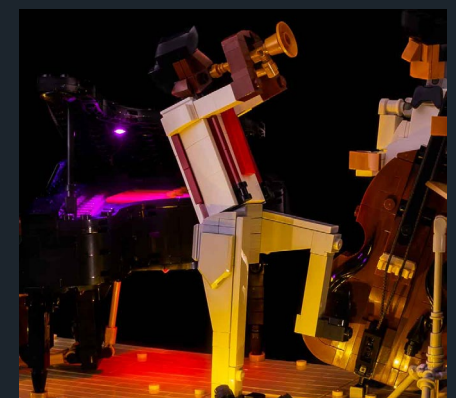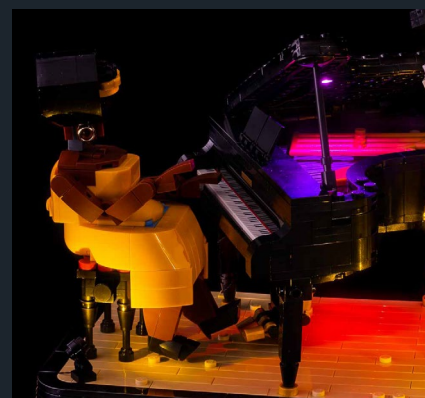



TROUBLESHOOTING

Light My Bricks lighting kits contain individual components that are very small and can be easily damaged if not handled correctly.

To prevent unnecessary damage to components, we highly recommend that the User Guide section, **“Important things to note”** is read carefully. Follow the handling procedures in the User Guide to help prevent faults and damages to your Light My Bricks components.

If you are experiencing issues with your Light My Bricks set, watch our troubleshooting video or read on for a list of common causes to help you troubleshoot.

Troubleshooting

Firstly, ensure that the batteries have power using a battery charge gauge.


If the batteries have no power, replace the batteries.

If the batteries still have power, check to see if the batteries have been inserted correctly into the battery pack.

Check For CR2032 Batteries Using The Flat Battery Pack

Inside the battery pack is a symbol indicating which side the (round) CR2032 battery should be inserted. Check that the “+” side of the battery pack has the battery with the “+” symbol facing downwards.


On the opposite side, the “-” side of the battery pack should have the battery flipped upside down, that is the “+” symbol facing upwards.

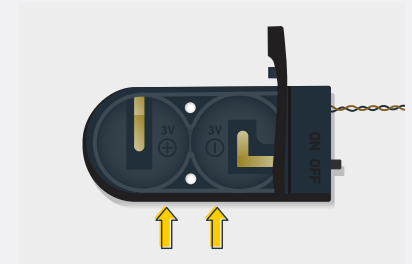

Troubleshooting

Check For Cr2032 Batteries Using The Round Battery Pack



Inside the battery pack is a symbol indicating which side the (round) CR2032 battery should be inserted. In this case, for the stacked battery pack, ensure that BOTH batteries have the “+” symbol facing upwards.

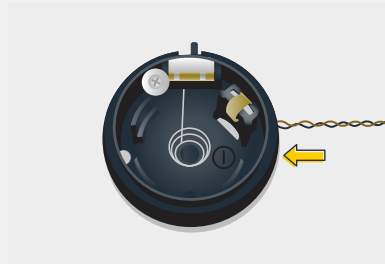

Check for AA batteries using the AA battery pack

Inside the battery pack are symbols indicating which direction the AA battery should be inserted. The flat side of the battery should be paired with the spring side of the battery pack.

If the batteries have been installed correctly and your kit still isn't operating correctly, the next step is to check the wiring.

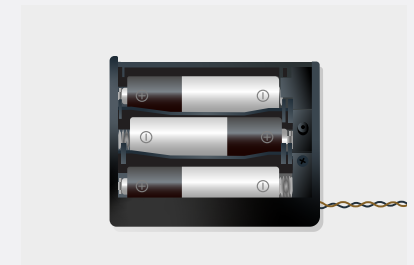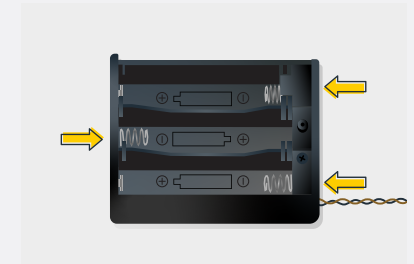

Troubleshooting



Check Your Wires

In order for Light My Bricks components to fit in between and underneath LEGO® bricks, the components need to be very small. Due to this nature, Light My Bricks components can be easily damaged when not handled correctly.

Be careful when removing unpacked components out of the packaging and ensure not to forcibly pull at the wires as this can damage the soldering that attach the wires to the LEDs.

If the wiring is detached from the LED itself, the light will not operate.

When connecting lights to your LEGO set, check that there are no pinched wires underneath or in between bricks and plates. When the wires are pinched and the exposed wires are touching each other, this can cause a crosswire and the lights to not function correctly.

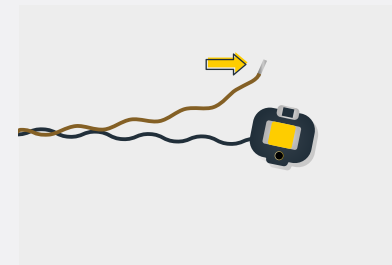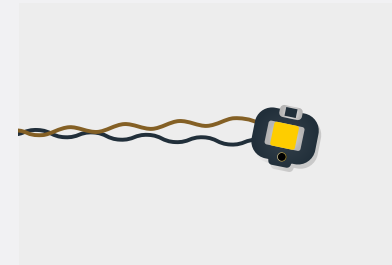


Troubleshooting

Check Your Expansion Board Ports/ Strip Light Ports / Effects Board Ports

It is important to note that connectors can only be inserted to the expansion board, strip light, or effects board ports in one direction.

Forcibly inserting connectors in the incorrect direction will result in damaging the pins inside each of the ports on your component board.




Not only will a light connected to the damaged port not work, but if the pins inside the port are bent to a point they are touching each other, this can result in all other lights in the system to stop working. This is a short circuit.

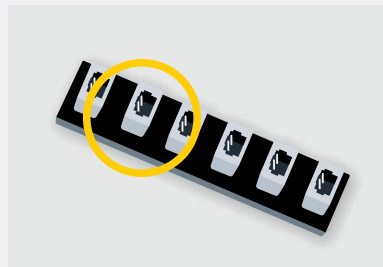

A short circuit can also result in overheating of the board, cable or batteries. If you suspect a short circuit, **DISCONNECT POWER IMMEDIATELY**. Batteries can fail, catch fire, or even explode if left connected to a short circuit for too long.

If you suspect you have a faulty component due to a bent pin, try the following steps:

If you look carefully inside each of the ports, each port contains 2 small pins that should be straight. You will be able to identify a faulty port if it has any bent pins.

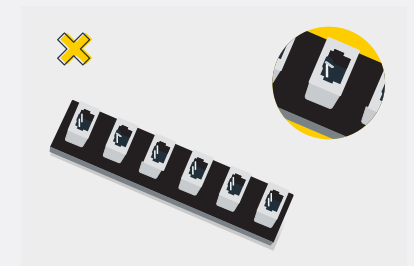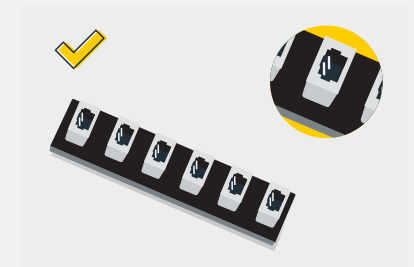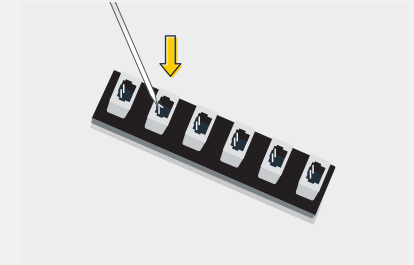



CONTACT US

If you have an enquiry regarding the online shop, our products or a general enquiry please refer to our Frequently Asked Questions webpage.

Alternatively, you can contact our Customer Services team by visiting our online support portal.

support.lightmybricks.com

We thank you for purchasing this product and hope you enjoy!



lightmybricks.com