

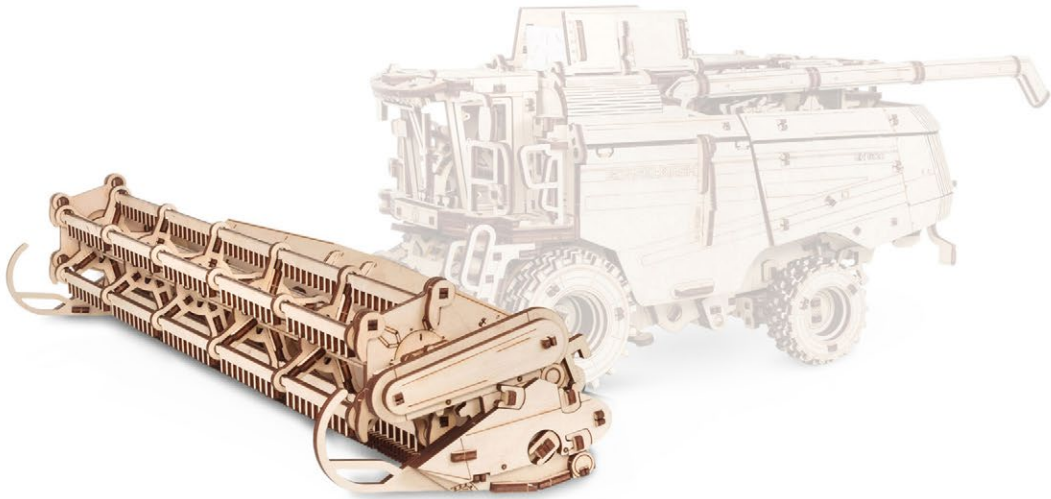



Assembly Instruction

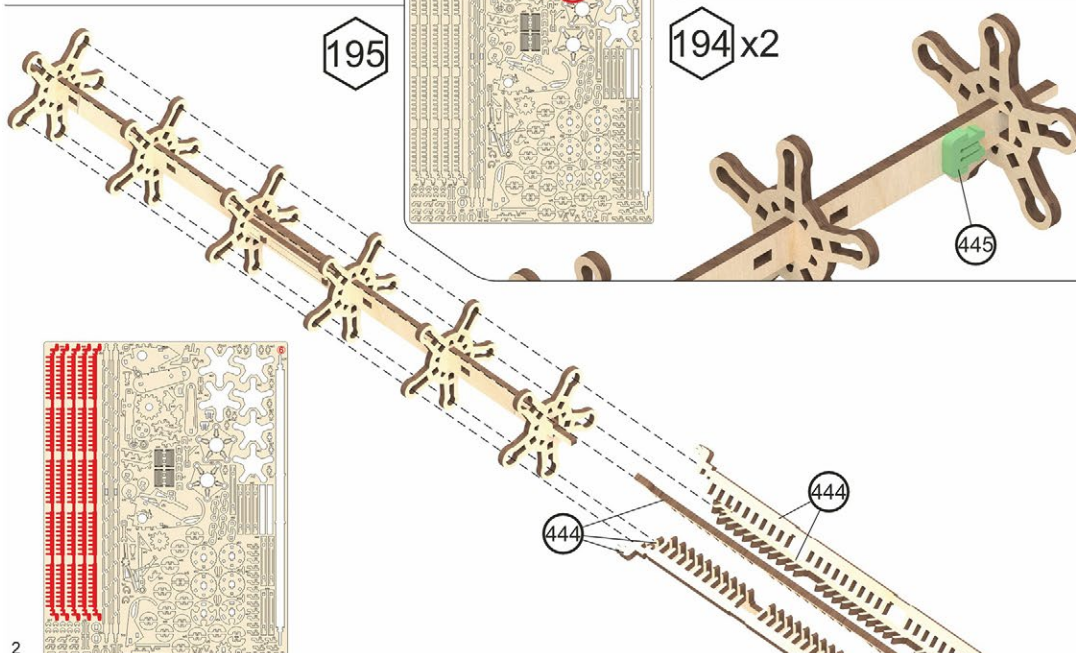



GRAIN HEADER BARST 920

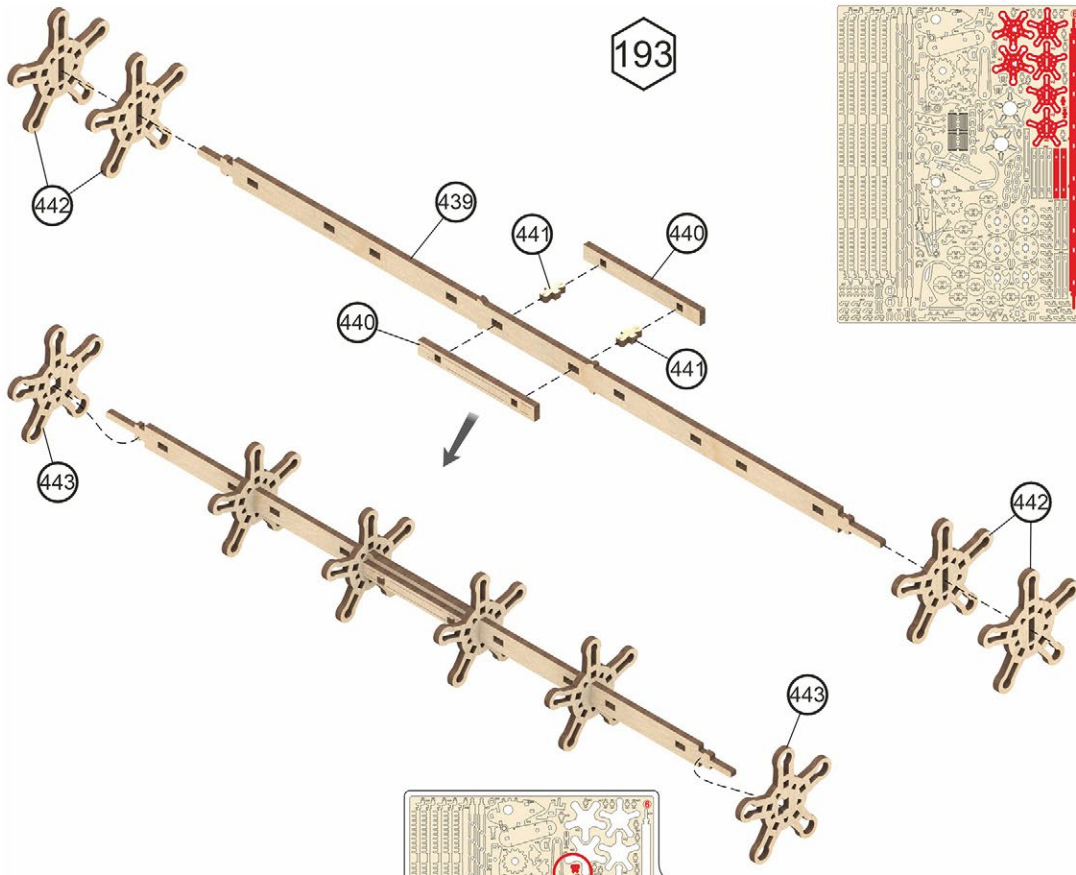


196

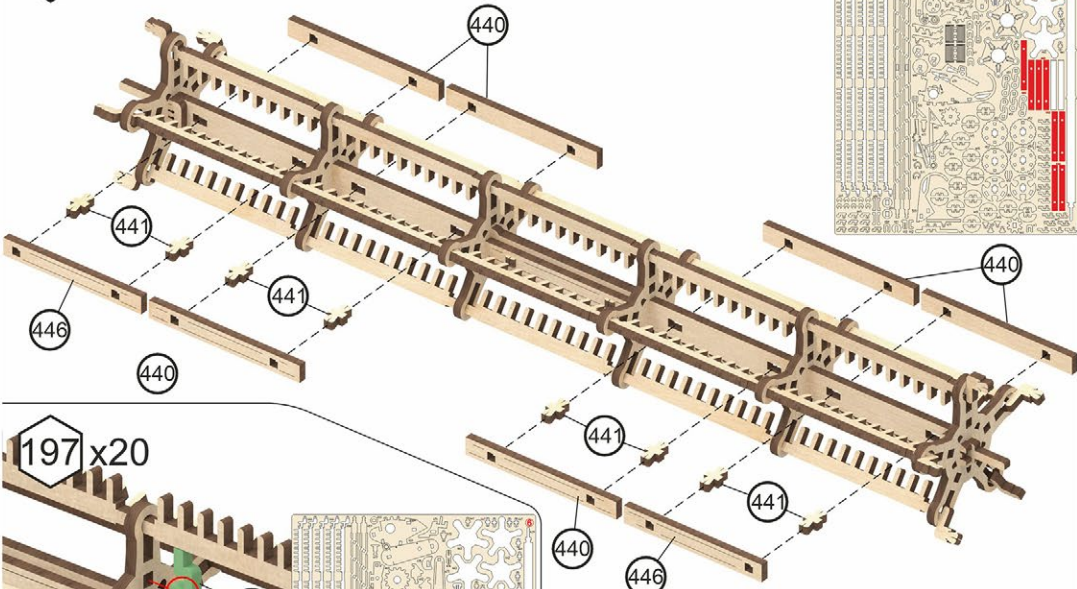


197 x20


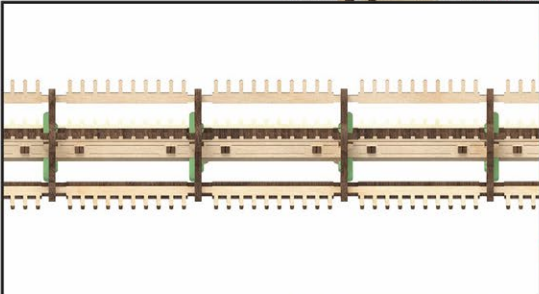
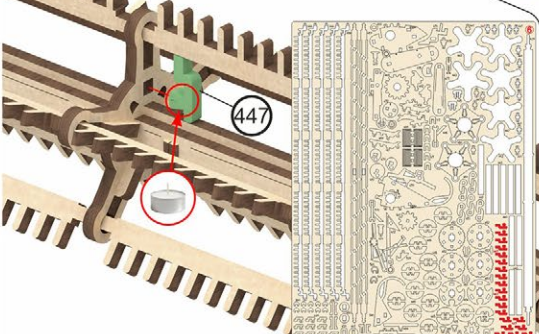


198 x10


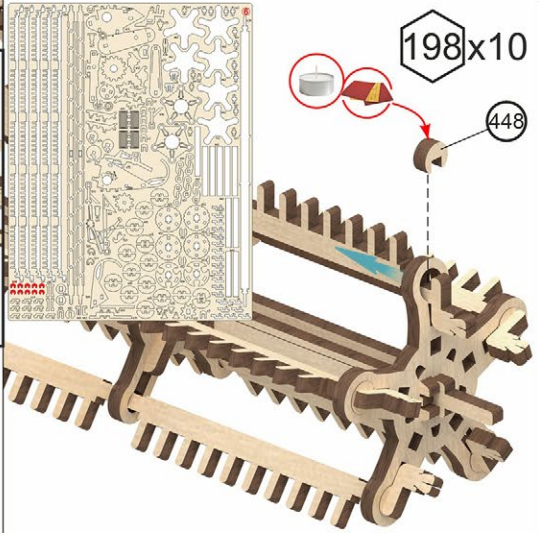


x10


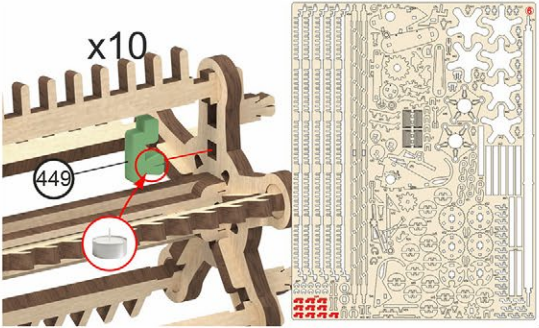


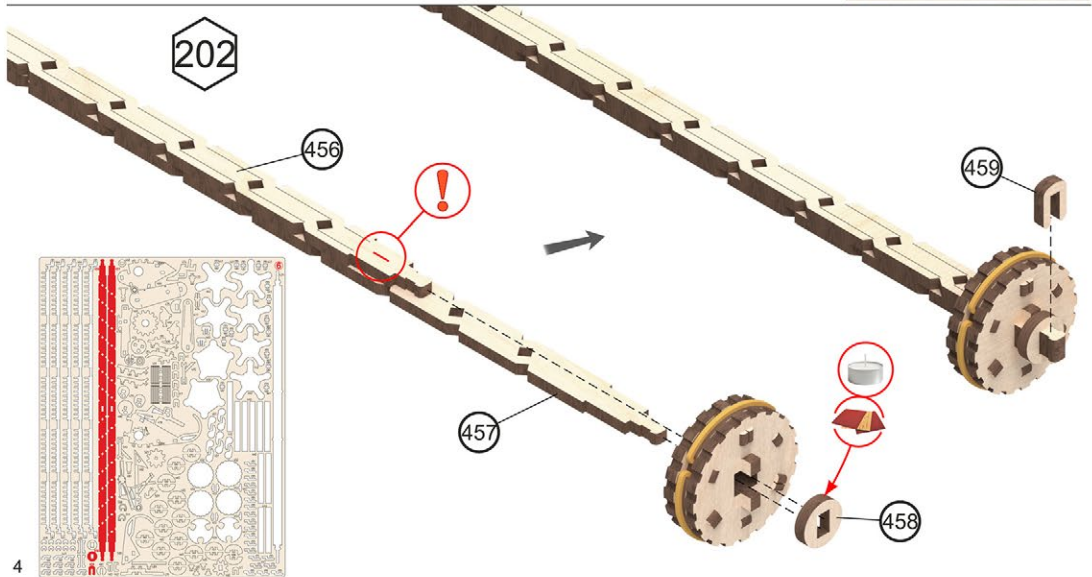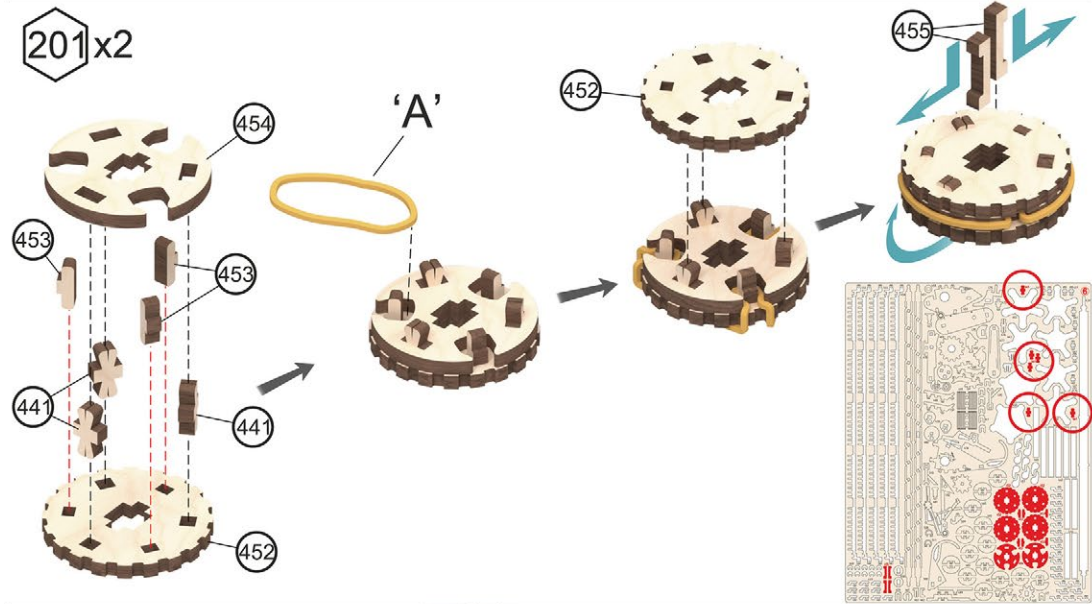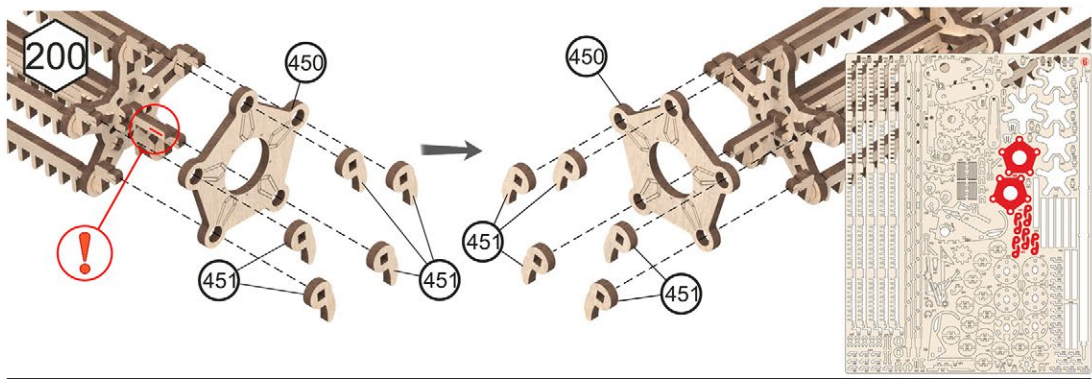



203

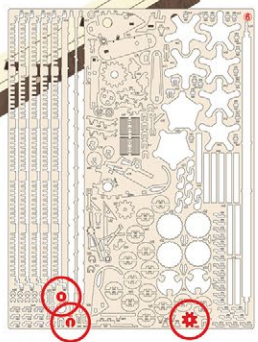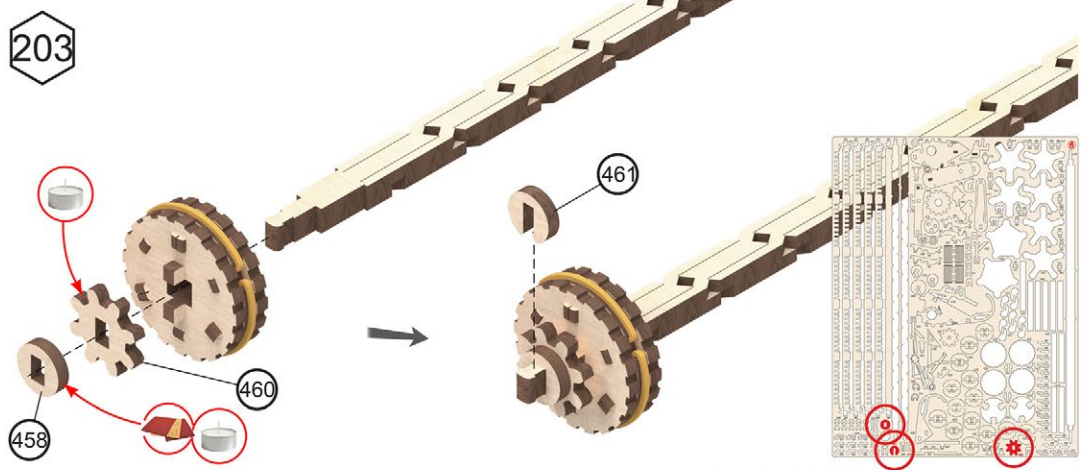



204

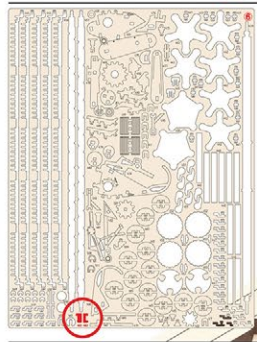
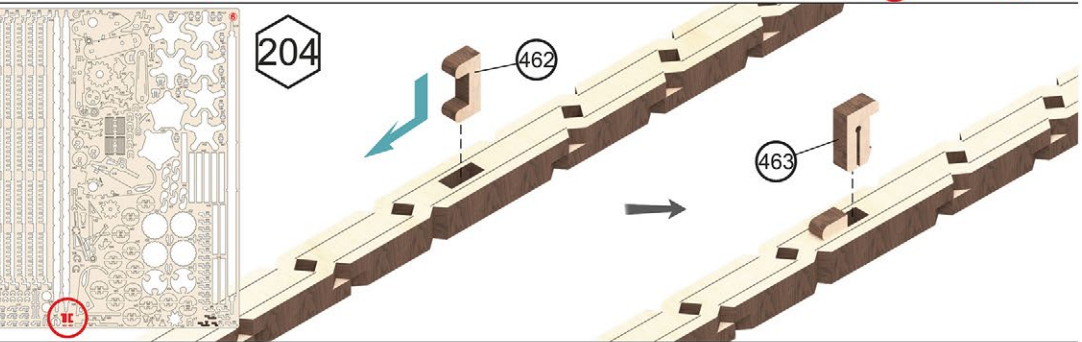


205

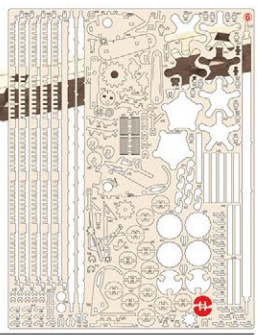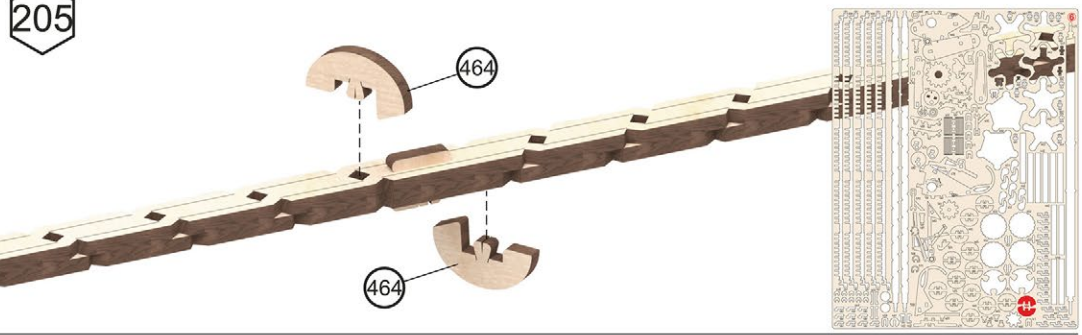


206x26

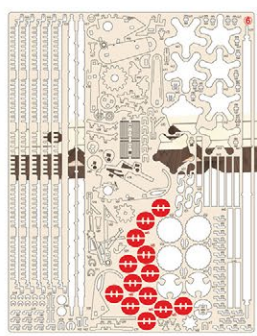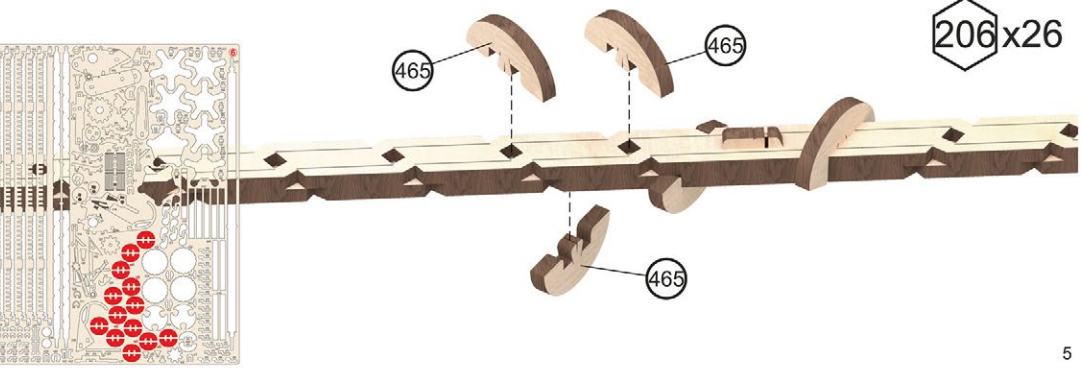


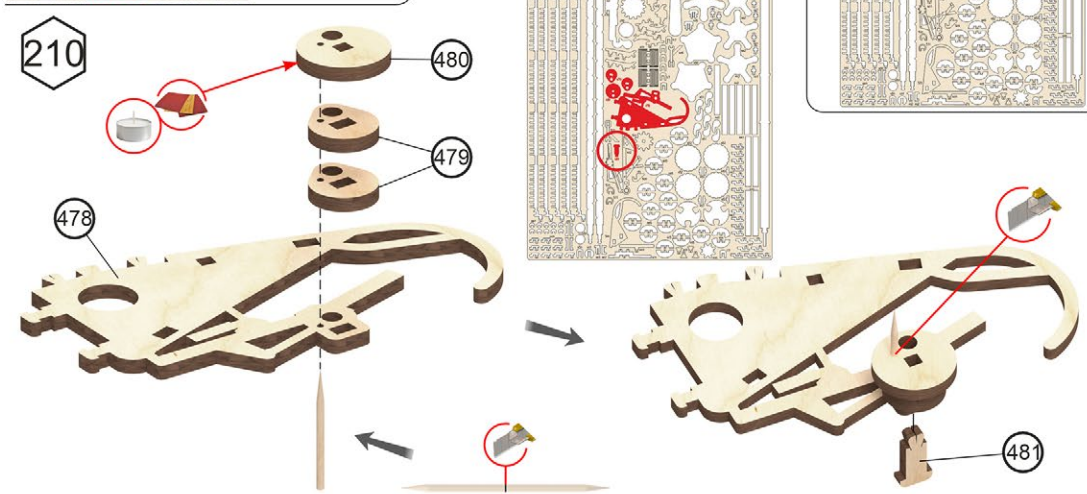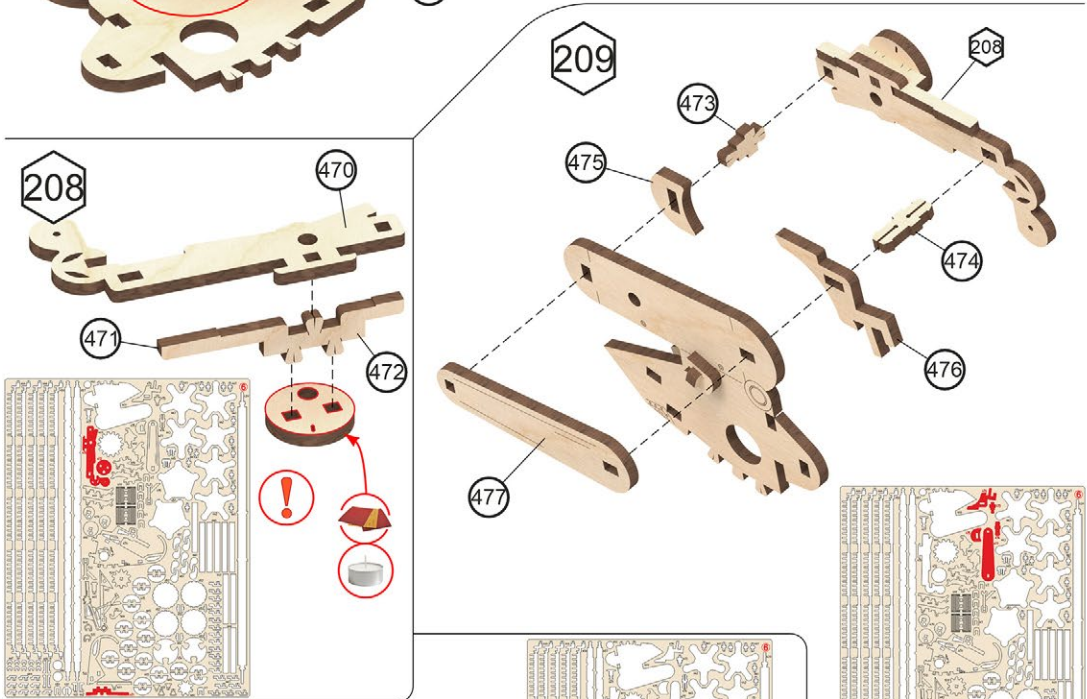






211



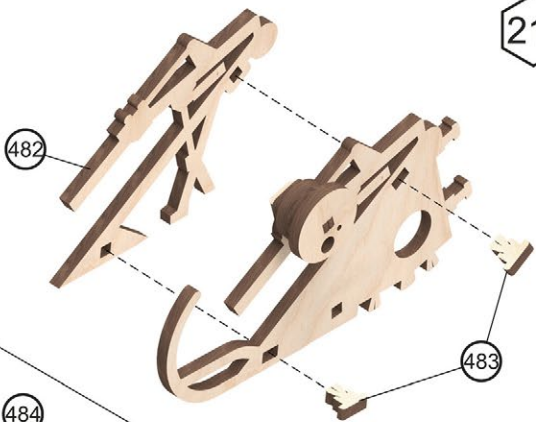


212

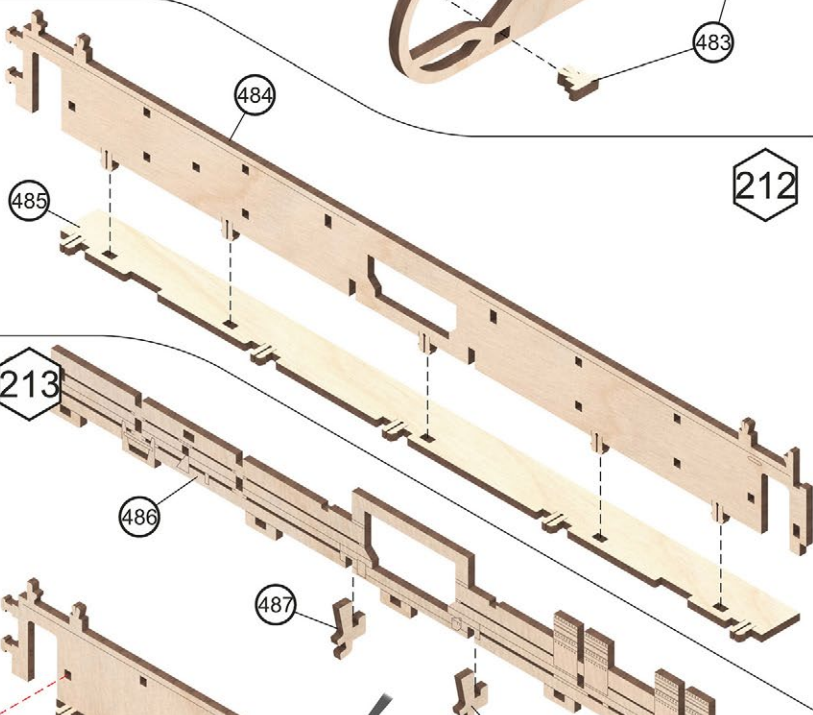


213

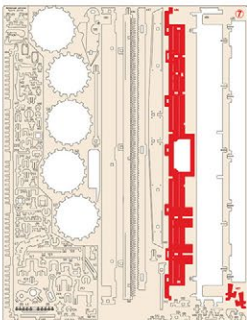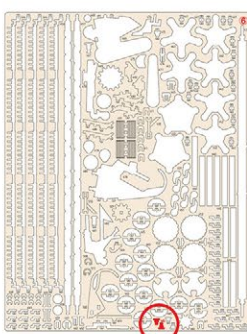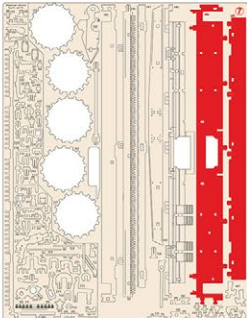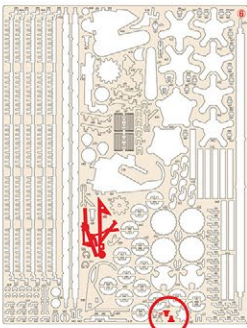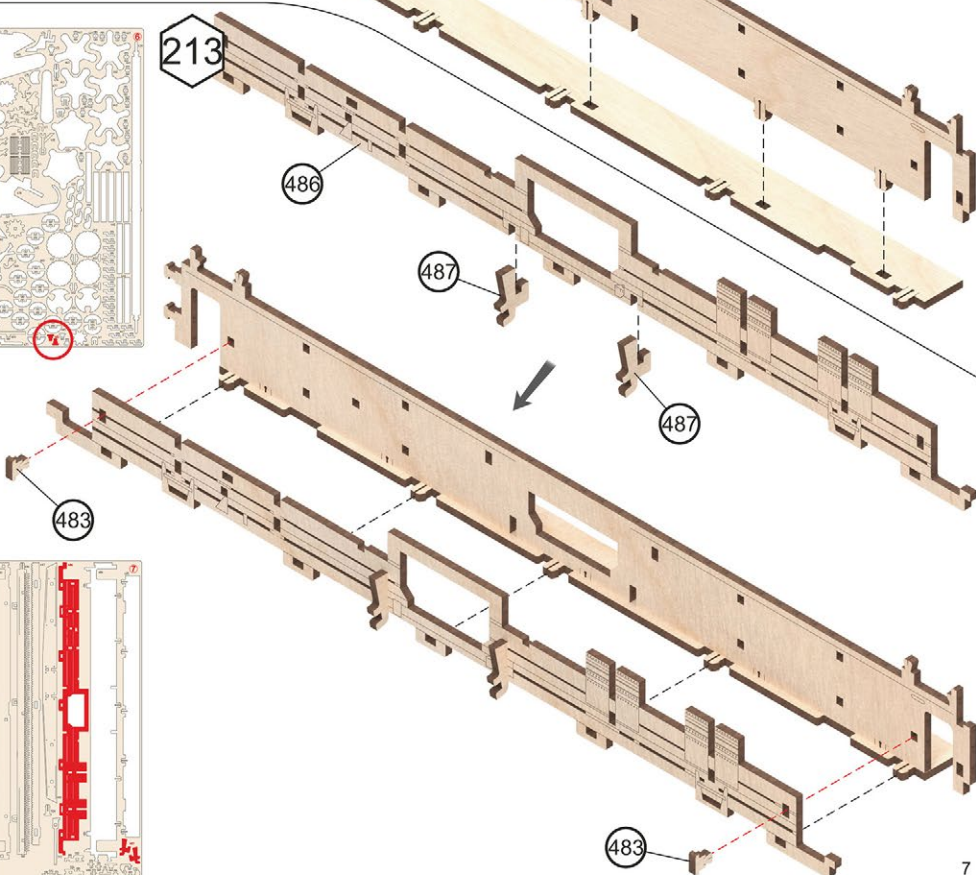


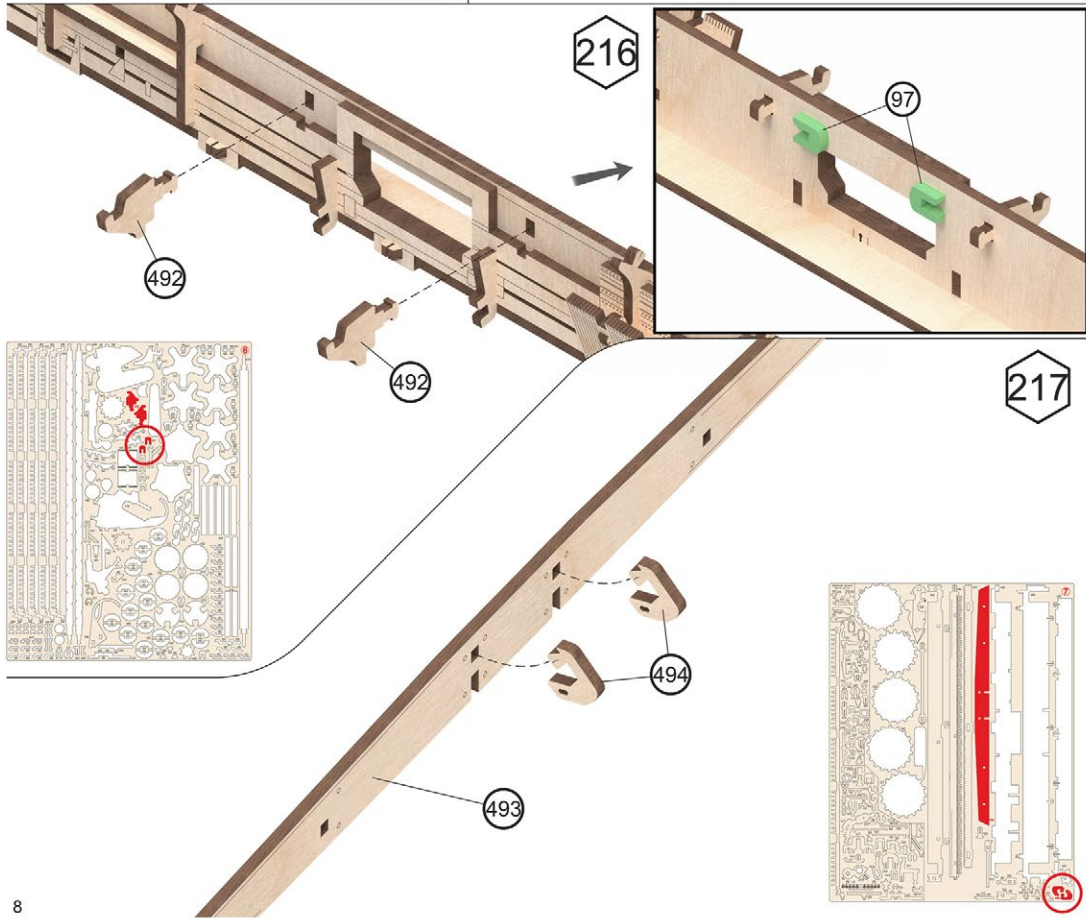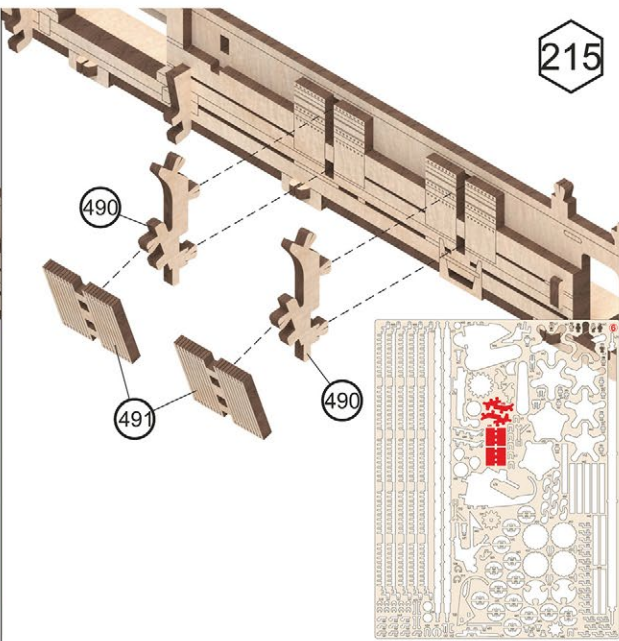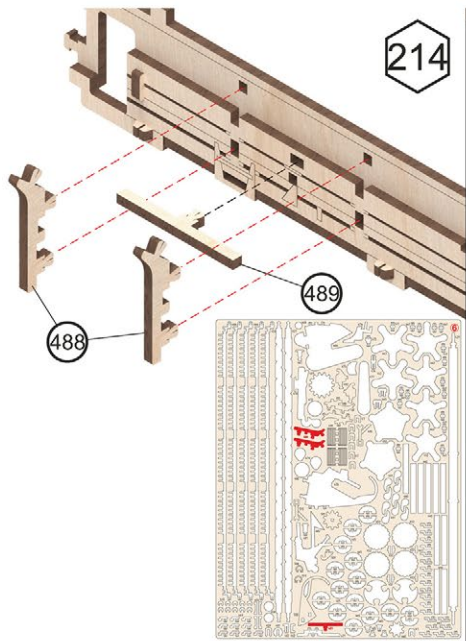


218

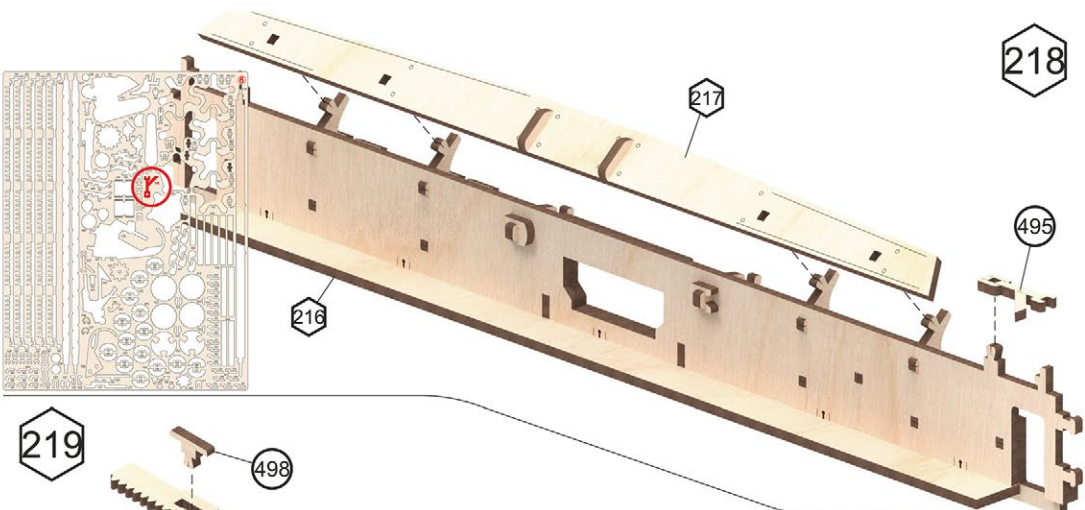


219


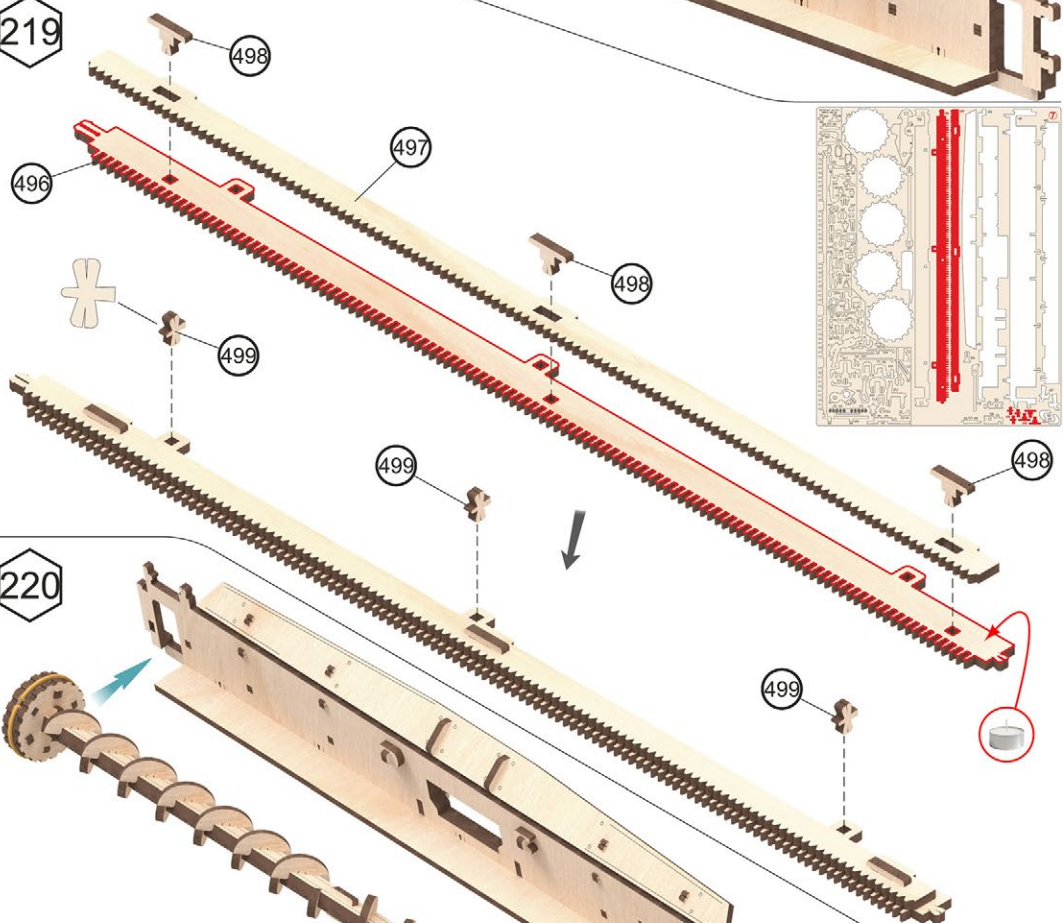


220

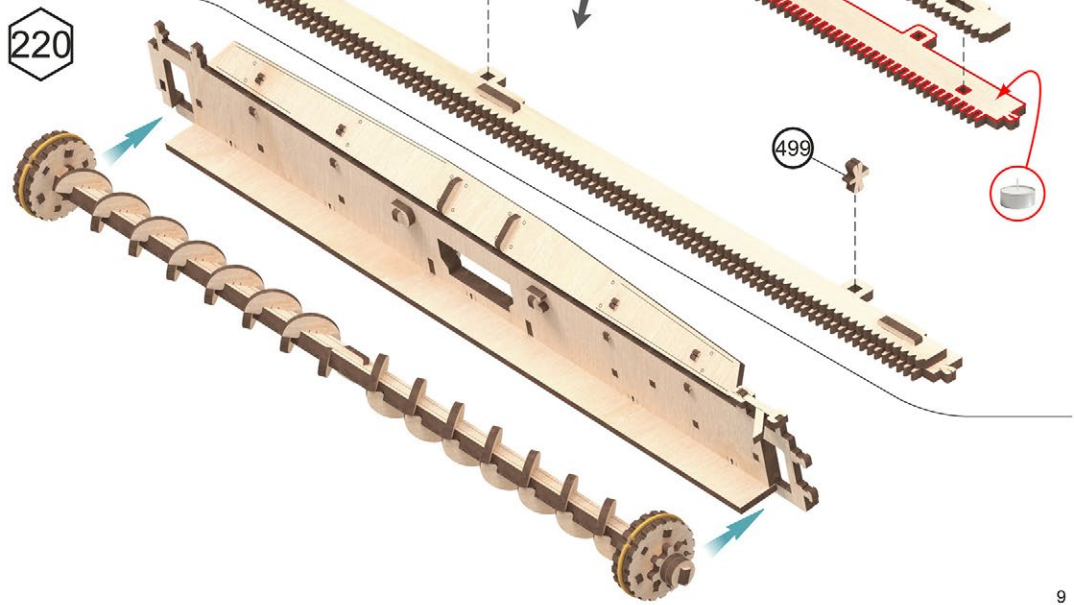

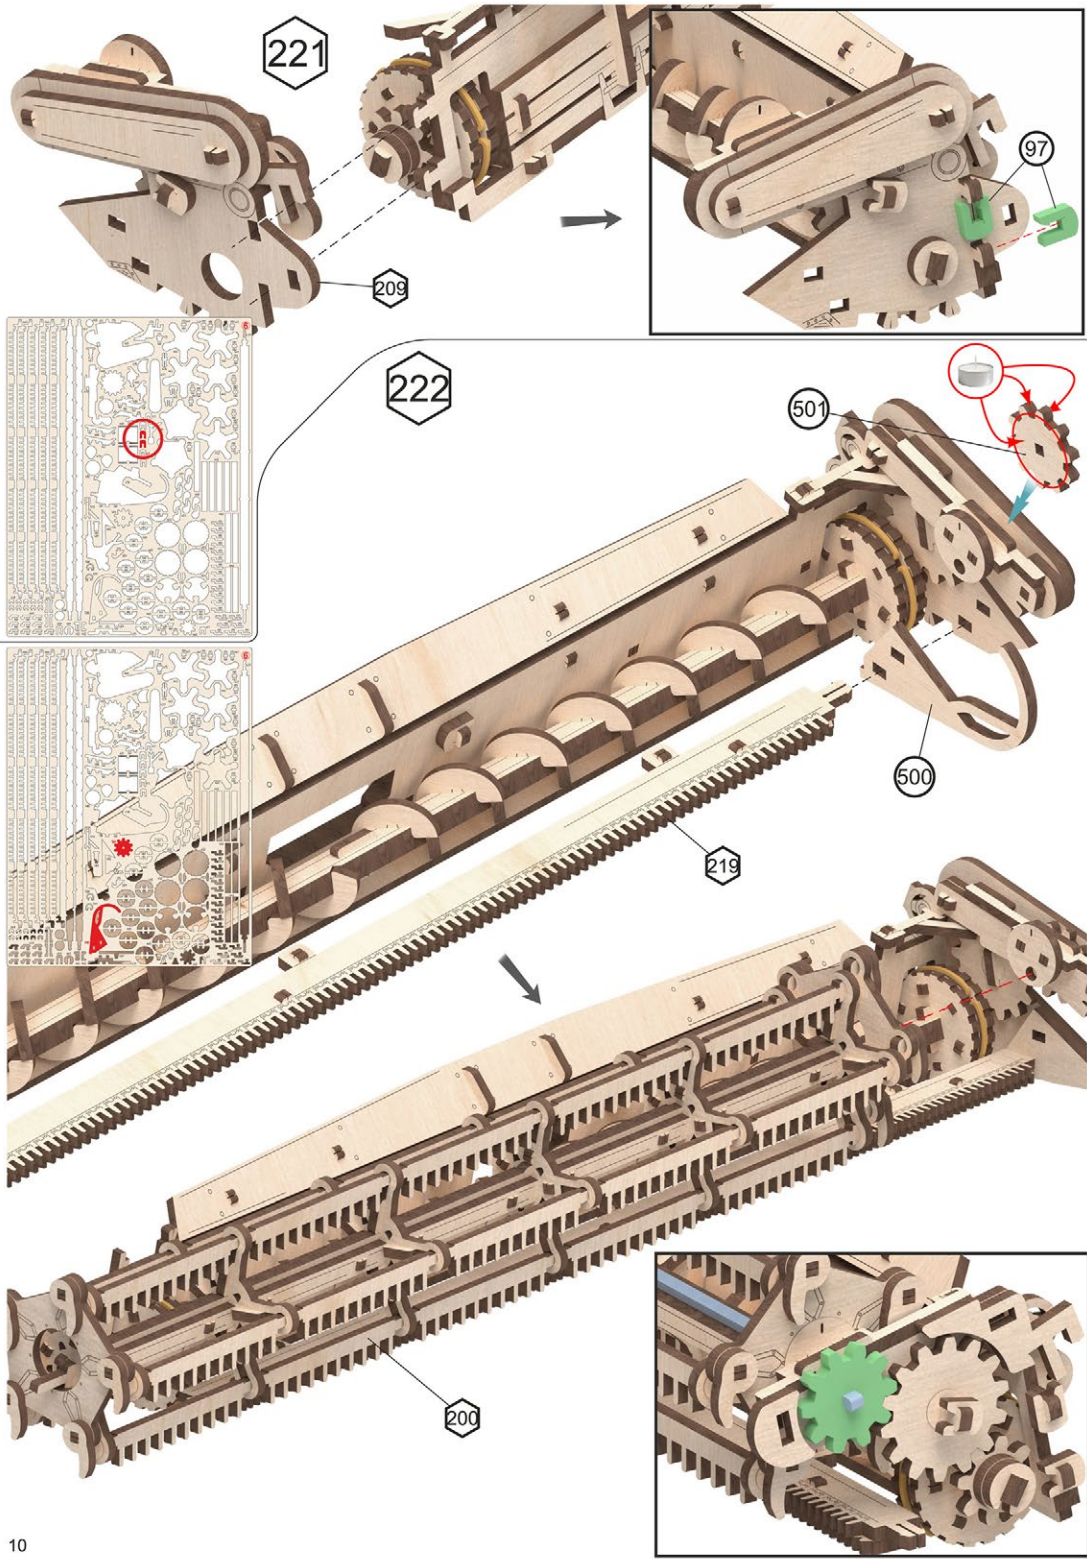

223

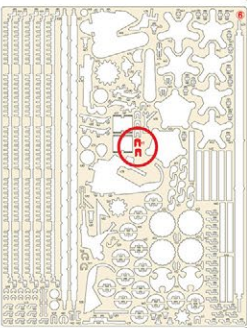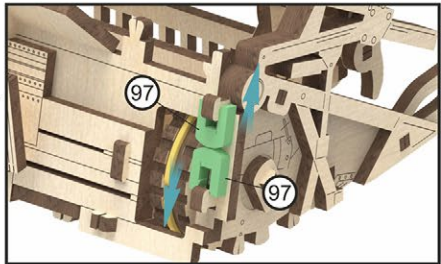



211

504


224

502

503

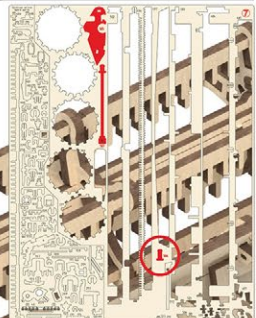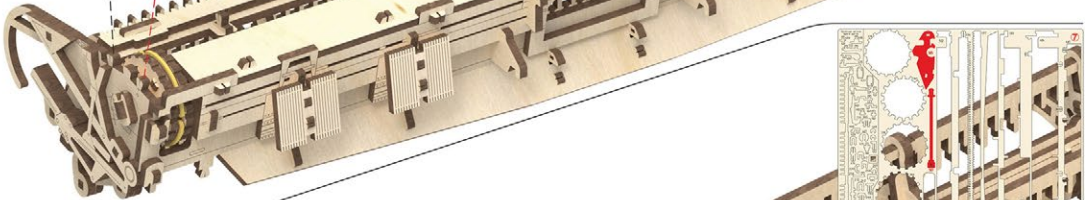

225

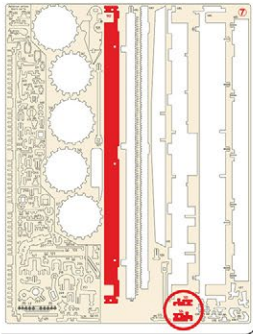

505

507

506

